




1

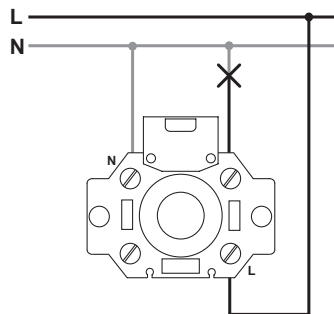

2

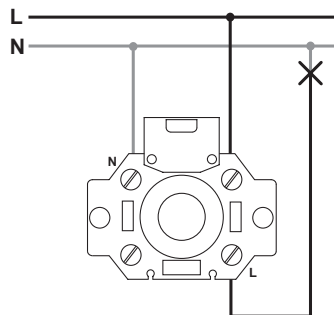

3

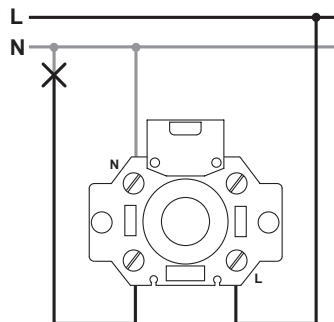

Informationen für Elektrofachkräfte

Elektrischer Anschluss



GEFAHR!

Elektrischer Schlag bei Berühren spannungsführender Teile.

Elektrischer Schlag kann zum Tod führen.

Vor Arbeiten am Gerät Anschlussleitungen freischalten und spannungsführende Teile in der Umgebung abdecken!

Gerät anschließen (Bild 1-3)

- 1 Ausschaltung Kontroll (leuchtet bei EIN)
 - 2 Ausschaltung Dauerbeleuchtet
 - 3 Ausschaltung Beleuchtet (leuchtet bei Aus)
- Gerät entsprechend gewünschter Beleuchtungsart nach Schaltbild (1-3) anschließen.

Gewährleistung

Technische und formale Änderungen am Produkt, soweit sie dem technischen Fortschritt dienen, behalten wir uns vor.

Wir leisten Gewähr im Rahmen der gesetzlichen Bestimmungen.

Im Gewährleistungsfall bitte an die Verkaufsstelle wenden oder das Gerät portofrei mit Fehlerbeschreibung an unser Service-Center senden.

Berker GmbH & Co. KG

Service Center
Hubertusstraße 17
D-57482 Wenden-Ottfingen
Telefon: 0 23 55 / 90 5-0
Telefax: 0 23 55 / 90 5-111

Installationsanleitung

Installation instructions

B.
Berker

Kontroll-Drehschalter AP Rotary control switch

Best.-Nr./Order-No. 3146



Berker GmbH & Co. KG
Klagebach 38
58579 Schalksmühle/Germany
Telefon: +49 (0) 23 55/90 5-0
Telefax: +49 (0) 23 55/90 5-111
www.berker.com

B.
Berker

Information for electricians

Electrical connection



Danger!

Touching live parts can result in an electric shock.

An electric shock can lead to death.

Disconnect the connecting cables before working on the device and cover all live parts in the area!

Circuiting the device (figure 1-3)

- 1 Switch-off monitoring (lit when ON)
 - 2 Switch-off permanently lit
 - 3 Switch-off illuminated (lit when OFF)
- Circuit the device according to the circuiting diagram (1-3) as the desired kind of illumination.

Warranty

We reserve the right to make technical and formal changes to the product in the interest of technical progress.

Our products are under guarantee within the scope of the statutory provisions.

If you have a warranty claim, please contact the point of sale or ship the device postage free with a description of the fault to the appropriate regional representative.

