











- ▲ Manufacturers
- ▲ Berker
 - ▲ Outputs
 - 4-outputs modules
 - 6-outputs modules
 - 8-outputs modules
 - 10-outputs modules

Application software

4-fold, 6-fold, 8-fold and 10-fold switch actuator
Electrical / Mechanical characteristics: see product user manual

	Product reference	Product designation	Application software ref.	TP device  Radio device 
	7531 41 13	4-fold switch actuator 4A 230V AC	S75314113-4-5-6 Version 1.x	
	7531 41 14	4-fold switch actuator 10A 230V AC		
	7531 41 15	4-fold switch actuator 16A 230V AC		
	7531 41 16	4-fold switch actuator 16A C- load 230V AC		
	7531 61 02	6-fold switch actuator 4A 230V AC	S75316102-3-4-5 Version 1.x	
	7531 61 03	6-fold switch actuator 10A 230V AC		
	7531 61 04	6-fold switch actuator 16A 230V AC		
	7531 61 05	6-fold switch actuator 16A C- load 230V AC		
	7531 81 02	8-fold switch actuator 4A 230V AC	S75318102-3-4-5 Version 1.x	
	7531 81 03	8-fold switch actuator 10A 230V AC		
	7531 81 04	8-fold switch actuator 16A 230V AC		
	7531 81 05	8-fold switch actuator 16A C- load 230V AC		
	7531 90 00	10-fold switch actuator 4A 230V AC	S75319000-1-2-3 Version 1.x	
	7531 90 01	10-fold switch actuator 10A 230V AC		
	7531 90 02	10-fold switch actuator 16A 230V AC		
	7531 90 03	10-fold switch actuator 16A C-load 230V AC		

CONTENTS

1	GENERAL	4
1.1	ABOUT THIS GUIDE.....	4
1.2	ABOUT THE PROGRAM.....	4
1.2.1	ETS compatibility.....	4
1.2.2	Application descriptions.....	4
2	GENERAL DESCRIPTION	5
2.1	INSTALLATION OF THE DEVICE.....	5
2.1.1	Overview presentation.....	5
2.1.2	Connection.....	6
2.1.3	Physical addressing.....	8
2.2	FUNCTION MODULES OF THE APPLICATION.....	9
2.2.1	ON/OFF.....	9
2.2.2	Shutter-blind:.....	12
3	PARAMETER	15
3.1	CLOSING TYPE FOR THE OUTPUTS.....	15
3.2	DEFINITION OF THE GENERAL PARAMETERS.....	16
3.2.1	Manual mode: ON/OFF.....	17
3.2.2	Activation of the Status indication: ON/OFF.....	17
3.2.3	Activation of the logic blocks: ON/OFF.....	17
3.2.4	Super alarm: Shutter.....	18
3.2.5	Manual mode: Shutter.....	18
3.2.6	Activation of the Status indication: Shutter.....	18
3.2.7	Activation of the logic blocks: Shutter.....	19
3.2.8	Activation of the Device diagnosis objects.....	19
3.2.10	Overwrite parameters on download.....	21
3.2.11	Status during bus power cut and/or download: ON/OFF.....	21
3.2.12	LED display.....	22
3.2.13	Status during bus power cut and/or download: Shutter.....	22
3.3	SUPER ALARM SHUTTER.....	24
3.3.1	Activation duration and position.....	24
3.3.2	Super alarm status indication.....	26
3.3.3	Alarm monitoring period for super alarm.....	27
3.3.4	Position after super alarm.....	27
3.4	MANUAL MODE.....	29
3.4.1	Manual mode: ON/OFF.....	29
3.4.2	Manual mode: Shutter.....	32
3.5	STATUS INDICATION.....	35
3.5.1	Status indication ON/OFF.....	35
3.5.2	Status indication Shutter.....	37
3.6	LOGIC BLOCK.....	42
3.6.1	Logic block: ON/OFF.....	43
3.6.2	Logic block: Shutter.....	49
3.7	DEVICE DIAGNOSIS.....	56
3.8	FUNCTIONS OF EACH SWITCH ACTUATOR.....	58
3.8.1	Function selection.....	58
3.8.2	ON/OFF timings function.....	64
3.8.3	Timer.....	68
3.8.4	Scene.....	72
3.8.5	Preset.....	75
3.8.6	Lock-up.....	80
3.8.7	Priority.....	85
3.8.8	Hours counter.....	87
3.9	FUNCTIONS FOR EACH SHUTTER/BLIND OUTPUT.....	91
3.9.1	Shutter/blind basic function.....	91

3.9.2	Function selection.....	93
3.9.3	Scene.....	100
3.9.4	Lock-up.....	102
3.9.5	Preset.....	109
3.9.6	Priority.....	114
3.9.7	Alarm.....	116
3.9.8	Sun protection.....	120
4	COMMUNICATION OBJECTS OVERVIEW	127
4.1	COMMUNICATION OBJECTS <i>GENERAL</i>	127
4.1.1	Manual mode.....	128
4.1.2	Logic block.....	129
4.1.3	Super alarm.....	131
4.1.4	Behaviour of the device.....	132
4.1.5	Device diagnosis.....	133
4.2	COMMUNICATION OBJECTS <i>FOR EACH SWITCH ACTUATOR</i>	134
4.2.1	ON/OFF.....	139
4.2.2	ON/OFF timings function.....	139
4.2.3	Status indication.....	140
4.2.4	Timer.....	141
4.2.5	Scene.....	142
4.2.6	Preset.....	142
4.2.7	Lock-up.....	143
4.2.8	Priority.....	144
4.2.9	Hours counter.....	145
4.3	COMMUNICATION OBJECTS <i>FOR EACH SHUTTER/BLIND OUTPUT</i>	147
4.3.1	Command.....	152
4.3.2	Status indication.....	153
4.3.3	Scene.....	155
4.3.4	Preset.....	155
4.3.5	Lock-up.....	156
4.3.6	Priority.....	157
4.3.7	Alarm.....	158
4.3.8	Sun protection.....	159
5	APPENDIX.....	162
5.1	SPECIFICATIONS.....	162
5.2	TABLE OF LOGICAL OPERATIONS.....	164
5.3	CHARACTERISTICS.....	164

1 General

1.1 About this guide

The purpose of this manual is to describe the operation and configuration of the KNX-devices using the ETS program. It consists of four parts:

- General information
- Parameter description
- Overview of KNX objects
- Technical characteristics

1.2 About the program

1.2.1 ETS compatibility

The application programs are compatible with ETS4 and ETS3.
They can be downloaded from our website under the order number.

ETS version	File extension of compatible files
ETS4	*.knxprod or *.vd5
ETS3 (V3.0f)	*.vd5


1.2.2 Application descriptions

Application	Order number
S75314113-4-5-6	7531 41 13 / 14 / 15 / 16
S75316102-3-4-5	7531 61 02 / 03 / 04 / 05
S75318102-3-4-5	7531 81 02 / 03 / 04 / 05
S75319000-1-2-3	7531 90 00 / 01 / 02 / 03

2 General Description

2.1 Installation of the device


2.1.1 Overview presentation

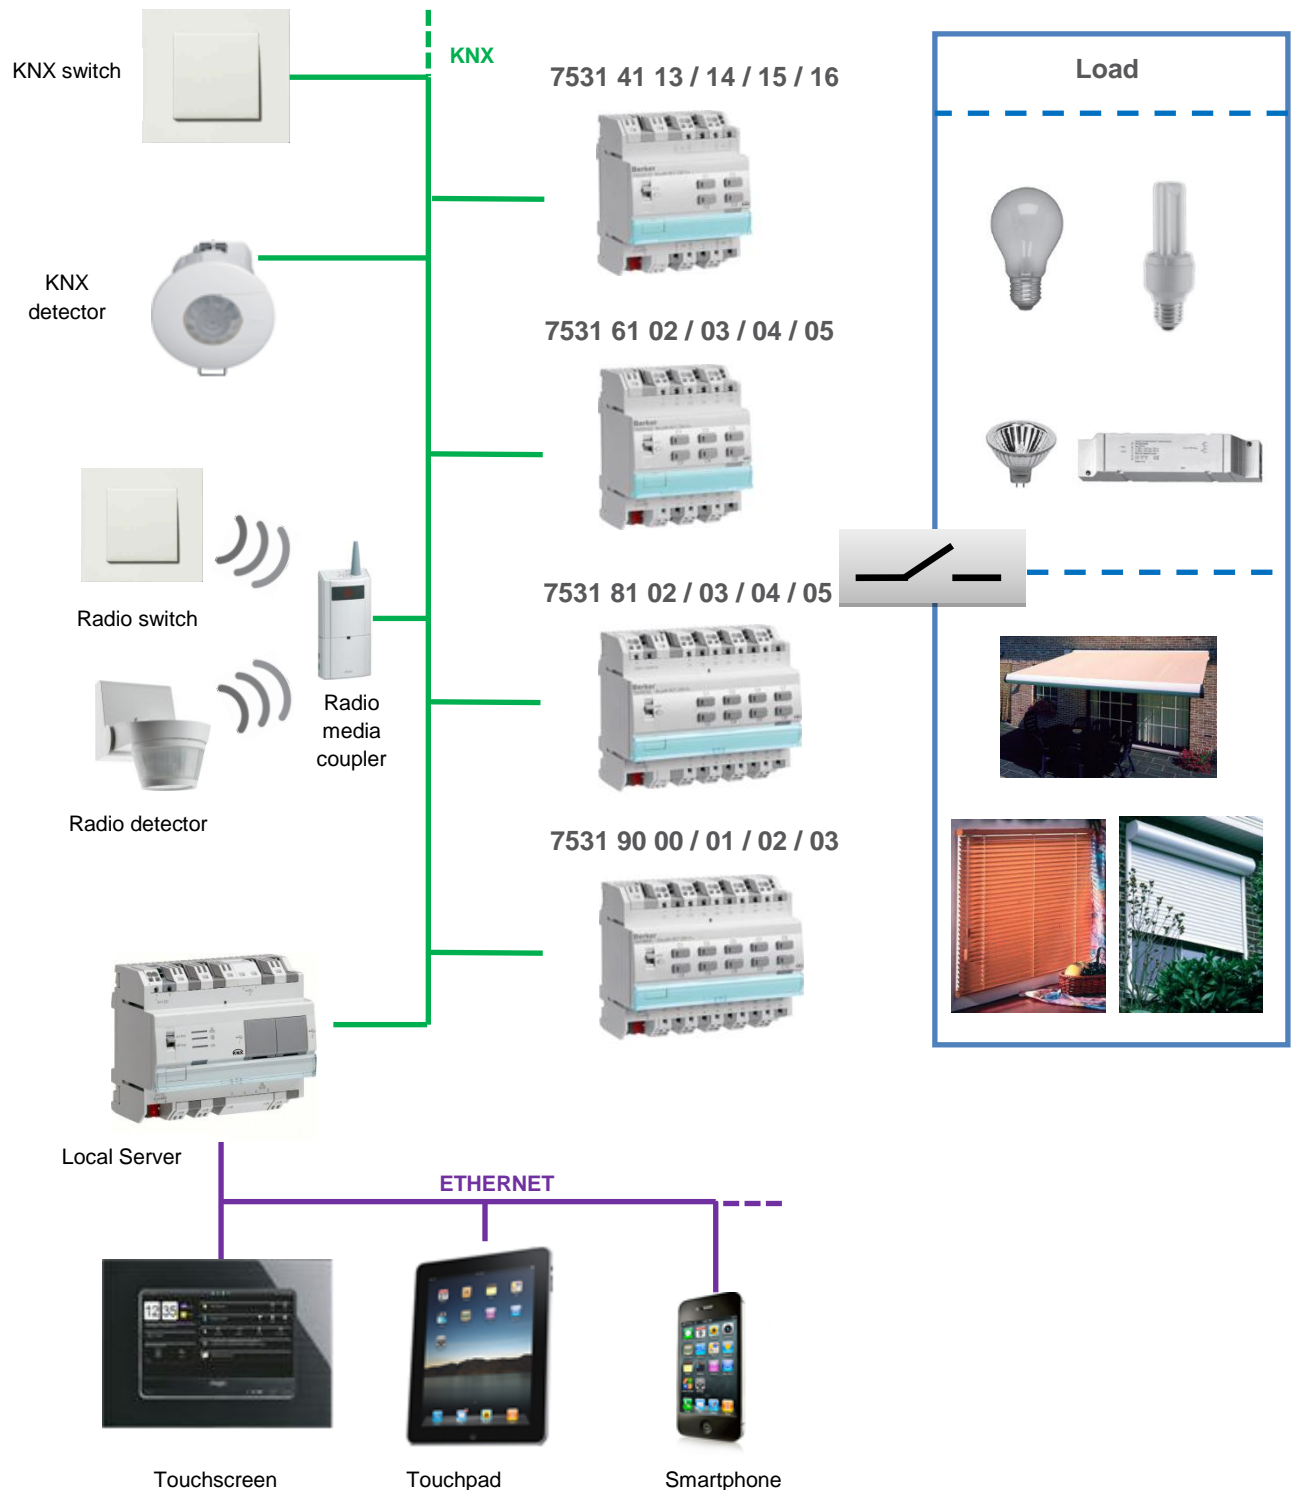

2.1.2 Connection

7531 41 13 / 14 / 15 / 16


- ① • Auto/Manu switch
- ② • Indicators state
- ③ • Local command push-button
- ④ • Physical addressing lighted push button

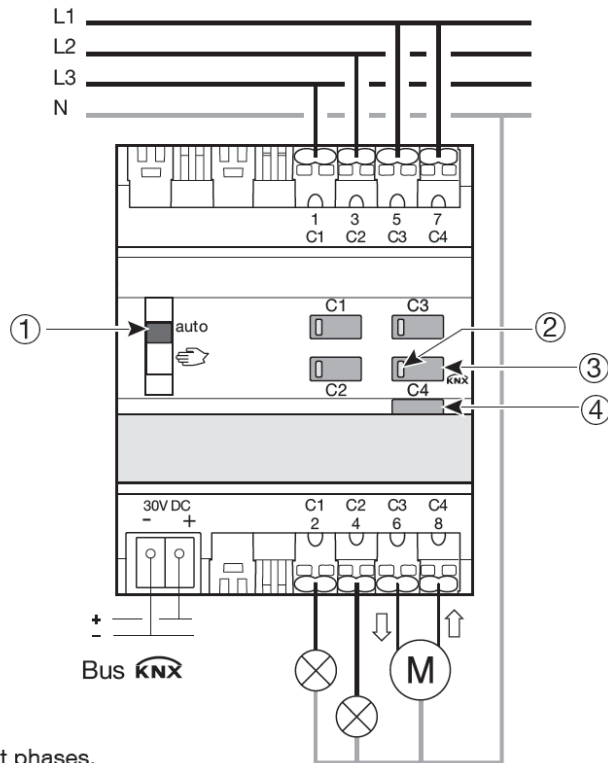

The outputs can be connected to different phases.


7531 61 02 / 03 / 04 / 05

- ① • Auto/Manu switch
- ② • Indicators state
- ③ • Local command push-button
- ④ • Physical addressing lighted push button

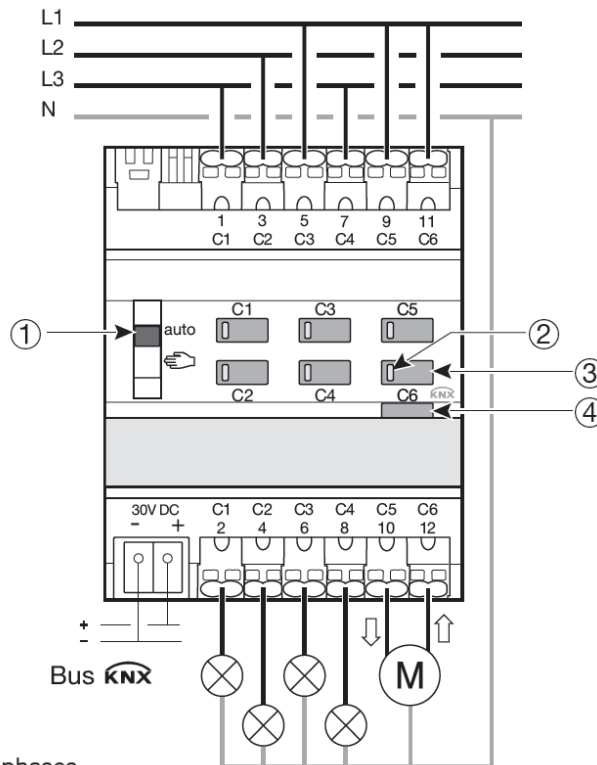


The outputs can be connected to different phases.

7531 81 02 / 03 / 04 / 05

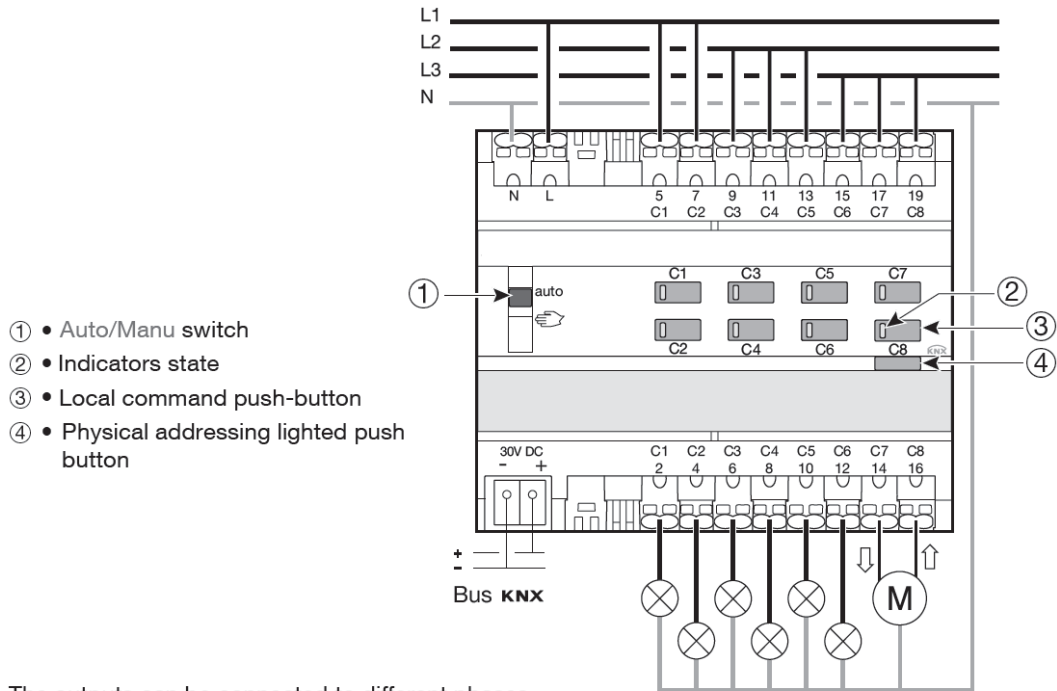

The outputs can be connected to different phases.

7531 90 00 / 01 / 02 / 03

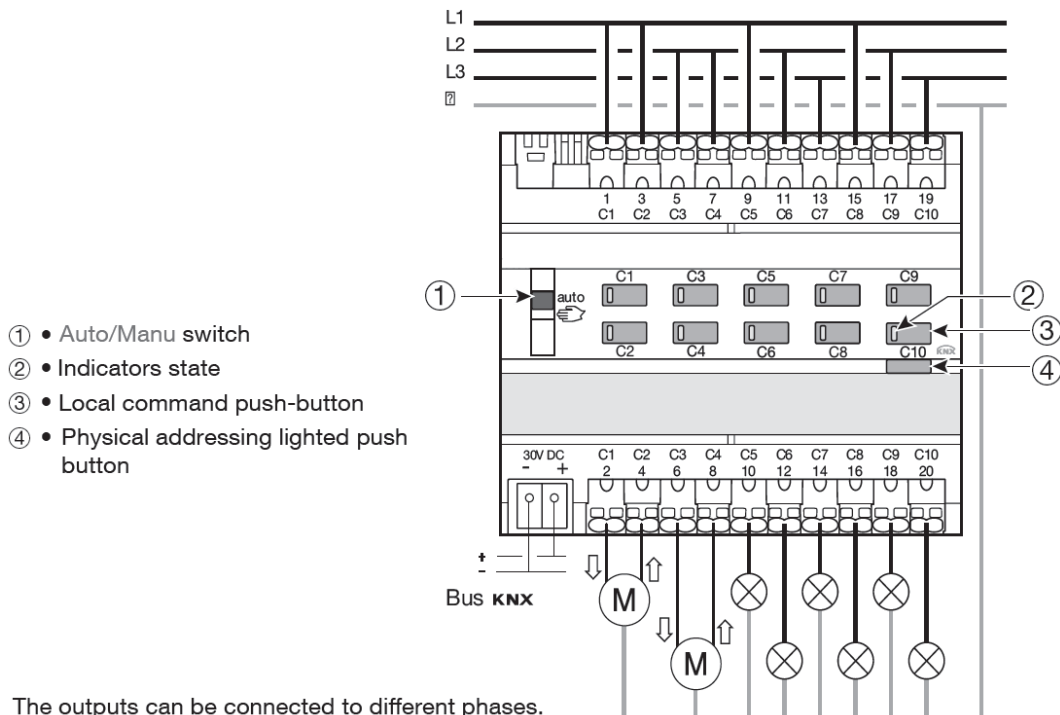

The outputs can be connected to different phases.

2.1.3 Physical addressing

In order to perform the physical addressing or to check whether or not the bus is connected, press the lighted push button (4) on the right-hand side above the identification plates on the front of the device.

Light on = bus connected and ready for physical addressing.

Programming mode is activated until the physical address is transferred from ETS. Pressing the button again, exits programming mode.

Physical addressing can be carried out in automatic or manual mode.

2.2 Function modules of the application


The switch actuators of the devices can be used in two different modes:
ON/OFF

- each switching contact is used separately to switch a load. Shutter and blind
- each pair of outputs constitutes a shutter and blind channel. A mix of the two operating modes is possible



WARNING: The devices are delivered in "ON/OFF" operating mode. When connecting shutters or blinds, ensure that both contacts are not turned on at the same time!

2.2.1 ON/OFF

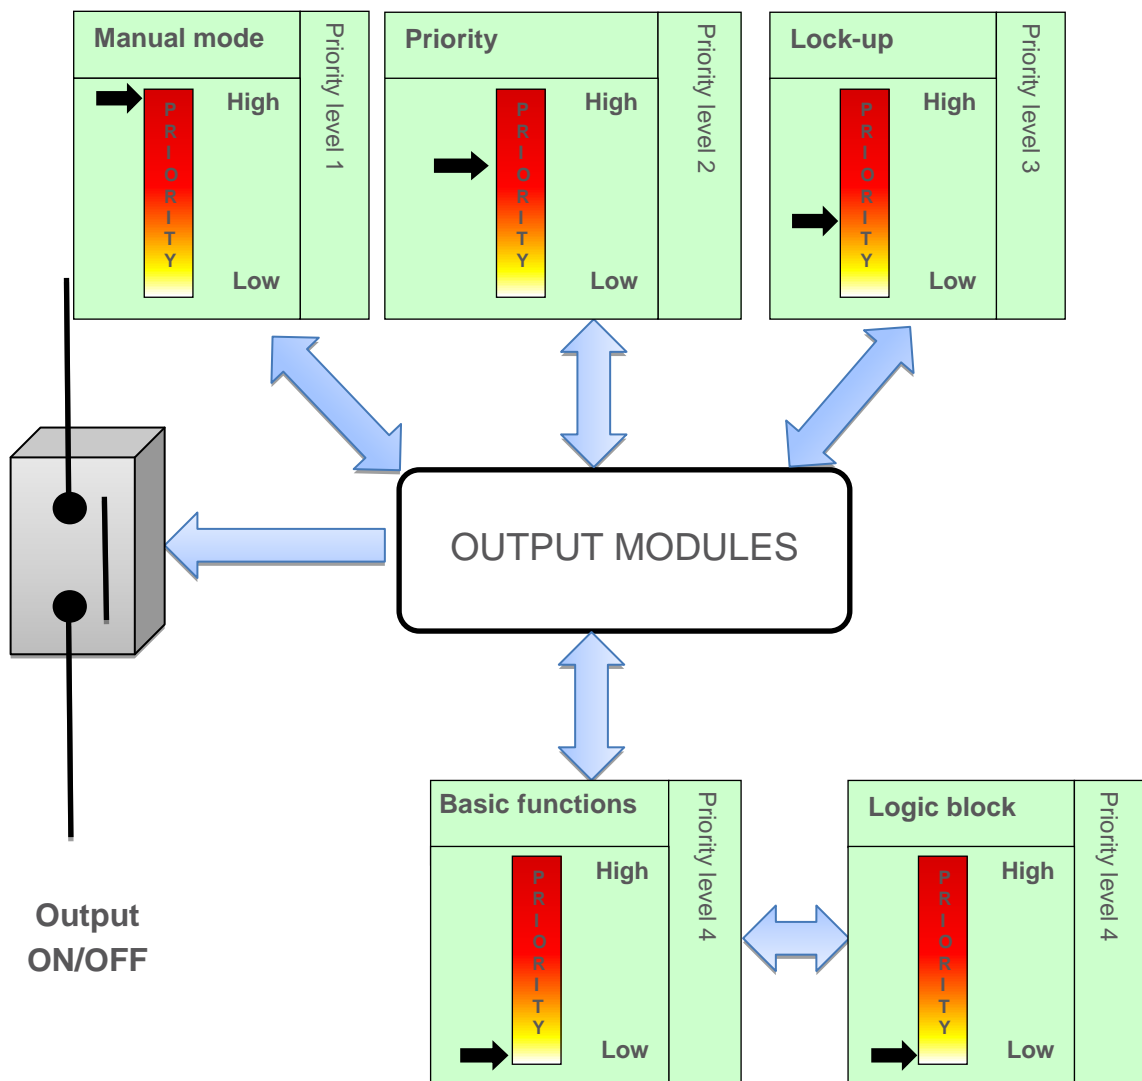

2.2.1.1 Functions for each switching channel

The applications allow individual configuration of the device outputs.
The most important functions are:

■ ON/OFF

An output can be switched on or off using the ON/OFF function.
The command can come from switches, buttons or other control inputs.

■ Timer

The timer function is used to switch an output on or off for a programmable period
According to the selected operating mode of the timer, the output can be turned ON or OFF for a determined period of time.
The timer may be interrupted before expiry of the delay time.
A configurable cut-OFF pre-warning announces the end of the delay time by a 1-second inversion of the output state.
The duration of the timer can be changed via the bus.

■ Time-limited OFF

The Time-limited OFF function is a switching function that automatically switches off after a configurable delay time - (Time-limited OFF).

Application: Lighting of store rooms, cellars, sheds etc.

■ Priority

The priority function is used to force the output into a defined state.
The Priority function is controlled with a 2-bit command.
Priority: Manual mode > **Priority** > Lock-up > basic functions.
Only a Priority OFF command authorizes the output for control.
Application: Keeping lighting on for security reasons.

■ Lock-up

The lock-up function is used to lock the output in a predefined state.
Priority: Manual mode > Priority > **Lock-up** > basic functions.
The Lock-up prevents actuation until an unlock command has been received.
The Lock-up duration can be set.

■ Scene

The Scene function is used to switch groups of outputs into a configurable predefined state.
A scene is activated by receipt of a 1-byte command.
Each output can be included in 64 different scenes.

■ Preset

The Preset function is used to switch an output into various predefined states.
The Preset function is activated via an object in 1-bit format.
Each output can be controlled via two Preset objects

■ Delay

The delay functions are used to activate the outputs with a switching or tripping delay, or with a switching and tripping delay.

■ Timer/toggle switch changeover

The Timer/toggle switch changeover function is used to switch between a timer and a toggle switch function applied to the communication object ON/OFF.

■ Hours Counter

The Hours Counter function is used to count the overall operating time of an output in the ON or OFF state.

The counter setpoint can be programmed and altered via an object.

2.2.1.2 Functions for the entire device

The applications configure the general functions of the devices.

The following functions apply to the entire device:

■ Manual mode

Manual mode allows the device to be disconnected from the bus.

In this mode, each output can be priority controlled locally.

This command has the highest priority. No other command is considered when manual mode is active. Only after ending manual mode are other types of control again permitted.

The duration of the manual control can be set.

Manual mode can be locked-up via the KNX bus.

■ Status indication

The behaviour of the status indication of each switching channel can be configured for the entire device. The Status indication ON/OFF sends the switching status of the individual output contact on the KNX bus.

■ Logic Block

The Logic function is used to control an output depending on the result of a logic operation. This command has the lowest priority.

The result of the function can be output on the KNX bus and can directly control one or more outputs.


There are two ON/OFF logic blocks per device and two shutter logic blocks with up to 4 inputs available.

■ Device diagnosis

The Device diagnosis function allows notifications about the operating state of the device to be sent via the KNX bus.

This information is sent periodically and/or on status change.

2.2.2 Shutter-blind:

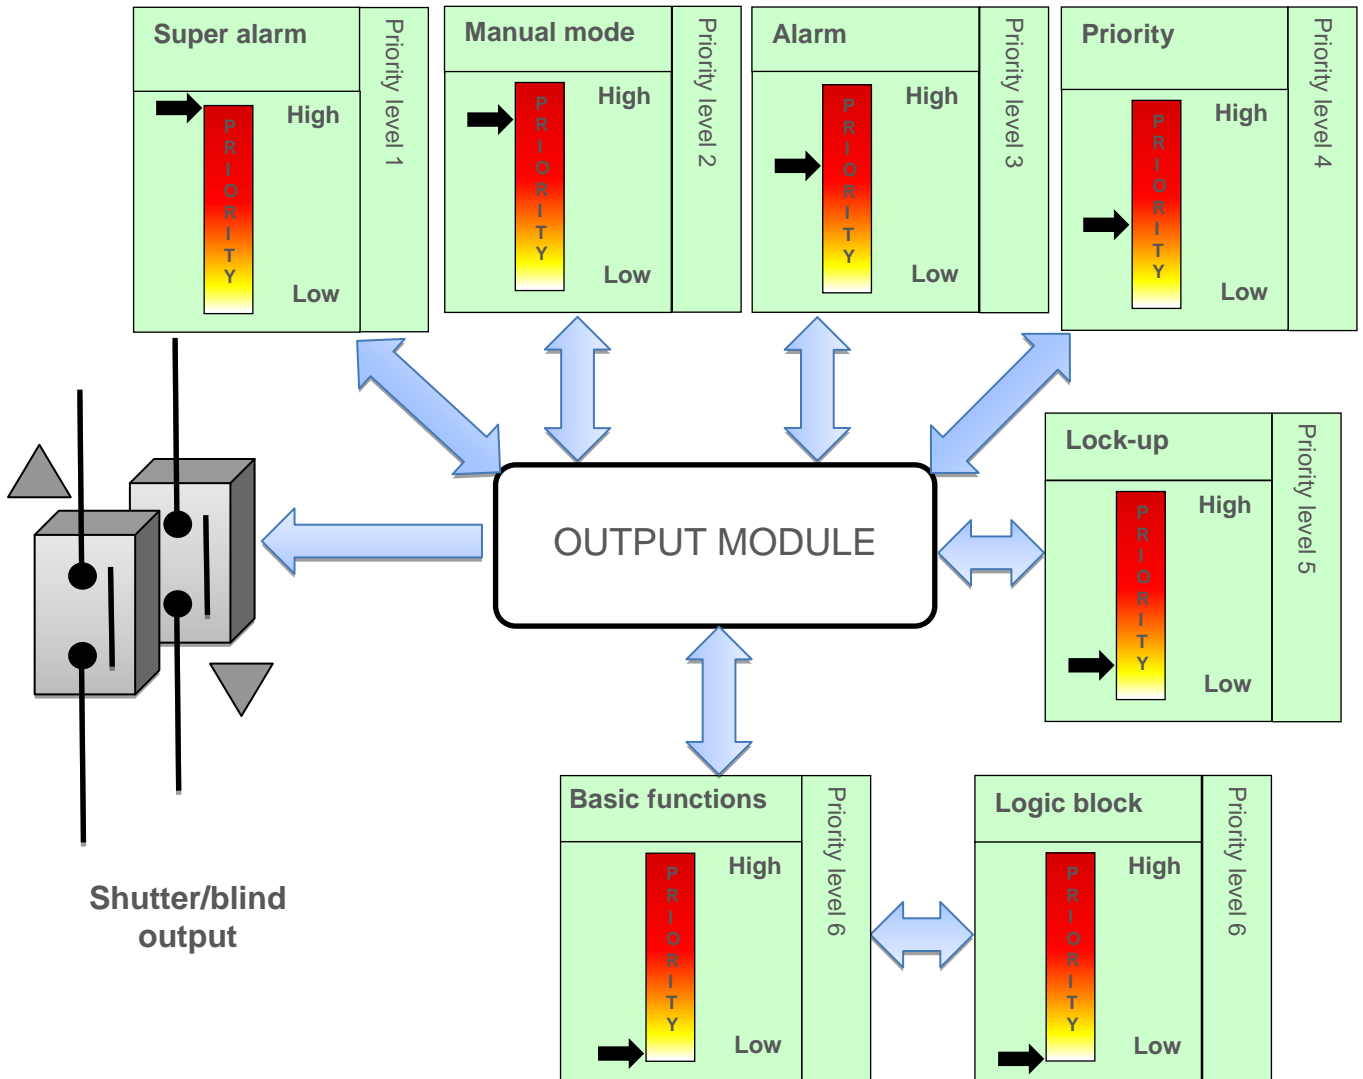

2.2.2.1 Functions for each shutter/blind channel

The applications allow individual configuration of the device outputs. The most important functions are:

■ UP/DOWN

The UP/DOWN function is used to run up or down shutters, blinds, awnings, etc. This function can also be used to open and close electric curtains. The command can be given by touch sensors (long press), switches or automatically.

■ Slat position/Stop

The Slat position/Stop function is used to adjust the slats of a blind or to stop its ongoing movement. This function can be used to alter the shade and the incidence of light from outside. The control command may be issued by a push button, for example: A short press on UP/DOWN buttons.

■ Position in %

The Position in % function is used to bring a shutter or blind to a desired position, which is entered in % lock.

■ Scene

The Scene function is used to switch groups of outputs into a configurable predefined state.

A scene is activated by receipt of a 1-byte command.

Each output can be included in 64 different scenes.

■ Preset

The Preset function is used to switch an output into various predefined states.

The Preset function is activated via an object in 1-bit format.

Each output can be controlled via two Preset objects

■ Sun protection

The Sun protection function is used to set the brightness in a room according to the amount of daylight. In general, the position values are sent by an external device (for example, a weather station).

■ Lock-up

The lock-up function is used to lock the output in a predefined state.

Priority: Super alarm > Manual Mode > Alarm > Priority > **Lock-up** > Basic functions.

The Lock-up prevents actuation until an unlock command has been received.

The Lock-up duration can be set.

■ Priority

The priority function is used to force the output into a defined state. The Priority function is controlled with a 2-bit command.

Priority: Super alarm > Manual Mode > Alarm > **Priority** > Lock > Basic functions. Only a Priority OFF command authorizes the output for control.

Application: Maintaining a hanging position for security reasons.

■ Alarm

With the alarm function a shutter or blind can be positioned in a configurable predefined state. Up to 3 alarm functions are possible.

Priority: Super alarm > Manual mode > **Alarm** > Priority. > Lock > basic functions.

The alarm prevents any actuation until an unlock command has been received.

2.2.2.2 Functions for the entire device

The applications configure the general functions of the devices. The following functions apply to the entire device:

■ Super alarm

This function is used to set all the outputs of the device into a configurable blocked state.

All other functions, including manual mode, will be locked.

Only a command to cancel the Super alarm will authorize the other commands.

Example: Block all curtains for window cleaning.

■ Manual mode

Manual mode allows the device to be disconnected from the bus. In this mode, each output can be priority controlled locally.

The duration of the manual control can be configured.

■ Status indication

The behaviour of the Status indication of each shutter/blind channel can be configured for the entire device. Using the status indication function, the following can be sent via the bus:

- Indication of position in %: Indicates the position of the shutter or blind.
- Indication of slat angles in %: Indicates the slat pitch of the blind.
- Upper or lower position reached: Indicates arrival at the upper or lower position.

■ Logic Block

The Logic function is used to control an output depending on the result of a logic operation. This command has the lowest priority.

The result of the function can be output on the KNX bus and can directly control one or more outputs.

There are two ON/OFF logic blocks per device and two shutter logic blocks with up to 4 inputs available.

■ Device diagnosis

The Device diagnosis function allows notifications about the operating state of the device to be sent via the KNX bus.

This information is sent periodically and/or on status change.


3 Parameter

3.1 Closing type for the outputs

This configuration window is used to set the Closing type for the outputs.

The following parameters are available:

- ON/OFF - each switching contact is used separately to switch a load
- Shutter and blind - each two outputs constitute one shutter/blind channel.

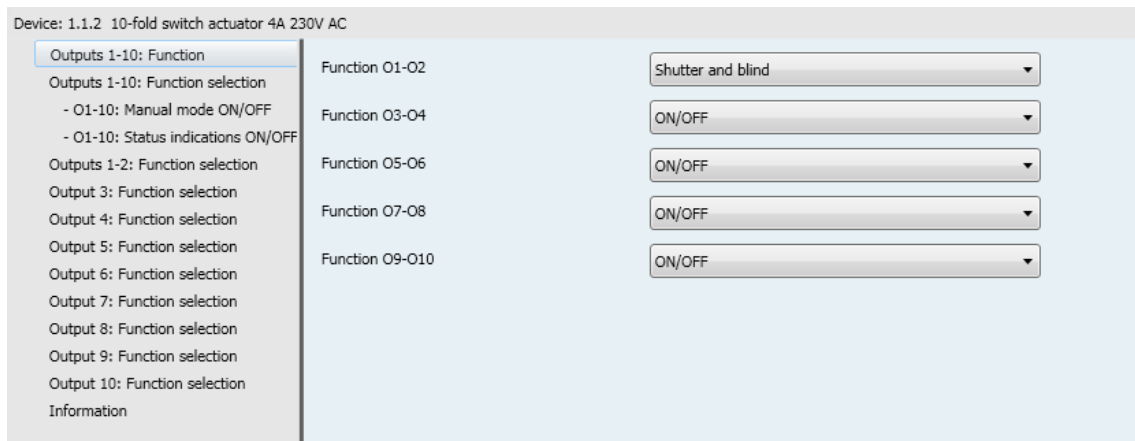

Parameter	Description	Value
Function selection Ox-Oy	The outputs are used as ON/OFF switches.	ON/OFF*
	The outputs are used for shutters and blinds. One output for raising and one output for lowering.	Shutter and blind

The assignment of the outputs is carried out following:

	ON/OFF	Shutter and blind
Function selection 01-02	Output 1: ON/OFF Output 2: ON/OFF	Outputs 1-2: Shutter and blind
Function selection 03-04	Output 3: ON/OFF Output 4: ON/OFF	Outputs 3-4: Shutter and blind
Function selection 05-06	Output 5: ON/OFF Output 6: ON/OFF	Outputs 5-6: Shutter and blind
Function selection 07-08	Output 7: ON/OFF Output 8: ON/OFF	Outputs 7-8: Shutter and blind
Function selection 09-010	Output 9: ON/OFF Output 10: ON/OFF	Outputs 9-10: Shutter and blind

* Default value

3.2 Definition of the general parameters

This configuration window is used for general configuration of the device.

Device: 1.1.2 10-fold switch actuator 4A 230V AC

Outputs 1-10: Function	Function ON/OFF	
Outputs 1-10: Function selection	Manual mode	Active
- O1-10: Manual mode ON/OFF	Status indication	Active
- O1-10: Status indications ON/OFF	Logic block 1	Not active
Output 1: Function selection	Logic block 2	Not active
Output 2: Function selection	Status during bus power cut	Maintain status
Output 3: Function selection	Status at bus return	Maintain status
Output 4: Function selection	Status after ETS download	Maintain status
Output 5: Function selection	Function shutter / blind	
Output 6: Function selection	Super alarm	Not active
Output 7: Function selection	Manual mode	Not active
Output 8: Function selection	Status indication	Not active
Output 9: Function selection	Logic block 1	Not active
Output 10: Function selection	Logic block 2	Not active
Information	Status during bus power cut	Maintain status
	Status after bus power cut	Maintain status
	Status after ETS download	Maintain status
	Common function	
	Activ. of restore ETS-parameters object (scenes, timer, setpoints)	Not active
	Device diagnosis object	Not active
	Parameters overwrite at next download (scenes)	Active
	Device LED switch off object	Not active

* Default value

3.2.1 Manual mode: ON/OFF

Parameter	Description	Value
Manual mode	Switching to manual mode is not possible.	Not active
	Switching to manual mode is possible without time limit.	Active*
	Manual mode can be activated for a duration that is configurable via the ETS parameters. After expiry of the time limit, manual mode is no longer active.	Time limited

For configuration see section: [Manual mode ON/OFF](#)

3.2.2 Activation of the Status indication: ON/OFF

Parameter	Description	Value
Status indication	The Status indications parameter register is hidden.	Not active
	The Status indications parameter register is displayed.	Active*

For configuration see section: [Status indication ON/OFF](#)

3.2.3 Activation of the logic blocks: ON/OFF

Parameter	Description	Value
Logic block 1	Logic block 1 communication objects and parameter register are hidden.	Not active*
	Logic block 1 communication objects and parameter register are displayed.	Active

For configuration see section: [Logic block ON/OFF](#)

Note: The parameters and objects are identical for block 2, only the terms will be adjusted.

For logic block 1

Communication objects: **203 - Logic block 1 – Input 1** (1 Bit – 1.002 DPT_Bool)
207 - Logic block 1 – Logic result (1 Bit – 1.002 DPT_Bool)

For logic block 2

Communication objects: **209 - Logic block 2 - Input 1 1** (1 Bit – 1.002 DPT_Bool)
213 - Logic block 2 – Logic result (1 Bit – 1.002 DPT_Bool)

* Default value

3.2.4 Super alarm: Shutter

Parameter	Description	Value
Super alarm	Activation of the Super alarm is not possible.	Not active
	Activation of the Super alarm is possible without time limit.	Active*
	The Super alarm can be activated for a duration that is configurable via the ETS parameters. After expiry of the time limit, the Super alarm is no longer active.	Time limited

Communication objects: **214 – Outputs 1-10: Shutter - Super alarm** (1 Bit – 1.005 DPT_Alarm)

For configuration see section: [Super alarm](#)

3.2.5 Manual mode: Shutter

Parameter	Description	Value
Manual mode	Switching to manual mode is not possible.	Not active
	Switching to manual mode is possible without time limit.	Active*
	Manual mode can be activated for a duration that is configurable via the ETS parameters. After expiry of the time limit, manual mode is no longer active.	Time limited

For configuration see section: [Manual mode shutter](#)

3.2.6 Activation of the Status indication: Shutter

Parameter	Description	Value
Status indication	The Status indications parameter register is hidden.	Not active
	The Status indications parameter register is displayed.	Active*

For configuration see section: [Status indication Shutter](#)

* Default value

3.2.7 Activation of the logic blocks: Shutter

Parameter	Description	Value
Logic block 1	Logic block 1 communication objects and parameter register are hidden.	Not active*
	Logic block 1 communication objects and parameter register are displayed.	Active

For configuration see section: [Logic block for shutter](#)

Note: The parameters and objects are identical for block 2, only the terms will be adjusted.

For logic block 1

Communication objects: **219 - Logic block 1 – Input 1** (1 Bit – 1.002 DPT_Bool)
223 - Logic block 1 – Logic result (1 Bit – 1.002 DPT_Bool)

For logic block 2

Communication objects: **225 - Logic block 2 – Input 1** (1 Bit – 1.002 DPT_Bool)
229 - Logic block 2 – Logic result (1 Bit – 1.002 DPT_Bool)

3.2.8 Activation of the Device diagnosis objects

Parameter	Description	Value
Device diagnosis object	The " Device diagnosis " parameter register and the associated communication object is hidden	Not active*
	The "Device diagnosis" parameter register and the associated communication object are displayed.	Active

Communication object: **232 - Outputs 1-10 - Device diagnosis** (6 Byte – specific)

For configuration see section: [Device diagnosis](#)


* Default value

3.2.9 Restore ETS-Parameters

There are two types of parameters in the device:

- Parameters that can only be changed via ETS
- Parameters that can be changed via ETS or via the KNX bus.

For parameters that can be changed via ETS and via the KNX bus, two values are stored in the device memory: the value corresponding to the ETS-parameter and the currently used value.

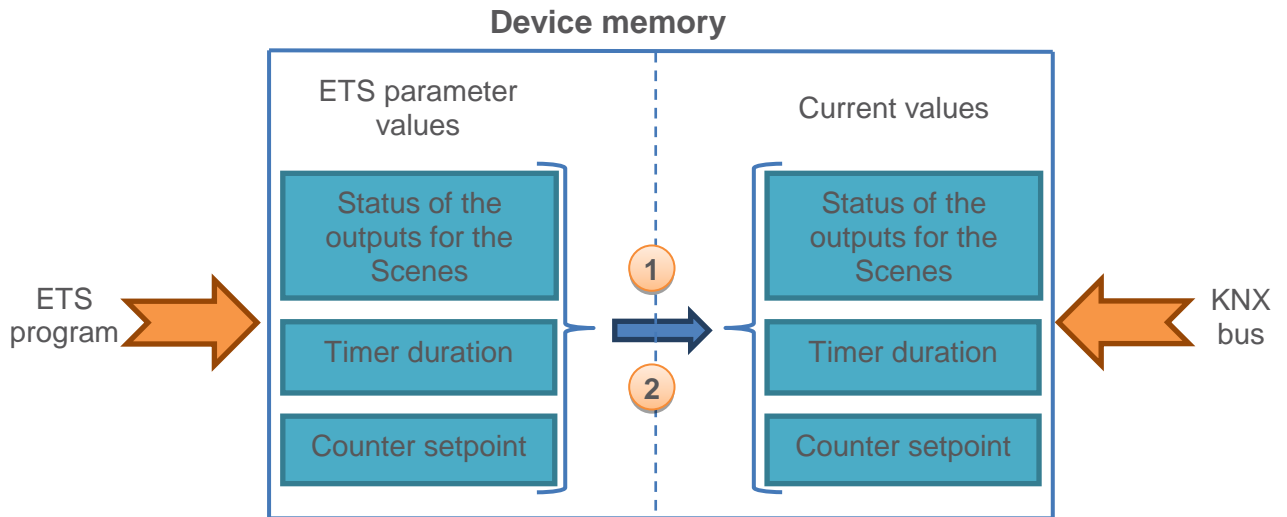

- 1 Receipt of the value "1" on the object, resets the ETS parameter values:** Current parameter values are replaced by the ETS-parameter values.
- 2 Download of the ETS application:** Current parameter values are replaced by the ETS parameter values on download.

Parameter	Description	Value
Activ. of restore ETS-parameters object (scenes, timer, setpoints)	The Restore ETS-params settings communication object is hidden	Not active*
	The Restore ETS-params settings communication object is displayed.	Active
	On receipt of a 1 on this object, the parameters** that are adjustable via the bus are overwritten with the values set in the ETS before the last download.	

** Output state for scene x, Timer duration, Operating h. counter setpoint

Communication object: **230 - Outputs 1-10 - Restore ETS-params settings (1 Bit – 1.015 DPT_Reset)**

* Default value

3.2.10 Overwrite parameters on download

Parameter	Description	Value
Parameters overwrite at next download (scenes)	The parameter values stored in the device will remain in the device at the next download.	Not active*
	The parameter values stored in the device will be overwritten with the ETS configured values at the next download.	Active

3.2.11 Status during bus power cut and/or download: ON/OFF

Parameter	Description	Value
Status during bus power cut	The output status remains unchanged during a bus power cut	Maintain status*
	The output is turned on when there is a bus power cut	On
	The output is turned off when there is a bus power cut	Off

Parameter	Description	Value
Status after bus return	The output status remains unchanged at bus return	Maintain status*
	The output is switched on at bus return	On
	The output is switched off at bus return	Off

Note: The device will reboot on bus return. The priority functions that were present before the bus power cut, are no longer active. (Forced, Lock-up)

Parameter	Description	Value
Status after ETS download	The output status remains unchanged after ETS download	Maintain status*
	The output is switched on after ETS download	On
	The output is switched off after ETS download	Off

Note: During a download, the outputs remain unchanged.

* Default value

3.2.12 LED display

Parameter	Description	Value
Device LED switch off object	The communication object " Device LED switch off " is hidden	Not active*
	The communication object " Device LED switch off " is displayed.	Active

This function is used to reduce the overall power consumption of the device. It allows the LEDs on the front of the device to be switched off.

Communication object: **231 - Outputs 1-10 - Device LED switch off (1 Bit – 1.001 DPT_Switch)**

Parameter	Description	Value
Polarity	Object Device LED lock receives "0" = the LED display is activated "1" = the LED display is deactivated "0" = the LED display is deactivated "1" = the LED display is activated	0 = Status indication, 1 = Always OFF* 0 = Always OFF, 1 = Status indication

*Note: This parameter is only visible if the parameter **Device LED switch off object** has the following value: **Active***

3.2.13 Status during bus power cut and/or download: Shutter

Parameter	Description	Value
Status during bus power cut	Maintain the position before the bus power cut	Maintain status*
	Shutter or blind open	Up
	Shutter or blind closed.	Down

Parameter	Description	Value
Status after bus power cut	Maintain the position before the bus power cut	Maintain status*
	Shutter or blind open	Up
	Shutter or blind closed	Down
	Run to a specific position	Specific position

Note: The device will reboot on bus return. The priority functions that were present before the bus power cut, are no longer active. (Super alarm, alarm, forced, lock-up)

Parameter	Description	Value
Position after bus power cut	This parameter is the defined position to run the shutter or blind to, after the KNX bus power cut.	0... 5 *...100

* Default value

Note: This parameter is only visible if the **Status after bus power cut** parameter has the following value: **Specific position**

Parameter	Description	Value
Slat angle (0-100%)	This parameter defines the slat position of the blind that is set after a KNX bus power cut.	0... 5 *...100

Note: This parameter is only visible if the **Status after bus power cut** parameter has the following value: **Specific position**

Parameter	Description	Value
Status after ETS download	Maintain the position before download	Maintain status*
	Shutter or blind open	Up
	Shutter or blind closed	Down
	Run to a specific position.	Specific position

Note: During a download, the outputs remain unchanged.

Parameter	Description	Value
Position after download	This parameter defines the position to run the shutter or blind to, after download of the ETS parameters.	0... 5 *...100

Note: This parameter is only visible if the **Status after download** parameter has the following value: **Specific position**

Parameter	Description	Value
Slat angle (0-100%)	This parameter defines the slat position of the blind that is set after download of the ETS-parameters.	0... 5 *...100

Note: This parameter is only visible if the **Status after download** parameter has the following value: **Specific position**

* Default value

3.3 Super alarm Shutter

This function is used to block all the outputs of the device in a configurable state. All other modes including manual mode will not be considered.

Only a command to cancel the Super alarm will authorize the other commands.

The super alarm will be activated on receipt of a "1" on the **Super alarm** communication object.

The behaviour of the device is determined by the following parameters:

3.3.1 Activation duration and position

Parameter	Description	Value
Duration of super alarm	This parameter defines the time during which the super alarm is active.	12 hours: 0 to 23 h 0 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Super alarm** parameter has the following value: **Time limited***

* Default value

Parameter	Description	Value
Position during super alarm	During the super alarm, the shutter/blind output; is not changed closes the Up contact closes the down contact opens both contacts runs to a specific position runs to a position set in a scene	Maintain status* Up Down Stop Specific position Scene number

Parameter	Description	Value
Position (0-100%)	This parameter defines the position to run the shutter or blind to during the super alarm.	0... 5 *...100

*Note: This parameter is only visible if the **Position during super alarm** parameter has the following value: **Specific position***

Parameter	Description	Value
Slat angle (0-100%)	This parameter defines the slat position of the blind that is set during the super alarm.	0... 5 *...100

*Note: This parameter is only visible if the **Position during super alarm** parameter has the following value: **Specific position***

Parameter	Description	Value
Scene	This parameter defines the scene number that is to be applied during the super alarm.	Scenes 1... 64 Default value: Scene 1

The outputs respond according to the scene numbers and associated parameters.

*Note: This parameter is only visible if the **Position during super alarm** parameter has the following value: **Scene number***

* Default value

3.3.2 Super alarm status indication

Parameter	Description	Value
Super alarm status object	This parameter is used to authorize the Super alarm status object. This object allows the status of the super alarm to be sent from the device on the KNX bus.	Not active* Active

Communication object:

215 - Outputs 1-10: Shutter - Super alarm status (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	The Super alarm status object sends: "0" if the super alarm is deactivated "1" if the super alarm is activated "0" if the super alarm is activated "1" when the super alarm is deactivated	0 = deactivated, 1 = activated* 0 = activated, 1 = deactivated

*Note: This parameter is only visible if the **Super alarm status object** parameter has the following value: **Active***

Parameter	Description	Value
Emission	The object Super alarm status will be sent on: Activation or deactivation of the super alarm Periodically On activation or deactivation of the super alarm and periodically	On status change* Periodically On status change and periodically

*Note: This parameter is only visible if the **Super alarm status object** parameter has the following value: **Active***

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Super alarm status object.	0 hours: 0 to 23 h 10 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

* Default value

3.3.3 Alarm monitoring period for super alarm

Parameter	Description	Value
Alarm monitoring period	<p>The super alarm object;</p> <p>expects no periodic signal</p> <p>expects a periodic "0" signal on the Super alarm communication object.</p> <p>If this signal remains off, the super alarm is automatically activated and the shutters/blinds are run to the position set by the Position during super alarm parameter.</p>	<p>Not active*</p> <p>Active</p>

Parameter	Description	Value
Alarm monitoring period for super alarm	This parameter defines the maximum time between two "0" signals on the Super alarm communication object	<p>0 hours: 0 to 23 h</p> <p>10 minutes: 0 to 59 min</p> <p>0 seconds: 0 to 59 s</p>

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Alarm monitoring period** parameter has the following value: **Active***

3.3.4 Position after super alarm

Parameter	Description	Value
Position after super alarm	<p>After the super alarm, the shutter/blind output;</p> <p>is not changed</p> <p>closes the Up contact</p> <p>closes the down contact</p> <p>runs to a specific position</p> <p>runs to a position set in a scene</p> <p>returns to the position before super alarm</p> <p>runs to the position that would be active according to other communication objects if no super alarm had taken place.</p>	<p>Maintain status*</p> <p>Up</p> <p>Down</p> <p>Specific position</p> <p>Scene number</p> <p>Status before super alarm</p> <p>Theoretical status without super alarm</p>

Note: On setting the "Theoretical status without super alarm", the Up/Down and slat step commands are not saved.

* Default value

Parameter	Description	Value
Position (0-100%)	This parameter defines the position to run the shutter or blind to after the super alarm.	0... 5 *...100

*Note: This parameter is only visible if the **Position after super alarm** parameter has the following value: **Specific position***

Parameter	Description	Value
Slat angle (0-100%)	This parameter defines the slat position that is to be applied after the super alarm.	0... 5 *...100

- **0...100**: Slat position of the blind.

*Note: This parameter is only visible if the **Position after super alarm** parameter has the following value: **Specific position***

Parameter	Description	Value
Scene	This parameter defines the scene number that is to be activated after the super alarm.	Scenes 1... 64 Default value: Scene 1

The outputs respond according to the scene numbers and associated parameters

*Note: This parameter is only visible if the **Position after super alarm** parameter has the following value: **Scene number***

* Default value

3.4 Manual mode

In manual mode the device is disconnected from the KNX bus.
The function of the connected load can be checked using the manual mode button.

Manual mode can only be activated using the switch on the front of the device.
In this mode, telegrams arriving from the KNX bus are ignored.

When manual mode is activated, the status of the relays initially remains unchanged.
Each time the manual mode button of an output is pressed, its status is switched over.

3.4.1 Manual mode: ON/OFF

The behaviour is determined by the following parameters:

3.4.1.1 Manual mode activation period

Parameter	Description	Value
Duartion of manual mode activation	This parameter defines the amount of time for which manual mode remains activated.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Manual mode** parameter has the following value: **Time limited**.*

* Default value

3.4.1.2 Deactivation of manual mode

Parameter	Description	Value
Object deactivation of manual mode	The Deactivation of manual mode communication object is hidden	Not active*
	The Deactivation of manual mode communication object is displayed	Active

Communication object: **200 - Outputs 1-10: ON/OFF - Deactivation of manual mode** (1 Bit - 1.001 DPT_Switch)

Parameter	Description	Value
Polarity	<p>The Deactivate manual mode object receives</p> <p>"0" = manual mode is activated "1" = manual mode is not activated</p> <p>"0" = the manual mode is not activated "1" = manual mode is activated</p>	<p>0 = Manual mode authorized 1 = Manual mode locked-up*</p> <p>0 = Manual mode locked-up, 1 = Manual mode authorized</p>

*Note: This parameter is only visible if the **Object deactivation of manual mode** parameter has the following value: **Active***

3.4.1.3 Manual mode status indication

Parameter	Description	Value
Object status indication manual mode	The " Status indication manual mode " communication object is hidden	Not active*
	The " Status indication manual mode " communication object is displayed	Active

Communication object: **201 - Outputs 1-10: ON/OFF Status indication manual mode** (1 Bit - 1.001 DPT_State)

Parameter	Description	Value
Polarity	<p>The Status indication manual mode communication object sends:</p> <p>"0" when manual mode is switched on "1" when manual mode is switched off</p> <p>"0" when manual mode is switched off "1" when manual mode is switched on</p>	<p>0 = Manual mode active, 1 = Manual mode not active</p> <p>0 = Manual mode not active, 1 = Manual mode active*</p>

*Note: This parameter is only visible if the **Manual mode** parameter has the following value: **Active***

* Default value

Parameter	Description	Value
Emission	The Status indication manual mode communication object is sent: On switching manual mode on or off Periodically after a configurable time On switching manual mode on or off and periodically after a configurable time	On status change* Periodically On status change and periodically

*Note: This parameter is only visible if the **Manual mode** parameter has the following value: **Active***

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Status indication manual mode object.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***


3.4.1.4 Status after manual mode

Parameter	Description	Value
Status after manual mode	At the end of manual mode, the output status is not changed switched to the opposite status selectively switched on selectively switched off switched back to the status before manual mode was activated switched to the status which would be active according to other communication objects if the manual mode had not taken place	Maintain status* Inversion ON OFF Status before manual mode Theoretical status without manual mode

* Default value

3.4.2 Manual mode: Shutter

The operating mode is determined by the following parameters:

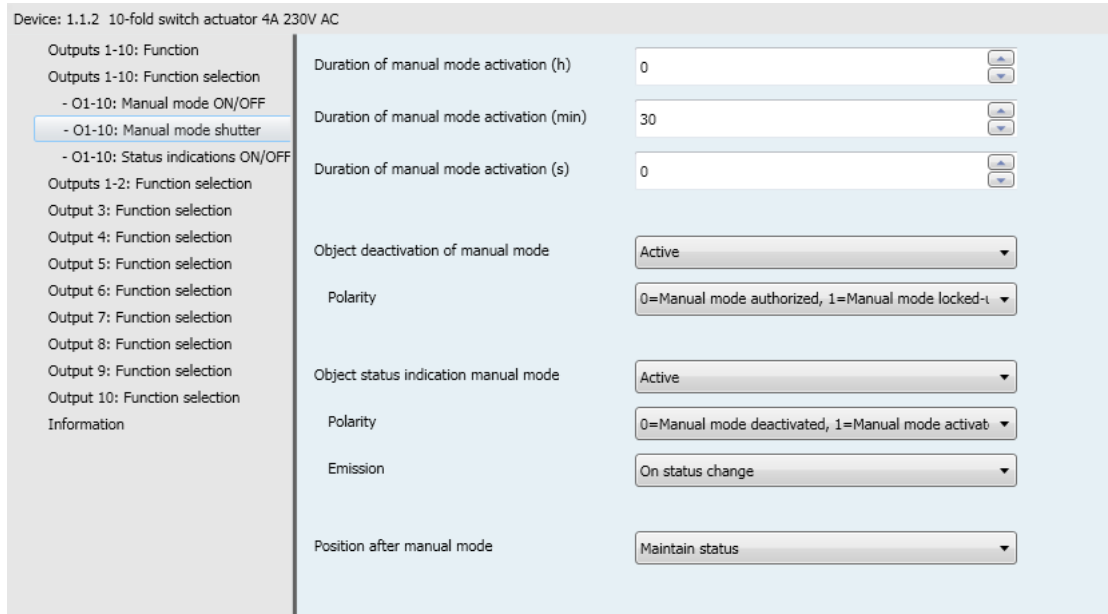

3.4.2.1 Manual mode activation period

Parameter	Description	Value
Duration of manual mode activation	This parameter defines the amount of time for which manual mode remains activated.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Manual mode** parameter has the following value: **Time limited***

3.4.2.2 Deactivation of manual mode

Parameter	Description	Value
Object deactivation of manual mode	The Deactivation of manual mode communication object is hidden	Not active*
	The Deactivation of manual mode communication object is displayed	Active

Communication object: **216 - Outputs 1-10: Shutter - Deactivation of manual mode** (1 Bit - 1.001 DPT_Switch)

* Default value

Parameter	Description	Value
Polarity	The Deactivate manual mode object receives "0" = manual mode is activated "1" = manual mode is not activated "0" = the manual mode is not activated "1" = manual mode is activated	0 = Manual mode authorized, 1 = Manual mode locked-up 0 = Manual mode locked-up, 1 = Manual mode authorized*

Note: This parameter is only visible if the **Object deactivation of manual mode** parameter has the following value: **Active**

3.4.2.3 Manual mode status indication

Parameter	Description	Value
Object status indication manual mode	The " Status indication manual mode " communication object is hidden	Not active*
	The " Status indication manual mode " communication object is displayed	Active

Communication object: **217 - Outputs 1-10: Shutters- Status indication manual mode** (1 Bit - 1.001 DPT_State)

Parameter	Description	Value
Polarity	The Status indication manual mode communication object sends: "0" when manual mode is switched on "1" when manual mode is switched off " 0" when manual mode is switched off "1" when manual mode is switched on	0 = Manual mode active, 1 = Manual mode not active 0 = Manual mode not active, 1 = Manual mode active*

Note: This parameter is only visible if the **Manual mode** parameter has the following value: **Active**

Parameter	Description	Value
Emission	The Status indication manual mode communication object is sent:	
	On switching manual mode on or off	On status change*
	Periodically after a configurable time	Periodically
	On switching manual mode on or off and periodically after a configurable time	On status change and periodically

Note: This parameter is only visible if the **Manual mode** parameter has the following value: **Active**

* Default value

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Status indication manual mode object.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

3.4.2.4 Status after manual mode

Parameter	Description	Value
Status after manual mode	After manual mode, the shutter/blind output; is not altered closes the Up contact closes the Down contact runs to a specific position returns to the position before Manual mode. runs to the position which would be active according to other communication objects if the manual mode had not taken place.	Maintain status* Up Down Specific position Status before manual mode Theoretical status without manual mode

Note: On setting the "Theoretical status without super alarm", the Up/Down and slat step commands are not saved.

Parameter	Description	Value
Position (0-100%)	This parameter defines the position to run the shutter or blind to after manual mode.	0... 5 *...100

*Note: This parameter is only visible if the **Status after manual mode** parameter has the following value: **Specific position***

Parameter	Description	Value
Slat angle (0-100%)	This parameter determines the slat position of the blinds that is to be set after the end of manual mode.	0... 5 *...100


*Note: This parameter is only visible if the **Status after manual mode** parameter has the following value: **Specific position***

* Default value

3.5 Status indication

The status indication function specifies the status of the output contact.

3.5.1 Status indication ON/OFF

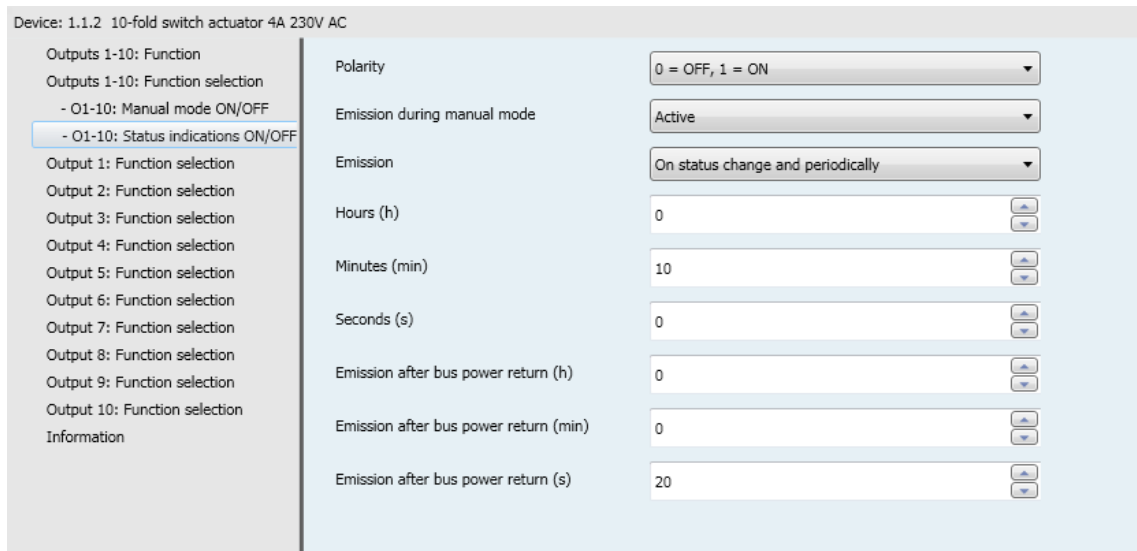

Parameter	Description	Value
Polarity	The Status indication ON/OFF communication object sends: "0" for an open output contact "1" for a closed output contact "0" for a closed output contact "1" for an open output contact	0 = OFF, 1 = ON* 0 = ON, 1 = OFF

*Note: If the blinking function is activated, the above parameter is ignored and replaced by the **Output status during blinking function** parameter*

Parameter	Description	Value
Emission during manual mode	The Status indication ON/OFF communication object sends: values if the output status is switched in manual mode no values if the output status is switched in manual.	Active* Not active

* Default value

Parameter	Description	Value
Emission	The Status indication ON/OFF communication object is sent: On each output change Periodically after a configurable time On output change and periodically after a configurable time	On status change* Periodically On status change and periodically

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Status indication ON/OFF object.	0 hours: 0 to 23 h 10 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Emission delay after initialization	This parameter determines the delay for emission of the Status change ON/OFF objects on return of the KNX bus after a power cut.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 20 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

This parameter can be used to optimize the bus load after the return of the bus voltage.

* Default value

3.5.2 Status indication Shutter

Device: 1.1.2 10-fold switch actuator 4A 230V AC

Outputs 1-10: Function	Position in % objects	Active
Outputs 1-10: Function selection	Emission position objects during manual mode	Not active
- O1-10: Manual mode ON/OFF	Emission	On status change
- O1-10: Status indications ON/OFF	Time delay for position objects (h)	0
- O1-10: Status indications shutter	Time delay for position objects (min)	0
Outputs 1-2: Function selection	Time delay for position objects (s)	20
Output 3: Function selection	Slat angle in objects	Active
Output 4: Function selection	Emission during manual mode	Not active
Output 5: Function selection	Emission	On status change
Output 6: Function selection	Time delay for slat angle objects (h)	0
Output 7: Function selection	Time delay for slat angle objects (min)	0
Output 8: Function selection	Time delay for slat angle objects (s)	20
Output 9: Function selection	Upper position reached objects	Not active
Output 10: Function selection	Lower position reached objects	Not active
Information		

3.5.2.1 Position in % indication object

Parameter	Description	Value
Position in % objects	This parameter is used to display all the Position in % indication object related parameters.	Active* Not active

Parameter	Description	Value
Emission position objects during manual mode	The Position in % indication object sends values after a change of position in manual mode	Active
	no values after a change of position in manual mode	Not active*

* Default value

Parameter	Description	Value
Emission	The Position in % indication communication object is sent: After each position change Periodically after a configurable time After a position change and periodically after a configurable time	On status change* Periodically On status change and periodically

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Position in % indication objects.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Time delay for position objects	This parameter determines the delay for emission of the Position in % indication object on return of the KNX bus after a power cut.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min 10 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

This parameter can be used to optimize the bus load after the return of the bus voltage.

3.5.2.2 Slat angle indication in % objects

Parameter	Description	Value
Slat angle in objects	This parameter is used to display all the Slat angle indication in % object related parameters.	Active* Not active

Parameter	Description	Value
Emission during manual mode	The Slat angle indication in % indication object sends values after a change of position in manual mode no values after a change of position in manual mode	 Active Not active*

* Default value

Parameter	Description	Value
Emission	The Slat angle indication in % indication communication object is sent: After each position change Periodically after a configurable time After a position change and periodically after a configurable time.	On status change* Periodically On status change and periodically

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Slat angle indication in % objects.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Emission** parameter has the value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Emission delay after initialization	This parameter determines the delay for emission of the Slat angle indication in % object on return of the KNX bus after a power cut.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min 20 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

This parameter can be used to optimize the bus load after the return of the bus voltage.

3.5.2.3 Upper position reached object

Parameter	Description	Value
Upper position reached objects	This parameter is used to display all the Upper position reached object related parameters.	Active Not active*

Parameter	Description	Value
Polarity	The Upper position reached object sends: "0" on leaving the upper position "1" on reaching the upper position "0" on reaching the upper position "1" on leaving the upper position	0 = Position not reached, 1 = Position reached* 0 = Position reached, 1 = Position not reached

* Default value

Parameter	Description	Value
Emission during manual mode	The Upper position reached object sends values on reaching the end position in manual mode no values on reaching the end position in manual mode.	Active Not active*

Parameter	Description	Value
Emission	The Upper position reached object sends: On reaching or leaving the upper position Periodically after a configurable time After a change of position and periodically after a configurable time.	On status change* Periodically On status change and periodically

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Upper position reached object.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Emission delay on initialization	This parameter determines the delay for emission of the Upper position reached object on return of the KNX bus after a power cut.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min 20 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

This parameter can be used to optimize the bus load after the return of the bus voltage.

3.5.2.4 Lower position reached object

Parameter	Description	Value
Lower position reached objects	This parameter is used to display all the Lower position reached object related parameters.	Active Not active*

* Default value

Parameter	Description	Value
Polarity	The Lower position reached object sends: "0" on leaving the lower position "1" on reaching the lower position "0" on reaching the lower position "1" on leaving the lower position	0 = Position not reached, 1 = Position reached* 0 = Position reached, 1 = Position not reached

Parameter	Description	Value
Lower position object	This parameter is used to send the Lower position reached object during manual mode operation.	Active Not active*

Parameter	Description	Value
Emission during manual mode	The Lower position reached is sent: On reaching or leaving the lower position Periodically after a configurable time After a change of position and periodically after a configurable time.	On status change* Periodically On status change and periodically

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Lower position reached object.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Time delay for lower position object	This parameter determines the delay for emission of the Lower position reached object on return of the KNX bus after a power cut.	0 hours: 0 to 23 h 0 minutes: 0 to 59 min 20 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

This parameter can be used to optimize the bus load after the return of the bus voltage.

* Default value


3.6 Logic block

The logic function is used to control an output depending on the result of a logic operation. This command has the lowest priority.

The result of the function can be output on the KNX bus and may directly relate to the status of one or more outputs.

There are two ON/OFF logic blocks and two shutter logic blocks available per device.

Operating principle of the logic block:

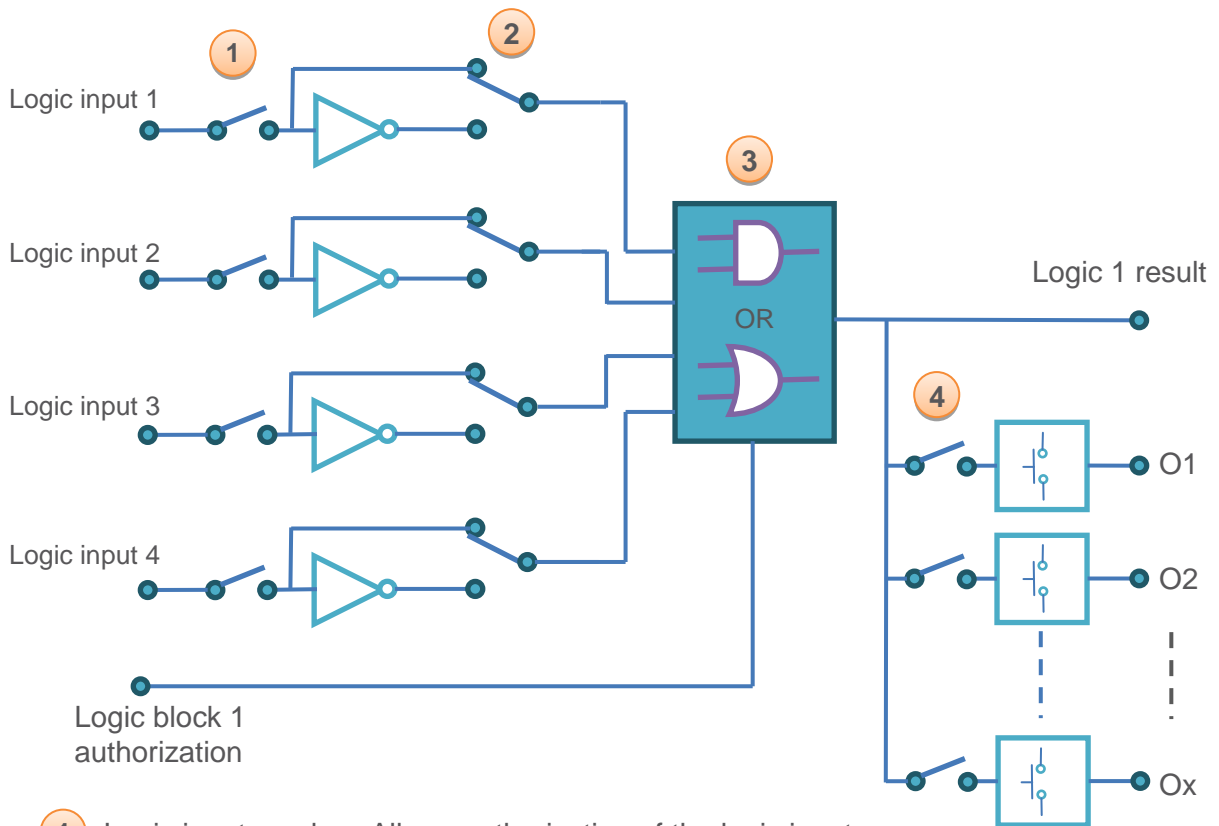

- 1 Logic input number: Allows authorization of the logic input
- 2 Logic input value: Inverted, yes or no
- 3 Type of logic function (AND or OR): Selection of the logic function
- 4 The logic result is applied to outputs: Selection of the outputs concerned by the logic operation

* Default value

3.6.1 Logic block: ON/OFF

The behaviour is determined by the following parameters:

Note: The description of the parameters is given for logic block 1. The parameters and objects are identical for logic block 2; only the terms will be adapted.

Device: 1.1.2 10-fold switch actuator 4A 230V AC

- Outputs 1-10: Function
- Outputs 1-10: Function selection
 - O1-10: Manual mode ON/OFF
 - O1-10: Status indications ON/OFF
 - O1-10: Logic block 1 ON/OFF
 - O1-10: Logic block 2 ON/OFF
- Output 1: Function selection
- Output 2: Function selection
- Output 3: Function selection
- Output 4: Function selection
- Output 5: Function selection
- Output 6: Function selection
- Output 7: Function selection
- Output 8: Function selection
- Output 9: Function selection
- Output 10: Function selection
- Information

Logic function type	OR	
Number of logic input	1	<input type="button" value="up"/> <input type="button" value="down"/>
Inverting value of logic input 1	Maintain status	
Value at initialization logic input 1	Value before initialization	
Authorization object logic block	Not active	
Emission of logic result	By logic result value change	
Logic result acts on outputs	Active	
Output 1	Yes	
Output 2	Yes	
Output 3	Yes	
Output 4	Yes	
Output 5	Yes	
Output 6	Yes	
Output 7	Yes	
Output 8	Yes	
Output 9	Yes	
Output 10	Yes	
Action if logic result = 0	OFF	
Action if logic result = 1	ON	

3.6.1.1 Configuration of the logic function

Parameter	Description	Value
Logic function type	The input objects are	
	OR linked	OR*
	AND linked	AND

For logic table see: [Appendix](#)

* Default value

Parameter	Description	Value
Number of logic inputs	This parameter determines the number of inputs of the logic block. Up to 4 inputs can be used.	1* 2 3 4

Communication objects:

Block 1: **204 - Logic block 1 – Input 2** (1 Bit – 1.002 DPT_Bool)

205 - Logic block 1 – Input 3 (1 Bit – 1.002 DPT_Bool)

206 - Logic block 1 – Input 4 (1 Bit – 1.002 DPT_Bool)

Block 2: **210 - Logic block 2 – Input 2** (1 Bit – 1.002 DPT_Bool)

211 - Logic block 2 – Input 3 (1 Bit – 1.002 DPT_Bool)

212 - Logic block 2 – Input 4 (1 Bit – 1.002 DPT_Bool)

Parameter	Description	Value
Inverting value of logic input x	The value of logic input x works on the logic block with its object value (0=0; 1=1) with inverted object value (0=1; 1=0)	No* Yes

x= 1 to 4

Parameter	Description	Value
Value at initialization logic input 1	On initialization of the device after a download or after return of the bus power, the value of the logic input is: set to "0" set to "1" set according to the value of the logic input before the initialization occurred	0 1 Value before initialization*

x= 1 to 4


* Default value

3.6.1.2 Logic block authorization

Principle of logic block authorization:

The parameters are set as follows:

- Logic block authorization: 0 = Locked-up, 1 = Authorized
- Action if logic result = 0: Scene 1
- Action if logic result = 1: Scene 2
- Logic input 1 and 2 are AND-linked
- Emission of logic result: On receiving an input telegram

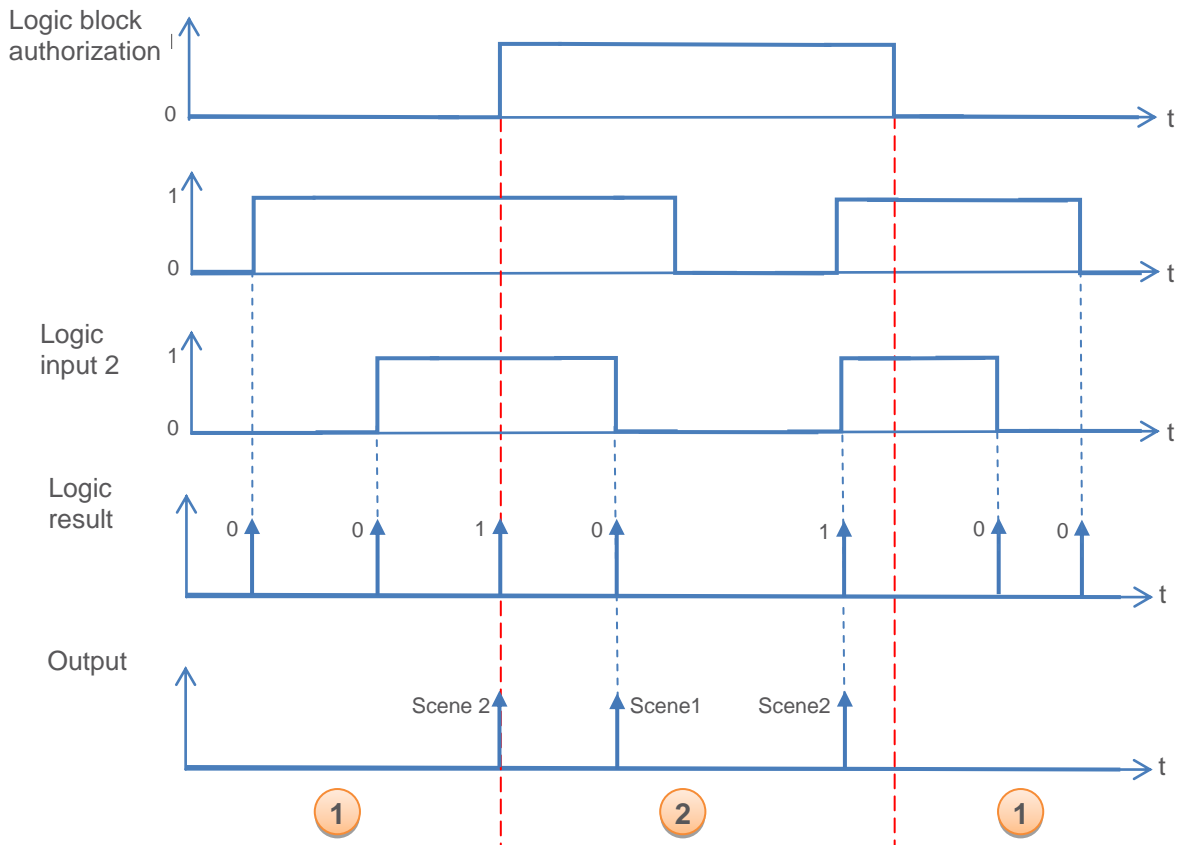

- 1** The logic result has no influence on the output
- 2** The commands from the logic result are executed

Note: The commands from the logic result are executed immediately after authorization, according to the "Logic result after authorization" parameter "Emission".

Parameter	Description	Value
Authorization object logic block	The " Logic block 1 authorization " communication object and related parameters are hidden	Not active*
	The " Logic block 1 authorization " communication object and related parameters are displayed.	Active

Note: If the logic block is locked the logic operation is not processed.

* Default value

Communication objects:

Block 1: **42 - Logic block 1 – Authorization** (1 Bit – 1.003 DPT_Enable)

Block 2: **48 - Logic block 2 – Authorization** (1 Bit – 1.003 DPT_Enable)

Parameter	Description	Value
Value at initialization	On initialization of the device after a download or after return of the bus power, the value of the Logic block 1 authorization object is: set to "0" set to "1" according to the value that the object had before initialization	0 1 Value before initialization*

*Note: This parameter is only visible if the **Authorization object logic block** parameter has the following value: **Active***

Parameter	Description	Value
Polarity	On receipt of a value on the Authorization logic block 1 object, this is locked-up on object value "1" locked-up on object value "0"	0 = Authorized, 1 = Locked-up 0 = Locked-up, 1 = Authorized*

*Note: This parameter is only visible if the **Authorization object logic block** parameter has the following value: **Active***

Parameter	Description	Value
Logic result after authorization	On authorization of the logic blocks: the value of the logic result is immediately ascertained the value of the logic result is ascertained only after receipt of a value on the logic input.	Immediate emission when authorization* No immediate emission

*Note: This parameter is only visible if the **Authorization object logic block** parameter has the following value: **Active***

3.6.1.3 Logic result

Parameter	Description	Value
Emission of logic result	The Logic 1 result object will be sent on: each receipt of a telegram on one of the logic inputs a change in the value of the logic result	By input value change By logic result value change*

* Default value

Parameter	Description	Value
Logic result acts on outputs	The logic results acts: only on the logic 1 result communication object on the logic 1 result communication object and directly on one or more outputs.	Not active* Active

The status of the affected outputs is determined by the parameter action on logic result = x.

Parameter	Description	Value
Output 1...x	The relationship of Output 1-x to the value of Logic 1 result is: directly dependent independent	Yes* No

*Note: This parameter is only visible if the **Logic result acts on outputs** parameter has the following value: **Active***

Parameter	Description	Value
Action if logic result = 0	On the outputs that are directly dependent on Logic 1 result , if the output value = "0", the status: is not changed is switched to the opposite status is selectively switched on is selectively switched off starts timer mode stops timer mode starts one of the 64 scenes adopts the default value given by the parameter Status on preset 1 object = 0 adopts the default value given by the parameter Status on preset 2 object = 0	Maintain status Inversion On OFF* Timer start Timer stop Scene number Preset 1 Preset 2

Note: The Timer mode, Scene function or Preset function of the selected output must be configured. If this is not the case, the status remains unchanged.

* Default value

Parameter	Description	Value
Scene if logic result = 0	This parameter determines the scene number that is activated if the logic result is 0 after re-evaluation.	Scenes 1... 64 Default value: Scene 1

The outputs respond according to the scene numbers and associated parameters

*Note: This parameter is only visible if the **Action if logic result = 0** parameter has the following value: **Scene***

Parameter	Description	Value
Action if logic result = 1	On the outputs that are directly dependent on Logic 1 result , if the output value = "0", the status:	
	is not changed	Maintain status
	is switched to the opposite status	Inversion
	is selectively switched on	ON*
	is selectively switched off	OFF
	starts timer mode	Timer start
	stops timer mode	Timer stop
	starts one of the 64 scenes	Scene number
	adopts the default value given by the parameter Status on preset 1 object = 1	Preset 1
	adopts the default value given by the parameter Status on preset 2 object = 1	Preset 2

Note: The Timer mode, Scene function or Preset function of the selected output must be configured. If this is not the case, the status remains unchanged.

Parameter	Description	Value
Scene if logic result = 1	This parameter determines the scene number that is activated if the logic result is 1 after re-evaluation.	Scenes 1... 64 Default value: Scene 2

The outputs respond according to the scene numbers and associated parameters.

*Note: This parameter is only visible if the **Action if logic result = 1** parameter has the following value: **Scene***

* Default value

3.6.2 Logic block: Shutter

The behaviour is determined by the following parameters:

Note: The description of the parameters is given for logic block 1. The parameters and objects are identical for logic block 2; only the terms will be adapted.

Device: 1.1.2 10-fold switch actuator 4A 230V AC

Outputs 1-10: Function	Logic function type	OR
Outputs 1-10: Function selection	Number of logic input	1
- O1-10: Manual mode ON/OFF	Inverting value of logic input 1	Maintain status
- O1-10: Status indications ON/OFF	Value at initialization logic input 1	Value before initialization
- O1-10: Logic block 1 shutter	Authorization object logic block	Active
- O1-10: Logic block 2 shutter	Value at initialization	Value before initialization
Outputs 1-2: Function selection	Polarity	0 = Locked-up , 1 = Authorized
Output 3: Function selection	Logic result after autorisation	Immediate emission when authorization
Output 4: Function selection	Emission of logic result	By logic result value change
Output 5: Function selection	Logic result acts on outputs	Active
Output 6: Function selection	Output 1	Yes
Output 7: Function selection	Output 2	Yes
Output 8: Function selection	Output 3	Yes
Output 9: Function selection	Output 4	Yes
Output 10: Function selection	Output 5	Yes
Information	Action if logic result = 0	Maintain status
	Action if logic result = 1	Maintain status

3.6.2.1 Configuration of the logic function

Parameter	Description	Value
Logic function type	The input objects are	
	OR linked	OR*
	AND linked	AND

For logic table see: [Appendix](#)

* Default value

Parameter	Description	Value
Number of logic inputs	This parameter determines the number of inputs of the logic block. Up to 4 inputs can be used.	1* 2 3 4

Communication objects:

Block 1: **220 - Logic block 1 – Input 2** (1 Bit – 1.002 DPT_Bool)

221 - Logic block 1 – Input 3 (1 Bit – 1.002 DPT_Bool)

222 - Logic block 1 – Input 4 (1 Bit – 1.002 DPT_Bool)

Block 2: **226 - Logic block 2 – Input 2** (1 Bit – 1.002 DPT_Bool)

227 - Logic block 2 – Input 3 (1 Bit – 1.002 DPT_Bool)

228 - Logic block 2 – Input 4 (1 Bit – 1.002 DPT_Bool)

Parameter	Description	Value
Inverting value of logic input x	The value of logic input x works on the logic block with its object value (0=0; 1=1) with inverted object value (0=1; 1=0)	No* Yes

x= 1 to 4

Parameter	Description	Value
Value at initialization logic input 1	On initialization of the device after a download or after return of the bus power, the value of the logic input is: set to "0" set to "1" set according to the value of the logic input before the initialization occurred	0 1 Value before initialization*

x= 1 to 4


* Default value

3.6.2.2 Logic block authorization

Principle of logic block authorization:

The parameters are set as follows:

- Logic block authorization: 0 = Locked-up, 1 = Authorized
- Action if logic result = 0: Scene 1
- Action if logic result = 1: Scene 2
- Logic input 1 and 2 are AND-linked
- Emission of logic result: On receiving an input telegram

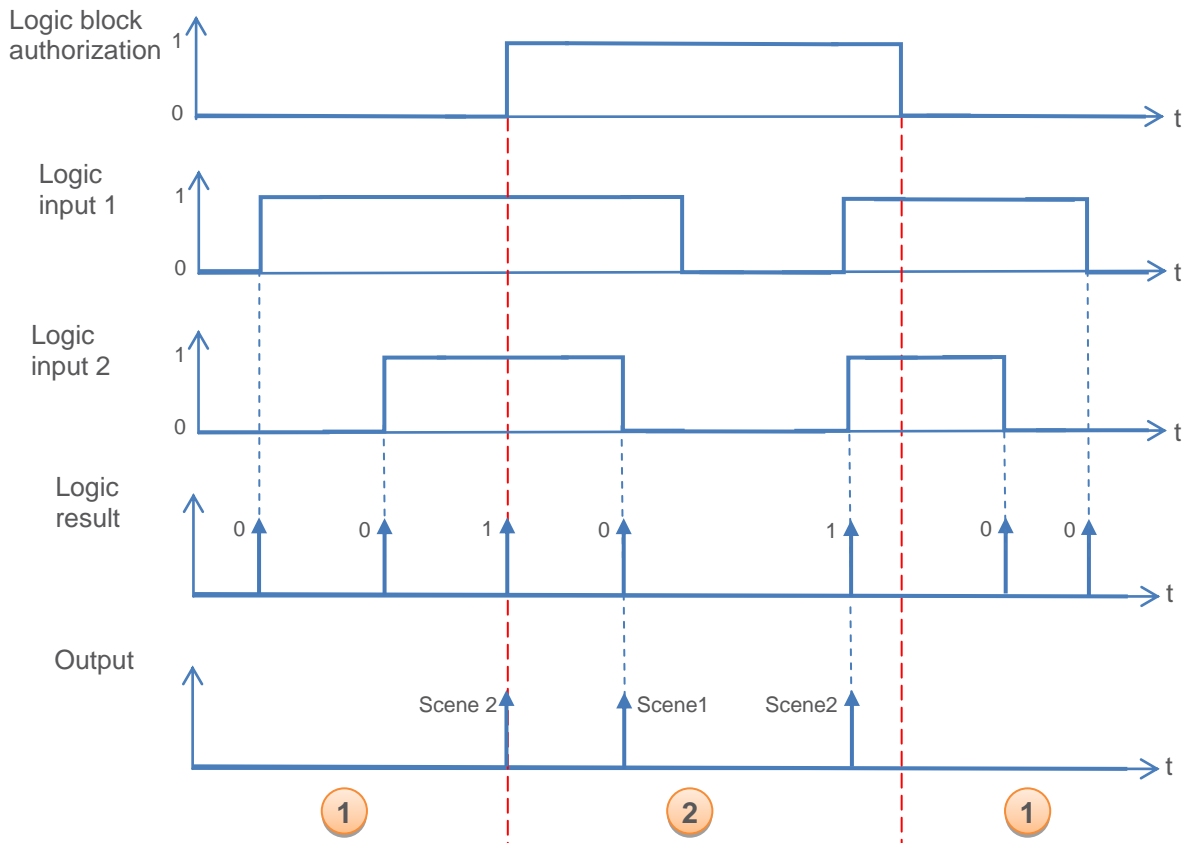

- 1 The logic result has no influence on the output
- 2 The commands from the logic result are executed

Note: The commands from the logic result are executed immediately after authorization, according to the "Logic result after authorization" parameter "Emission".

Parameter	Description	Value
Authorization object logic block	The "Logic block 1 authorization" communication object and related parameters are hidden	Not active*
	The "Logic block 1 authorization" communication object and related parameters are displayed.	Active

Note: If the logic block is locked, the logic operation is not processed and the logic result is set to "0".

* Default value

Communication objects:

Block 1: **218 - Logic block 1 – Authorization** (1 Bit – 1.003 DPT_Enable)

Block 2: **224 - Logic block 2 – Authorization** (1 Bit – 1.003 DPT_Enable)

Parameter	Description	Value
Value at initialization	On initialization of the device after a download or after return of the bus power, the value of the Logic block 1 authorization object is: set to "0" set to "1" set according to the value that the object had before initialization	0 1 Value before initialization*

*Note: This parameter is only visible if the **Authorization object logic block** parameter has the following value: **Active***

Parameter	Description	Value
Polarity	On receipt of a value on the Lock-up logic block 1 object, this is locked-up on object value "1" locked-up on object value "0"	0 = Authorized, 1 = Locked-up 0 = Locked-up, 1 = Authorized*

*Note: This parameter is only visible if the **Authorization object logic block** parameter has the following value: **Active***

Parameter	Description	Value
Logic result after authorization	On authorization of the logic blocks: the value of the logic result is immediately ascertained the value of the logic result is ascertained only after receipt of a value on the logic input.	Immediate emission when authorization* No immediate emission

*Note: This parameter is only visible if the **Authorization object logic block** parameter has the following value: **Active***

3.6.2.3 Logic result

Parameter	Description	Value
Emission of logic result	The Logic 1 result object will be sent on: each receipt of a telegram on one of the logic inputs a change in the value of the logic result	By input value change By logic result value change*

* Default value

Parameter	Description	Value
Logic result acts on outputs	The logic results acts: only on the logic 1 result communication object on the logic 1 result communication object and directly on one or more outputs.	Not active* Active

The status of the affected outputs is determined by the parameter action on logic result = x.

Parameter	Description	Value
Output 1...x	The relationship of Output 1-x to the value of Logic 1 result is: directly dependent independent	Yes* No

*Note: This parameter is only visible if the **Logic result acts on outputs** parameter has the following value: **Active***

Parameter	Description	Value
Action if logic result = 0	Outputs that are directly dependent on Logic 1 result will, on output value = "0": not change close the Up contact Close the Down contact Open both contacts Run to a specific position Run to the position set in a scene Run to the default position set in the Status on preset 1 object = 0 parameter Run to the default position set in the Status on preset 2 object =0 parameter	Maintain status* Up Down Stop Specific position Scene number Preset 1 Preset 2

Note: The Scene function or Preset function of the selected output must be configured. If this is not the case, the status remains unchanged.

Parameter	Description	Value
Position (0-100%)	This parameter determines the position of the shutter or blind to be activated if the logic result is 0 after re-evaluation.	0... 5* ...100

* Default value

Note: This parameter is only visible if the **Action if logic result = 0** parameter has the following value:
Specific position

Parameter	Description	Value
Slat angle (0-100%)	This parameter determines the slat position of the blind to be set if the logic result is 0 after re-evaluation.	0... 5 *...100

Note: This parameter is only visible if the **Action if logic result = 0** parameter has the following value:
Specific position

Parameter	Description	Value
Scene if logic result = 0	This parameter determines the scene number that is activated if the Logic result is 0 after reevaluation.	Scenes 1... 64 Default value: Scene 1

The outputs respond according to the scene numbers and associated parameters

Note: This parameter is only visible if the **Action if logic result = 0** parameter has the following value:
Scene

Parameter	Description	Value
Action if logic result = 1	Outputs that are directly dependent on the Logic 1 result will, on output value = "1": not change close the Up contact close the Down contact open both contacts run to a specific position run to the position set in a Scene run to the default position given for the parameter Status on preset 1 object = 0 run to the default position given for the parameter Status on preset 2 object = 0	Maintain status* Up Down Stop Specific position Scene number Preset 1 Preset 2

Note: The Scene function or Preset function of the selected output must be configured. If this is not the case, the status remains unchanged.

Parameter	Description	Value
Position (0-100%)	This parameter determines the position of the shutter or blind to be activated if the logic result is 1 after re-evaluation.	0... 5 *...100

* Default value

*Note: this parameter is only visible if the **Action if logic result = 1** parameter has the following value:
Specific position*

Parameter	Description	Value
Slat angle (0-100%)	This parameter determines the slat position of the blinds to be set if the logic result is 1 after re-evaluation.	0... 5 *...100

*Note: This parameter is only visible if the **Action if logic result = 1** parameter has the following value:
Specific position*

Parameter	Description	Value
Scene if logic result = 1	This parameter determines the scene number that is activated if the Logic result is 1 after revaluation.	Scenes 1... 64 Default value: Scene 1

The outputs respond according to the scene numbers and associated parameters

*Note: This parameter is only visible if the **Action if logic result = 1** parameter has the following value:
Scene*

* Default value

3.7 Device diagnosis

The **Device diagnosis object** allows notifications about the operating status of the device to be sent via the KNX bus.

This information is sent periodically and/or on status change.

The **Device diagnosis** object allows reporting of current faults according to the device and application. It also allows sending of the position of the switch on the front of the device and the number of the output that is affected by the fault(s).

The **Device diagnosis** object is a 6-byte object that is composed as described below:

Byte number	6 (MSB)	5		4	3	2	1 (LSB)
Use	Switch position	Application type	Output number	Error codes			

Details of the bytes:

- **Bytes 1 to 4:** correspond to the error codes.

MSB	b31	b30	b29	b28	b27	b26	b25	b24	b23	b22	b21	b20	b19	b18	b17	b16	b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0	LSB	
	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	16	x	x	x	x	x	x	x	x	x	7	x	x	x	3	2	x	

No.	Faults
2	Wrong context: the user's parameters are not transferable. The standard parameters are restored.
3	TP communication out of operation: Communication via the KNX bus was not present on the previous start.
7	Minimum switching time not complied with: The device is equipped with a mechanism for limiting the number of switching cycles per minute of the output contact. If the user requires a number of switching cycles that is greater than this limit, this bit informs the user that his command was not carried out.
16	Abnormal number of restarts: This bit is use for notification of repeated restarts and/or a restart triggered by a Watch-Dog. Such a restart is not necessarily apparent to the user from the function, rather it is manifest as a disturbed environment or a bad contact of the power supply.

Note: The use of the standard bits depends on the type of device used (switch actuator, dimmer, shutter/blind, etc.). Certain bits are same for all devices and others are application-specific.

- **Byte 5:** corresponds to the application type and the number of the output affected by the error.

MSB	b7	b6	b5	b4	b3	b2	b1	b0	LSB
	Application type			Output number					
	0 = not defined			0 = device error					
	1 = switch actuator			1 = output 1					
	2 = shutter/blind			2 = output 2					
	3 = dimmer							
				Y = output Y					

Note: Y is the placeholder for the maximum number of outputs.


* Default value

- **Byte 6:** Switch position

MSB							LSB
b7	b6	b5	b4	b3	b2	b1	b0
x	x	x	x	x	x	x	1

1: 0 = Automatic mode/1 = manual mode

Note: bits marked with an x are not used.

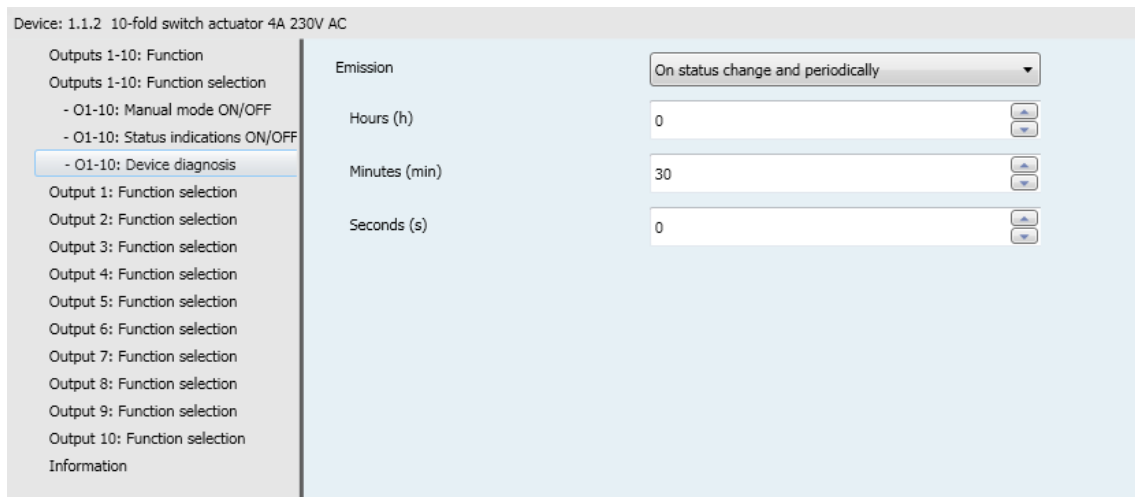

Parameter	Description	Value
Emission	The Device diagnosis communication object is sent:	
	On each change	On status change*
	Periodically after a configurable time	Periodically
	On change and periodically after a configurable time	On status change and periodically

Parameter	Description	Value
Hours (h)	This parameter determines the time between the individual transmissions of the Device diagnosis object.	0 hours: 0 to 23 h
Minutes (min)		30 minutes: 0 to 59 min.
Seconds (s)		0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.


Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically**

* Default value

3.8 Functions of each switch actuator


This parameter window is used to set the device outputs. These parameters are available individually for each output.

3.8.1 Function selection

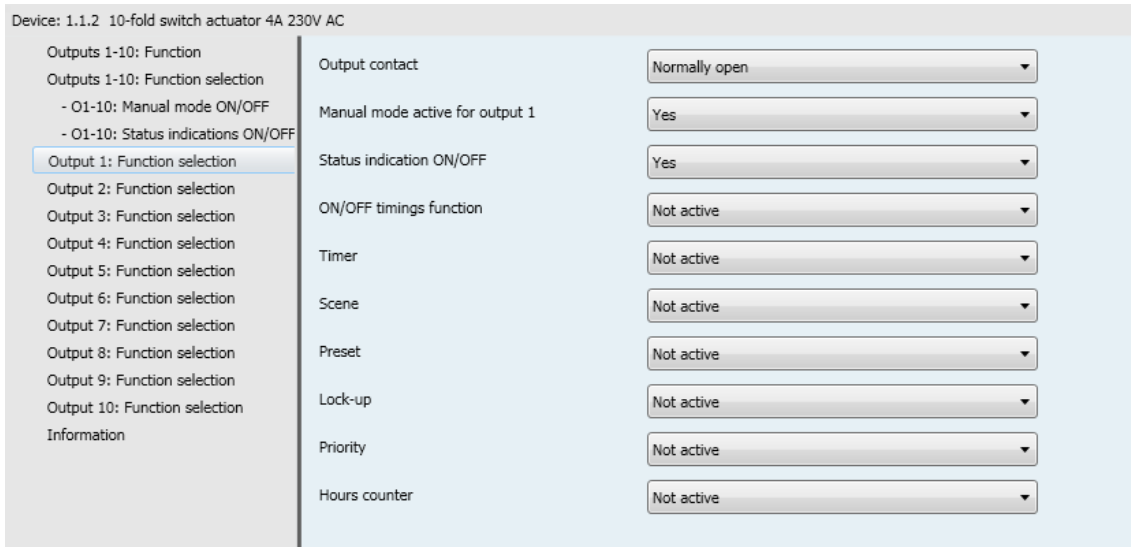

Parameter	Description	Value
Output contact	On receipt of an ON command: the output relay closes the output relay opens	Normally open* Normally closed

Principle:

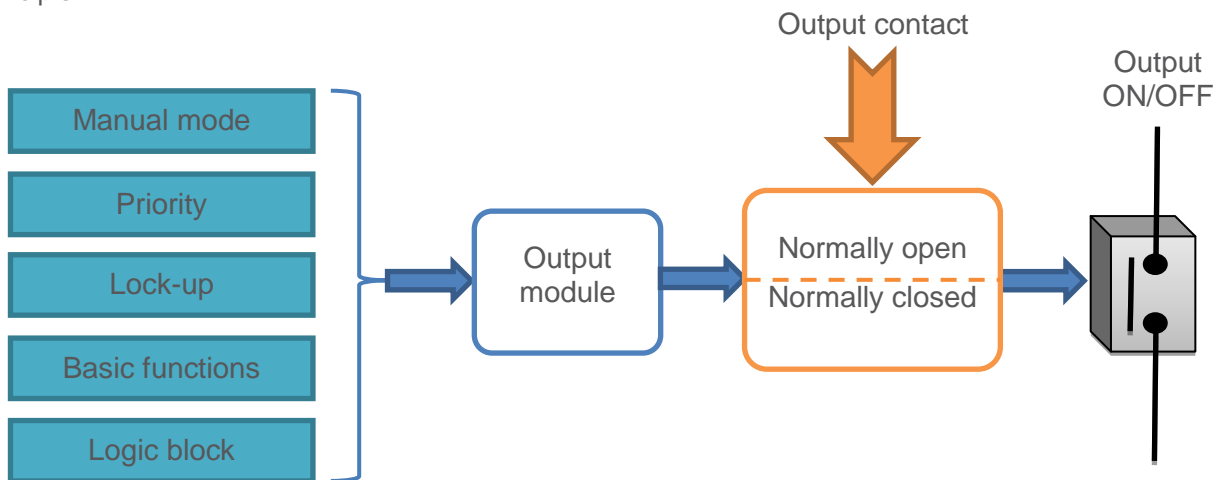

* Default value

Parameter	Description	Value
Active for output x X = 1 to 10	This output can be controlled in manual mode.	Yes*
	This output is excluded from manual mode	No

Parameter	Description	Value
Status indication ON/OFF	The Status indication ON/OFF communication object is hidden	No
	displayed, the status indication can be transmitted over the bus.	Yes*

Communication objects: **3 - Output 1 – Status indication ON/OFF** (1 Bit – 1.001 DPT_Switch)
23 - Output 2 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)
43 - Output 3 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)
63 - Output 4 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)
83 - Output 5 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)
103 - Output 6 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)
123 - Output 7 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)
143 - Output 8 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)
163 - Output 9 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)
183 - Output 10 – Status indication ON/OFF (1 Bit – 1.001 DPT_Switch)

Note: The transmission conditions for the Status indication objects must be set in the parameter Register "O1-Ox: Status indication ON/OFF" is set

Parameter	Description	Value
ON/OFF timings function	The delay tab and the associated parameters and objects are hidden	Not active*
	displayed	Active

For configuration see section: [ON/OFF timings function](#)

Parameter	Description	Value
Timer	The Timer tab and the associated parameters and objects are hidden	Not active*
	displayed	Active

* Default value

Communication objects: **4 - Output 1 – Timer** (1 Bit – 1.001 DPT_Switch)
24 - Output 2 – Timer (1 Bit – 1.001 DPT_Switch)
44 - Output 3 – Timer (1 Bit – 1.001 DPT_Switch)
64 - Output 4 – Timer (1 Bit – 1.001 DPT_Switch)
84 - Output 5 – Timer (1 Bit – 1.001 DPT_Switch)
104 - Output 6 – Timer (1 Bit – 1.001 DPT_Switch)
124 - Output 7 – Timer (1 Bit – 1.001 DPT_Switch)
144 - Output 8 – Timer (1 Bit – 1.001 DPT_Switch)
164 - Output 9 – Timer (1 Bit – 1.001 DPT_Switch)
184 - Output 10 – Timer (1 Bit – 1.001 DPT_Switch)

For configuration see section: [Timer](#)

Parameter	Description	Value
Scene	The Scenes tab and the associated parameters and objects are	
	hidden	Not active*
	displayed	Active

Communication objects: **6 - Output 1 – Scene** (1 Byte – 17.001 DPT_SceneNumber)
26 - Output 2 – Scene (1 Byte – 17.001 DPT_SceneNumber)
46 - Output 3 – Scene (1 Byte – 17.001 DPT_SceneNumber)
66 - Output 4 – Scene (1 Byte – 17.001 DPT_SceneNumber)
86 - Output 5 – Scene (1 Byte – 17.001 DPT_SceneNumber)
106 - Output 6 – Scene (1 Byte – 17.001 DPT_SceneNumber)
126 - Output 7 – Scene (1 Byte – 17.001 DPT_SceneNumber)
146 - Output 8 – Scene (1 Byte – 17.001 DPT_SceneNumber)
166 - Output 9 – Scene (1 Byte – 17.001 DPT_SceneNumber)
186 - Output 10 – Scene (1 Byte – 17.001 DPT_SceneNumber)

For configuration see section: [Scene ON/OFF](#)

Parameter	Description	Value
Preset	The Preset tab and the associated parameters and objects are	
	hidden	Not active*
	displayed for 1 Preset object	1 preset object
	displayed for 2 Preset objects	2 preset objects

Note: When the value of this parameter changes, the associated parameters and group addresses are deleted

* Default value

Preset 1 communication objects:

- 7 - Output 1 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
- 27 - Output 2 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
- 47 - Output 3 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
- 67 - Output 4 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
- 87 - Output 5 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
- 107 - Output 6 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
- 127 - Output 7 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
- 147 - Output 8 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
- 167 - Output 9 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)
- 187 - Output 10 – Preset 1 (1 Bit – 1.022 DPT_Scene_AB)

Preset 2 communication objects:

- 8 - Output 1 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
- 28 - Output 2 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
- 48 - Output 3 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
- 68 - Output 4 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
- 88 - Output 5 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
- 108 - Output 6 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
- 128 - Output 7 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
- 148 - Output 8 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
- 168 - Output 9 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)
- 188 - Output 10 – Preset 2 (1 Bit – 1.022 DPT_Scene_AB)

For configuration see section: [Preset ON/OFF](#)

Parameter	Description	Value
Lock-up	The Lock-up tab and the associated parameters and objects are hidden	Not active*
	displayed for 1 lock-up object	1 lock-up object
	displayed for 2 lock-up objects	2 lock-up objects

Lock-up 1 communication objects

- 11 - Output 1 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
- 31 - Output 2 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
- 51 - Output 3 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
- 71 - Output 4 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
- 91 - Output 5 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
- 111 - Output 6 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
- 131 - Output 7 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
- 151 - Output 8 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
- 171 - Output 9 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)
- 191 - Output 10 – Lock-up 1 (1 Bit – 1.003 DPT_Enable)

* Default value

Lock-up 2 communication objects:

- 12 - Output 1 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 32 - Output 2 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 52 - Output 3 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 72 - Output 4 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 92 - Output 5 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 112 - Output 6 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 132 - Output 7 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 152 - Output 8 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 172 - Output 9 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 192 - Output 10 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)

For configuration see section: [Lock-up ON/OFF](#)

Parameter	Description	Value
Priority	The Priority tab and the associated parameters and objects are hidden displayed	Not active* Active

The device responds to telegrams received via the **Priority** object, as given in the following table:

Telegram received by the priority operation object		Status of the outputs
Bit 1	Bit 2	
0	0	End of the priority
0	1	End of the priority
1	0	Priority OFF
1	1	Priority ON

Communication objects:

- 14 - Output 1 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
- 34 - Output 2 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
- 54 - Output 3 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
- 74 - Output 4 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
- 94 - Output 5 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
- 114 - Output 6 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
- 134 - Output 7 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
- 154 - Output 8 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
- 174 - Output 9 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
- 194 - Output 10 – Priority** (2 Bit – 2.002 DPT_Bool_Control)

For configuration see section: [Priority ON/OFF](#)

* Default value

Parameter	Description	Value
Hours counter	The Hours counter tab and the associated parameters and objects are	
	hidden	Not active*
	displayed	Active

A telegram can be transmitted via the **Operating h. counter setpoint reached** object, in accordance with a programmable setpoint.

It is also possible to reset the count value via a "1" signal on the **Reset hours counter value** object

Communication objects:

- 16 - Output 1 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)
- 36 - Output 2 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)
- 56 - Output 3 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)
- 76 - Output 4 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)
- 96 - Output 5 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)
- 116 - Output 6 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)
- 136 - Output 7 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)
- 156 - Output 8 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)
- 176 - Output 9 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)
- 196 - Output 10 – Hours counter value (2 Byte – 7.001 DPT_16_Bit_Counter)

- 17 - Output 1 – Reset hours counter (1 Bit – 1.015 DPT_Reset)
- 37 - Output 2 – Reset hours counter (1 Bit – 1.015 DPT_Reset)
- 57 - Output 3 – Reset hours counter (1 Bit – 1.015 DPT_Reset)
- 77 - Output 4 – Reset hours counter (1 Bit – 1.015 DPT_Reset)
- 97 - Output 5 – Reset hours counter (1 Bit – 1.015 DPT_Reset)
- 117 - Output 6 – Reset hours counter (1 Bit – 1.015 DPT_Reset)
- 137 - Output 7 – Reset hours counter (1 Bit – 1.015 DPT_Reset)
- 157 - Output 8 – Reset hours counter (1 Bit – 1.015 DPT_Reset)
- 177 - Output 9 – Reset hours counter (1 Bit – 1.015 DPT_Reset)
- 197 - Output 10 – Reset hours counter (1 Bit – 1.015 DPT_Reset)

- 18 - Output 1 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)
- 38 - Output 2 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)
- 58 - Output 3 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)
- 78 - Output 4 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)
- 98 - Output 5 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)
- 118 - Output 6 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)
- 138 - Output 7 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)
- 158 - Output 8 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)
- 178 - Output 9 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)
- 198 - Output 10 – Hours counter setpoint reached (1 Bit – 1.002 DPT_Bool)

For configuration see section: [Hours counter](#)

* Default value

3.8.2 ON/OFF timings function

Device: 1.1.2 10-fold switch actuator 4A 230V AC

Outputs 1-10: Function

Outputs 1-10: Function selection

- O1-10: Manual mode ON/OFF
- O1-10: Status indications ON/OFF

Output 1: Function selection

- O1: ON/OFF object timings

Output 2: Function selection

Output 3: Function selection

Output 4: Function selection

Output 5: Function selection

Output 6: Function selection

Output 7: Function selection

Output 8: Function selection

Output 9: Function selection

Output 10: Function selection

Information

Delays for ON/OFF objects

Switching and tripping delay

Switching delay (h) 0

Switching delay (min) 3

Switching delay (s), minimum value 1s 0

Tripping delay (h) 0

Tripping delay (min) 3

Tripping delay (s), minimum value 1s 0

Timer/toggle switch changeover for object ON/OFF

Active

Hours (h) 1

Minutes (min) 0

Seconds (s), minimum value 1s 0

Additional time limited toggle switch function

Active

Hours (h) 1

Minutes (min) 0


Seconds (s), minimum value 1s 0

3.8.2.1 Delays for ON/OFF objects


Parameter	Description	Value
Delays for ON/OFF objects	The parameters for time-delayed switching of the outputs are	Not active* Switching delay Tripping delay Switching and tripping delay
	hidden	
	displayed for Switching delay	
	displayed for Tripping delay	
	displayed for Switching and tripping delay	

* Default value


Switching delay: Allows the configuration of a delay between the switch-on command and the switching of the output contact.

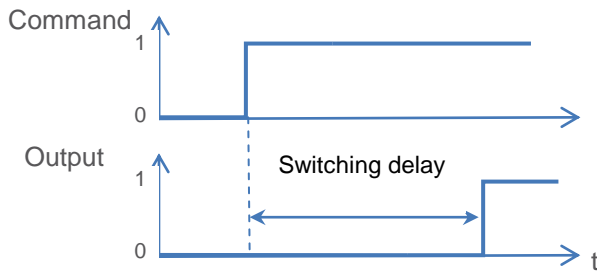

Tripping delay: Allows the configuration of a delay between the switch-off command and the switching of the output contact.

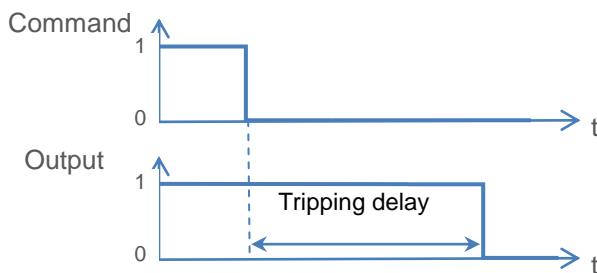

Switching and tripping delay: Allows the configuration of a delay between the switch-on command and the switching of the output contact, as well as between the switch-off command and the switching of the output contact.

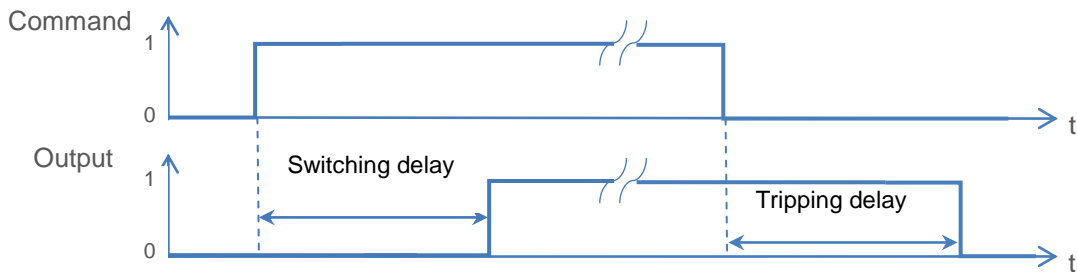

Parameter	Description	Value
Switching delay	This parameter defines the delay between the switch-on command and the switching of the output contact.	0 hours: 0 to 23 h 3 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Delays for ON/OFF objects** parameter has the following value: **Switching delay** or **Switching and tripping delay**.*

Parameter	Description	Value
Tripping delay	This parameter defines the delay between the switch-off command and the switching of the output contact.	0 hours: 0 to 23 h 3 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Delays for ON/OFF objects** parameter has the following value: **Tripping delay** or **Switching and tripping delay**.*

* Default value

3.8.2.2 Timer/toggle switch changeover for ON/OFF object

This function switches the output channels between toggle switch and timer mode. The **ON/OFF** object is used for both functions.


Example: Switching function daytime and Time-limited OFF function at night.

During the day, the button is used as a switch. In the evenings, the button is used as a time-limited OFF switch, so that the light will turn off automatically.

Parameter	Description	Value
Timer/toggle switch changeover for ON/OFF object	The parameters for a switch-over between toggle switch and timer modes for the ON/OFF object are	
	hidden	Not active*
	displayed	Active

Active: The associated parameters and objects are displayed.

- If the **Timer/toggle switch changeover** object receives the value "1", the toggle-switch mode function is activated.
The ON/OFF switching of the output is performed as usual via the **ON/OFF object**.
- If the **Timer/toggle switch changeover** object receives the value "0", the timer mode function is activated.
 - o If the **ON/OFF object** receives the value "1", the output is switched ON.
After expiry of a configurable time, the output is automatically switched OFF.
 - o If the **ON/OFF object** receives the value "0", the output is switched OFF.

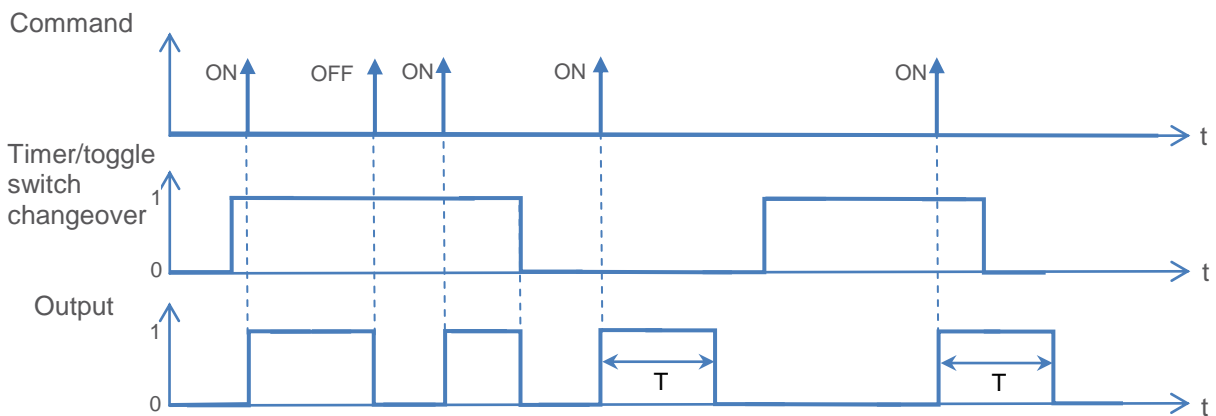

Communication objects:

- 1 - Output 1 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
- 21 - Output 2 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
- 41 - Output 3 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
- 61 - Output 4 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
- 81 - Output 5 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
- 101 - Output 6 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
- 121 - Output 7 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
- 141 - Output 8 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
- 161 - Output 9 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)
- 181 - Output 10 – Timer/toggle switch changeover (1 Bit – 1.001 DPT_Switch)

* Default value

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter sets the length of the timer operation, if this is activated.	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

Note: This parameter is only visible if the **Timer/toggle switch changeover** parameter for the switching object has the following value: **Active**

3.8.2.3 Time-limited OFF


The Time-limited OFF function enables automatic switch off after a programmable **Time-limited OFF** time.

The output works as a normal switch actuator but is switched off after a given time for security.

Example: Attic, the lighting can be switched normally but switches off after not more than 3 hours.

Parameter	Description	Value
Additional time limited toggle switch function	The parameters for setting the Time-limited OFF time are hidden displayed	Not active* Active

- Function diagram

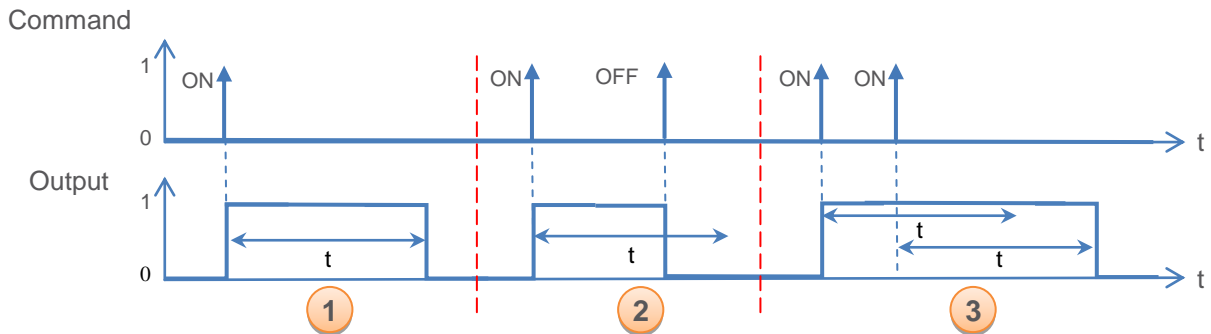

- 1 Emission of an ON command: The output which is at ON will switch to OFF on expiry of the **Time-limited OFF** time.
- 2 Emission of an ON command: The output switches to ON.
Emission of an OFF command before expiry of the **Time-limited OFF** time, t: The output switches to OFF
- 3 Emission of an ON command: The output switches to ON.
Emission of an ON command before expiry of the **Time-limited OFF** time, t: The output remains at ON and the **Time-limited OFF** time, t, is re-started.

* Default value

Communication objects:

- 2 - Output 1 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
- 22 - Output 2 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
- 42 - Output 3 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
- 62 - Output 4 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
- 82 - Output 5 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
- 102 - Output 6 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
- 122 - Output 7 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
- 142 - Output 8 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
- 162 - Output 9 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)
- 182 - Output 10 – Time limited toggle switch (1 Bit – 1.001 DPT_Switch)

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter sets the length of the timer operation for the Time-limited toggle switch, if this is activated.	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Additional time limited toggle switch function** parameter has the following value: **Active***

3.8.3 Timer

The timer function can switch a lighting circuit on or off for a configurable period.

According to the selected operating mode of the timer, the output can be turned ON or OFF for a determined period of time. The timer may be interrupted before expiry of the delay time. A programmable Cut-OFF pre-warning announces the end of the delay time by a 1-second inversion of the output status.

Device: 1.1.2 10-fold switch actuator 4A 230V AC

<ul style="list-style-type: none"> Outputs 1-10: Function Outputs 1-10: Function selection <ul style="list-style-type: none"> - O1-10: Manual mode ON/OFF - O1-10: Status indications ON/OFF Output 1: Function selection <ul style="list-style-type: none"> - O1: Timer Output 2: Function selection Output 3: Function selection Output 4: Function selection Output 5: Function selection Output 6: Function selection Output 7: Function selection Output 8: Function selection Output 9: Function selection Output 10: Function selection Information 	<table style="width: 100%; border-collapse: collapse;"> <tr> <td>Timer operation</td> <td>ON</td> </tr> <tr> <td>Timer duration (h)</td> <td>0</td> </tr> <tr> <td>Timer duration (min)</td> <td>3</td> </tr> <tr> <td>Timer duration (s), minimum value 1s</td> <td>0</td> </tr> <tr> <td>Cut-OFF pre-warning</td> <td>Active</td> </tr> <tr> <td>Hours (h)</td> <td>0</td> </tr> <tr> <td>Minutes (min)</td> <td>0</td> </tr> <tr> <td>Seconds (s)</td> <td>30</td> </tr> <tr> <td>Timer interruption</td> <td>Yes</td> </tr> <tr> <td>Timer retriggerability</td> <td>Yes</td> </tr> <tr> <td>Timer duration extension (10 first seconds)</td> <td>Unlimited</td> </tr> <tr> <td>Timer duration modifiable through object</td> <td>Not active</td> </tr> </table>	Timer operation	ON	Timer duration (h)	0	Timer duration (min)	3	Timer duration (s), minimum value 1s	0	Cut-OFF pre-warning	Active	Hours (h)	0	Minutes (min)	0	Seconds (s)	30	Timer interruption	Yes	Timer retriggerability	Yes	Timer duration extension (10 first seconds)	Unlimited	Timer duration modifiable through object	Not active
Timer operation	ON																								
Timer duration (h)	0																								
Timer duration (min)	3																								
Timer duration (s), minimum value 1s	0																								
Cut-OFF pre-warning	Active																								
Hours (h)	0																								
Minutes (min)	0																								
Seconds (s)	30																								
Timer interruption	Yes																								
Timer retriggerability	Yes																								
Timer duration extension (10 first seconds)	Unlimited																								
Timer duration modifiable through object	Not active																								

* Default value

3.8.3.1 Timer operation

Parameter	Description	Value
Timer operation	When the timer is active, the output for the Timer duration is switched ON switched OFF switched alternately ON and OFF (blink time is configurable via additional parameters)	ON* OFF Blinking

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the timer duration.	0 hours: 0 to 23 h 3 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

Parameter	Description	Value
Blinking ON duration (s)	This parameter determines the closing duration of the output contact when blinking.	5 seconds: 5 to 240 s

*Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking***

Parameter	Description	Value
Blinking OFF duration (s)	This parameter determines the opening duration of the output contact when blinking.	5 seconds: 5 to 240 s

*Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking***

Parameter	Description	Value
Output status during blinking function	When the switch actuator is blinking, the Status indication ON/OFF object sends the value "1" = ON the value "0" = OFF the values "1" and "0" alternately (The status object blinks accordingly)	ON* OFF ON/OFF

*Note: This parameter is only visible if the **Timer operation** parameter has the following value: **Blinking***

* Default value

3.8.3.2 Cut-OFF pre-warning

Parameter	Description	Value
Cut-OFF pre-warning	Before expiry of the timer delay there is no warning a warning through a 1-second inversion of the output status. The lead time of this warning can be set.	Not active Active*

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the lead time of the cut-OFF pre-warning	0 hours: 0 to 23 h 0 minutes: 0 to 59 min. 30 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Cut-OFF pre-warning** parameter has the following value:
Active*

Note: If the lead time of the cut-OFF pre-warning is greater than the duration of the timer, the cut-OFF pre-warning is not triggered.

3.8.3.3 Configuration

Parameter	Description	Value
Timer interruption	On receiving the value "0" on the Timer communication object, the timing is interrupted not interrupted	Yes* No

Parameter	Description	Value
Timer retriggerability	The parameter Timer duration extension (10 first seconds) is hidden displayed	No Yes*

* Default value

Parameter	Description	Value
Timer duration extension (10 first seconds)	If, during the first 10 seconds of the timer duration, on the Timer communication object multiple commands with the value "1" are received, it is multiplied unlimited times. multiplied a maximum of 1x multiplied a maximum of 2x multiplied a maximum of 3x multiplied a maximum of 4x multiplied a maximum of 5x.	Unlimited* 1-time duration extension 2-time duration extension 3-time duration extension 4-time duration extension 5-time duration extension

Parameter	Description	Value
Timer duration modifiable through object	The Timer duration communication object is hidden displayed, the timer duration can be transmitted via the bus.	Not active* Active

Communication objects: **5 - Output 1 – Timer duration** (3 Byte – 10.001 DPT_TimeOfDay)
25 - Output 2 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)
45 - Output 3 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)
65 - Output 4 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)
85 - Output 5 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)
105 - Output 6 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)
125 - Output 7 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)
145 - Output 8 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)
165 - Output 9 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)
185 - Output 10 – Timer duration (3 Byte – 10.001 DPT_TimeOfDay)

* Default value

3.8.4 Scene

Device: 1.1.2 10-fold switch actuator 4A 230V AC

<ul style="list-style-type: none"> Outputs 1-10: Function Outputs 1-10: Function selection <ul style="list-style-type: none"> - O1-10: Manual mode ON/OFF - O1-10: Status indications ON/OFF Output 1: Function selection <ul style="list-style-type: none"> - O1: Scenes Output 2: Function selection Output 3: Function selection Output 4: Function selection Output 5: Function selection Output 6: Function selection Output 7: Function selection Output 8: Function selection Output 9: Function selection Output 10: Function selection Information 	<p>Number of scenes used <input type="text" value="8"/></p> <p>Scenes memorisation by long key press <input type="text" value="Active"/></p> <p>Scenes memorisation acknowledgment (Output status inversed for 3s) <input type="text" value="Not active"/></p> <p>Output status for scene 1 <input type="text" value="Not active"/></p> <p>Output status for scene 2 <input type="text" value="Not active"/></p> <p>Output status for scene 3 <input type="text" value="Not active"/></p> <p>Output status for scene 4 <input type="text" value="Not active"/></p> <p>Output status for scene 5 <input type="text" value="Not active"/></p> <p>Output status for scene 6 <input type="text" value="Not active"/></p> <p>Output status for scene 7 <input type="text" value="Not active"/></p> <p>Output status for scene 8 <input type="text" value="Not active"/></p> <p>Blinking ON duration (s) <input type="text" value="5"/></p> <p>Blinking OFF duration (s) <input type="text" value="5"/></p> <p>Output status during blinking function <input type="text" value="ON"/></p>
---	---

Parameter	Description	Value
Number of scenes used	This parameter determines the number of scenes used.	8 * - 16 - 24 - 32 - 48 - 64

Note: If the Scene number received on the Scene object is greater than the maximum number of scenes, the status of the output remains unchanged.

Parameter	Description	Value
Scene memorisation by long key press	This parameter allows learning and storing of a scene by, for example, a long press (> 5 seconds) of the corresponding push button.	Not active Active*

* Default value

Learning and storing scenes


This process is used to change and store a scene. For example, by locally pressing the key in the room or by emission of the values from a visualization.

To access and store scenes, the following values must be sent.

Scene number	Access scene (object value 1-byte)	Store scene (object value 1-byte)
1-64	= Scene number -1	= Scene number +128
Examples		
1	0	128
2	1	129
3	2	130
...	...	
64	63	191

Here is the scene memorisation for local switches, for example.

- Activate scene by briefly pressing the transmitter that starts it,
- The outputs (lights, shutters, etc.) are set in the desired state using the usual local control devices (buttons, remote control, etc.),
- Memorise the status of the outputs with a press greater than 5 seconds long on the transmitter that starts the scene. The memorisation can be displayed by short-term activation of the outputs.

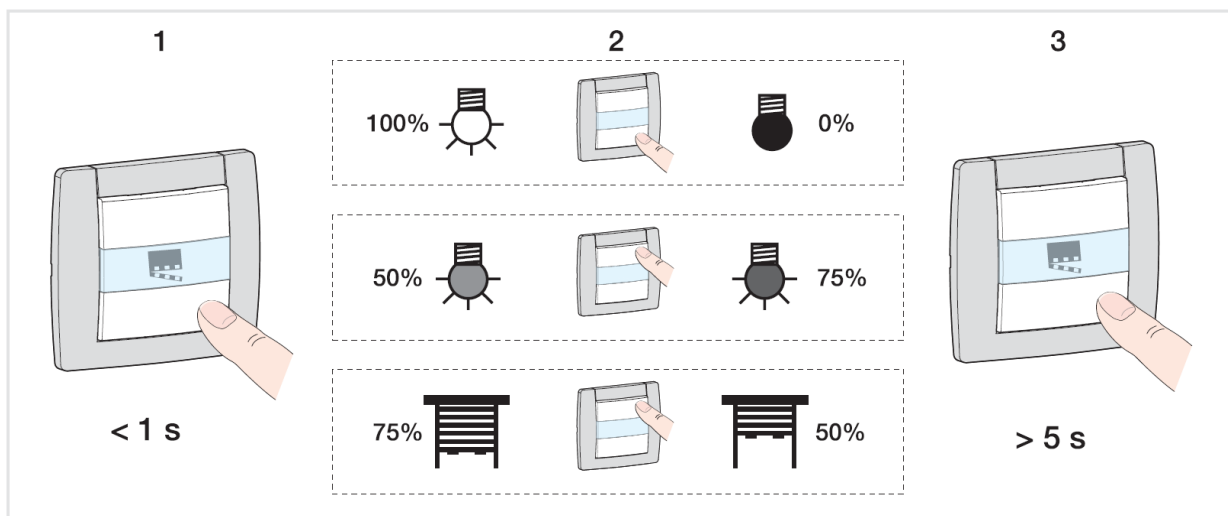

Parameter	Description	Value
Scenes memorisation acknowledgment	Memorisation of a scene is not acknowledged acknowledged by the output by a 3 second long inversion of the output status.	Not active* Active

* Default value

Parameter	Description	Value
Output status for scene X	On activation of Scene X, the output is not altered switched ON switched OFF switched alternately ON and OFF (blink time is configurable via additional parameters)	Not active* On Off Blinking

X = 1 to 64

*Note: Each output has up to 64 scenes available, in accordance with the **Number of scenes used** parameter*

*Note: Local storage of the scene is not recorded if the **Output status for scene x** parameter is not active or is blinking.*

Parameter	Description	Value
Blinking ON duration (s)	This parameter determines the closing duration of the output contact when blinking.	5 seconds: 5 to 240 s

*Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking***

Parameter	Description	Value
Blinking OFF duration (s)	This parameter determines the opening duration of the output contact when blinking.	5 seconds: 5 to 240 s

*Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking***

Parameter	Description	Value
Output status during blinking function	When the switch actuator is blinking, the Status indication ON/OFF object sends the value "1" = ON the value "0" = OFF the values "1" and "0" alternately (The status object blinks accordingly)	ON* OFF ON/OFF

*Note: This parameter applies to all scenes involving the respective output, which has the following value: **Blinking***

* Default value

3.8.5 Preset

Device: 1.1.2 10-fold switch actuator 4A 230V AC

<ul style="list-style-type: none"> Outputs 1-10: Function Outputs 1-10: Function selection <ul style="list-style-type: none"> - O1-10: Manual mode ON/OFF - O1-10: Status indications ON/OFF Output 1: Function selection <ul style="list-style-type: none"> - O1: Preset Output 2: Function selection Output 3: Function selection Output 4: Function selection Output 5: Function selection Output 6: Function selection Output 7: Function selection Output 8: Function selection Output 9: Function selection Output 10: Function selection Information 	<p>Preset authorization objects</p> <p>Value of authorization preset 1 at initialization</p> <p>Value of authorization preset 2 at initialization</p> <p>Polarity of Preset 1 authorization object</p> <p>Polarity of Preset 2 authorization object</p> <p>Status if preset 1 object = 0</p> <p>Scene for preset 1 = 0</p> <p>Status if preset 1 object = 1</p> <p>Blinking ON duration (s)</p> <p>Blinking OFF duration (s)</p> <p>Output status during blinking function</p> <p>Status if preset 2 object = 0</p> <p>Status if preset 2 object = 1</p>	<p>Active</p> <p>Value before initialization</p> <p>Value before initialization</p> <p>0 = Locked-up , 1 = Authorized</p> <p>0 = Locked-up , 1 = Authorized</p> <p>Scene number</p> <p>1</p> <p>Blinking</p> <p>5</p> <p>5</p> <p>ON</p> <p>Maintain status</p> <p>Maintain status</p>
---	--	--


The Preset function is used to switch an output into various predefined states. The preset function is activated via 1-bit format objects.

Principle of Preset authorization:

The parameters are set as follows:

- Polarity of Preset 1 authorization object: 0 = Locked-up, 1 = Authorized
- Polarity of Preset 2 authorization object: 0 = Locked-up, 1 = Authorized
- Position in % if preset 1 = 0: ON
- Position in % if preset 1 = 1: OFF
- Position in % if preset 2 = 0: Scene1
- Position in % if preset 2 = 1: Scene 2

* Default value

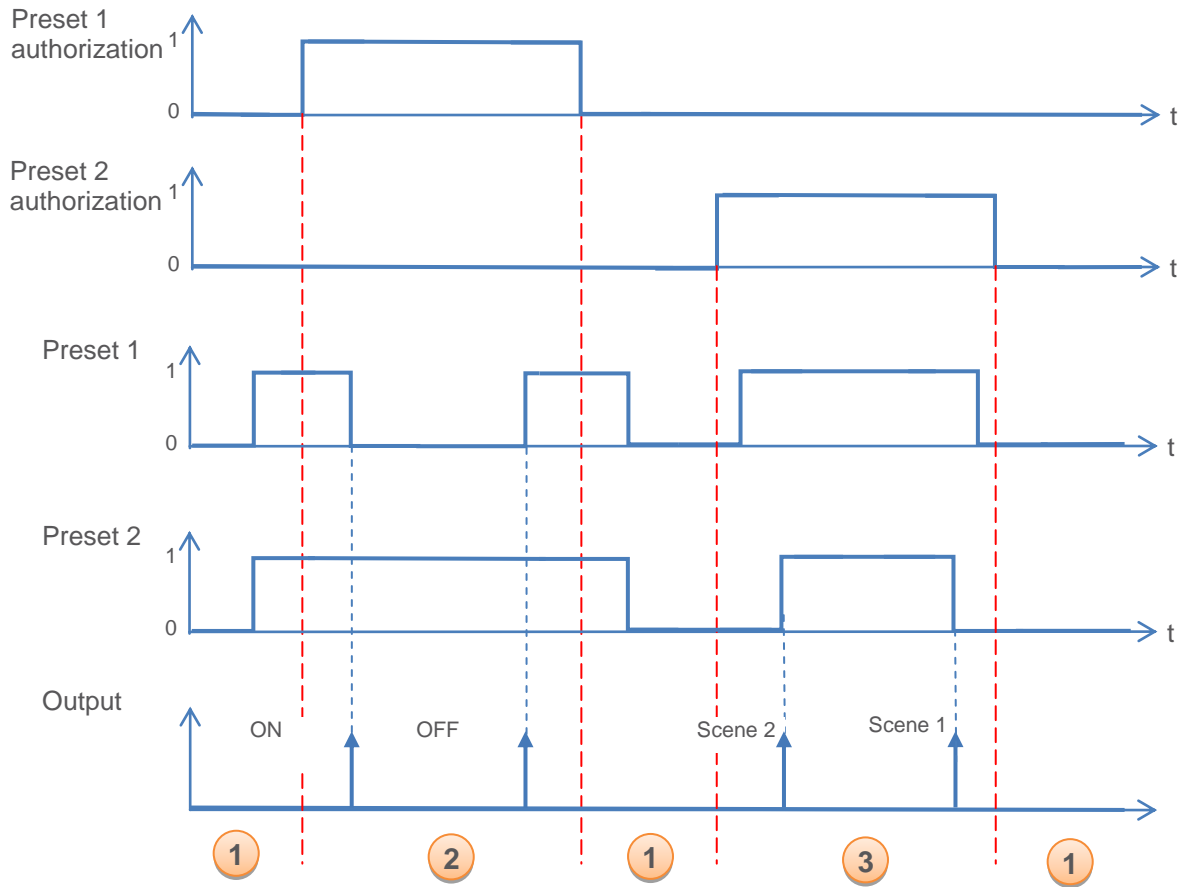

- 1 The preset inputs have no influence on the output
- 2 The commands from Preset 1 are executed
- 3 The commands from Preset 2 are executed

Note: The commands from the Preset will not be executed immediately after authorization, but only when the value of the Preset changes.

Parameter	Description	Value
Preset authorization objects	The " Preset 1 authorization " communication object and the related parameters are hidden displayed This object allows the authorization or lock-up of the Preset 1 function via a KNX telegram.	Not active* Active

Note: The number of available Preset objects is dependent on the **Preset** parameter. A maximum of two of these objects can be available.

* Default value

Communication objects: **9 - Output 1 – Preset 1 authorization** (1 Bit – 1.003 DPT_Enable)
29 - Output 2 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
49 - Output 3 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
69 - Output 4 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
89 - Output 5 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
109 - Output 6 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
129 - Output 7 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
149 - Output 8 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
169 - Output 9 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
189 - Output 10 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)

Communication objects: **10 - Output 1 – Preset 2 authorization** (1 Bit – 1.003 DPT_Enable)
30 - Output 2 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
50 - Output 3 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
70 - Output 4 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
90 - Output 5 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
110 - Output 6 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
130 - Output 7 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
150 - Output 8 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
170 - Output 9 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
190 - Output 10 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)

Note: The parameters and objects are identical for Preset 2, only the terms are adjusted.

Parameter	Description	Value
Value of authorization preset 1 at initialization	On initialization of the device after a download or after return of the bus power, the value of the Preset 1 authorization object is: set to "0" set to "1" set according to the value that the object had before initialization	0 1 Value before initialization*

Note: This parameter is only visible if the **Preset authorization objects** parameter has the following value: **Active**

Parameter	Description	Value
Polarity of Preset 1 authorization object	On receipt of a value on the Preset 1 authorization object, Preset 1 is locked-up on object value "1" locked-up on object value "0"	0 = Authorized, 1 = Locked-up 0 = Locked-up, 1 = Authorized*

* Default value

Note: This parameter is only visible if the **Preset authorization objects** parameter has the following value: **Active**

Parameter	Description	Value
Status if preset 1 object = 0	<p>On receipt of the value "0" on the Preset 1 object, the output is:</p> <p>not changed</p> <p>switched to the opposite status</p> <p>selectively switched on</p> <p>selectively switched off</p> <p>set to a scene value</p> <p>set in blinking mode</p> <p>switched to the status that was active before last receiving the value "1" on the Preset 1 object.</p>	<p>Maintain status*</p> <p>Inversion</p> <p>On</p> <p>Off</p> <p>Scene number</p> <p>Blinking</p> <p>Status before preset 1 = 1</p>

Parameter	Description	Value
Scene for preset 1=0	<p>This parameter determines the value of the scene if:</p> <ul style="list-style-type: none"> - The Preset 1 object has value "0". - The Status if preset 1 object = 0 object has the scene value 	<p>Scenes 1... 64</p> <p>Default value: 1</p>

Parameter	Description	Value
Status if preset 1 object = 1	<p>On receipt of the value "1" on the Preset 1 object, the output is:</p> <p>not changed</p> <p>switched to the opposite status</p> <p>selectively switched on</p> <p>selectively switched off</p> <p>set to a scene value</p> <p>set in blinking mode</p> <p>switched to the status that was active before last receiving the value "1" on the Preset 1 object.</p>	<p>Maintain status*</p> <p>Inversion</p> <p>On</p> <p>Off</p> <p>Scene number</p> <p>Blinking</p> <p>Status before preset 1 = 0</p>

* Default value

Parameter	Description	Value
Scene for preset 1=1	This parameter determines the value of the scene if: <ul style="list-style-type: none"> - The Preset 1 object has value "1". - The Status if preset 1 object = 1 object has the scene value 	Scenes 1... 64 Default value: 2

Parameter	Description	Value
Blinking ON duration (s)	This parameter determines the closing duration of the output contact when blinking	5 seconds: 5 to 240 s

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter or the **Status if preset 1 object = 1** parameter has the following value: **Blinking***

Parameter	Description	Value
Blinking OFF duration (s)	This parameter determines the opening duration of the output contact when blinking.	5 seconds: 5 to 240 s

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter or the **Status if preset 1 object = 1** parameter has the following value: **Blinking***

Parameter	Description	Value
Output status during blinking function	When the switch actuator is blinking, the Status indication ON/OFF object sends the value "1" = ON the value "0" = OFF the values "1" and "0" alternately (The status object blinks accordingly)	ON* OFF ON/OFF

*Note: This parameter is only visible if the **Status if preset 1 object = 0** parameter or the **Status if preset 1 object = 1** parameter has the following value: **Blinking***

* Default value

3.8.6 Lock-up

Device: 1.1.2 10-fold switch actuator 4A 230V AC

Outputs 1-10: Function

Outputs 1-10: Function selection

- O1-10: Manual mode ON/OFF

- O1-10: Status indications ON/OFF

Output 1: Function selection

- O1: Lock-up

Output 2: Function selection

Output 3: Function selection

Output 4: Function selection

Output 5: Function selection

Output 6: Function selection

Output 7: Function selection

Output 8: Function selection

Output 9: Function selection

Output 10: Function selection

Information

Lock-up type:

Lock-up duration:

Polarity of lock-up object 1:

Polarity of lock-up object 2:

Priority between lock-up 1 and lock-up 2:

Status if lock-up 1:

Status if lock-up 2:

Status after lock-up function 1:

Status after lock-up function 2:

Activation of lock-up status object:

Polarity:

Emission:

Hours (h):

Minutes (min):

Seconds (s):

The lock-up function is used to lock the output in a predefined state.

Priority: Manual mode > Priority > **Lock-up** > basic functions.

The lock-up prevents any actuation until an unlock command has been received.

The Lock-up duration can be set.

Parameter	Description	Value
Lock-up type	<p>The Lock-up acts:</p> <p>directly on the switch actuator. As long as the Lock-up is active, the output can only be controlled by higher priority commands. The output status at the end of the lock-up can be set</p> <p>on selected communication objects. As long as the lock-up is active, the output can only be controlled via specific selectable objects.</p>	<p>Output lock-up*</p> <p>Objects lock-up</p>

* Default value

Parameter	Description	Value
Lock-up duration	The duration of the lock-up is not time limited, the lock-up is only authorized by means of a telegram on Lock-up 1 object. The lock-up is active for a limited time. After expiry of this time, control of the output is authorized.	Permanently* Time limited

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the activation time of the lock-up.	0 hours: 0 to 23 h 15 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

*Note: This parameter is only visible if the **Lock-up duration** parameter has the following value: **Time limited***

Parameter	Description	Value
Polarity of lock-up object 1	On receipt of a value on the Lock-up 1 object, the lock-up is activated on object value "1" deactivated on object value "0" activated on object value "0" deactivated on object value "1"	0 = Lock-up deactivated, 1 = Lock-up activated* 0 = Lock-up activated, 1 = Lock-up deactivated

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adjusted.

Parameter	Description	Value
Priority between lock-up 1 and lock-up 2	The priority between lock-up 1 and lock-up 2 is set as follows: Lock-up 1 has priority over lock-up 2 Lock-up 2 has priority over lock-up 1 Lock-up 1 and lock-up 2 have the same priority	Lock-up 1 > Lock-up 2* Lock-up 1 < Lock-up 2 Lock-up 1 = Lock-up 2

*Note: This parameter is only visible if the **Lock-up** parameter has the following value: **Active with 2 lock-up objects***

Note: The priority of the lock-up always functions in the same way, independently of the lock-up type (Output lock-up or object lock-up),

* Default value

Operating principle of the priorities:

If Lock-up 1 > Lock-up 2

Active lock-up	Activation order of Lock-up 1	Activation order of Lock-up 2
None	Lock-up 1 is activated	Lock-up 2 is activated
Lock-up 1	Lock-up 1 remains active	Despite the activation order of Lock-up 2, Lock-up 1 remains activated
Lock-up 2	Lock-up 1 is activated	Lock-up 2 remains active

If Lock-up 1 = Lock-up 2

Active lock-up	Activation order of Lock-up 1	Activation order of Lock-up 2
None	Lock-up 1 is activated	Lock-up 2 is activated
Lock-up 1	Lock-up 1 remains active	Lock-up 2 is activated
Lock-up 2	Lock-up 1 is activated	Lock-up 2 remains active

If Lock-up 1 < Lock-up 2

Active lock-up	Activation order of Lock-up 1	Activation order of Lock-up 2
None	Lock-up 1 is activated	Lock-up 2 is activated
Lock-up 1	Lock-up 1 remains active	Lock-up 2 is activated
Lock-up 2	Despite the activation order of Lock-up 1, Lock-up 2 remains activated	Lock-up 2 remains active

Parameter	Description	Value
Status if lock-up 1	If the Lock-up type is set to " Output lock-up ", on activation of the lock-up the output will:	
	not change	Maintain status*
	switch to the opposite status	Inversion
	selectively switch on	On
	selectively switch off	Off

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adjusted.

Control is possible via the following objects despite Lock-up 1:

The parameters listed below allow the selection of the objects. The output can be controlled via the nevertheless active Lock-up.

*Note: These parameters are only visible if the **Lock-up type** parameter has the following value:*

Objects lock-up

* Default value

Parameter	Objects concerned	Value
ON/OFF	ON/OFF	Yes No*
Scene	Scene	Yes No*
Timer	Timer	Yes No*
Timer/toggle switch changeover for switch object	Timer/toggle switch changeover	Yes No*
Time limited toggle switch	Time limited toggle switch	Yes No*
Preset 1	Preset 1	Yes No*
Preset 2	Preset 2	Yes No*

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adjusted.

Parameter	Description	Value
Status after lock-up function 1	If the Lock-up type is set to " Output lock-up ", on cancellation of the lock-up the output will: not change switch to the opposite status selectively switch on selectively switch off return to the status that was active before the lock-up	Maintain status* Inversion On Off Status before lock-up 1

Note: The application of this parameter depends on the priority of the other active functions. If a function with higher priority is active, this parameter will not be enacted. In the case where two functions with the same priority are active, the parameter of the most recently switched off function is enacted.

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adjusted.

Parameter	Description	Value
Activation of lock-up status object	The " Status indication lock-up " communication object is hidden The " Status indication lock-up " communication object is displayed	Not active* Active

* Default value

Communication objects: **13 - Output 1 – Status indication lock-up** (1 Bit – 1.011 DPT_State)
33 - Output 2 – Status indication lock-up (1 Bit – 1.011 DPT_State)
53 - Output 3 – Status indication lock-up (1 Bit – 1.011 DPT_State)
73 - Output 4 – Status indication lock-up (1 Bit – 1.011 DPT_State)
93 - Output 5 – Status indication lock-up (1 Bit – 1.011 DPT_State)
113 - Output 6 – Status indication lock-up (1 Bit – 1.011 DPT_State)
133 - Output 7 – Status indication lock-up (1 Bit – 1.011 DPT_State)
153 - Output 8 – Status indication lock-up (1 Bit – 1.011 DPT_State)
173 - Output 9 – Status indication lock-up (1 Bit – 1.011 DPT_State)
193 - Output 10 – Status indication lock-up (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	The Status indication Lock-up communication object sends: "0" on deactivation of the lock-up "1" on activation of the lock-up "1" on deactivation of the lock-up "0" on activation of the lock-up	0 = Lock-up deactivated, 1 = Lock-up activated* 0 = Lock-up activated, 1 = Lock-up deactivated

Parameter	Description	Value
Emission	The Status indication lock-up communication object is sent: on activation and deactivation of the lock-up periodically after a configurable time on activation and deactivation of the lock-up and periodically after a configurable time	On status change* Periodically On status change and periodically

*Note: This parameter is only visible if the **Activation of lock-up status object** parameter has the following value: **Active***


Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Activation of lock-up status object.	0 hours: 0 to 23 h 10 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

* Default value

3.8.7 Priority

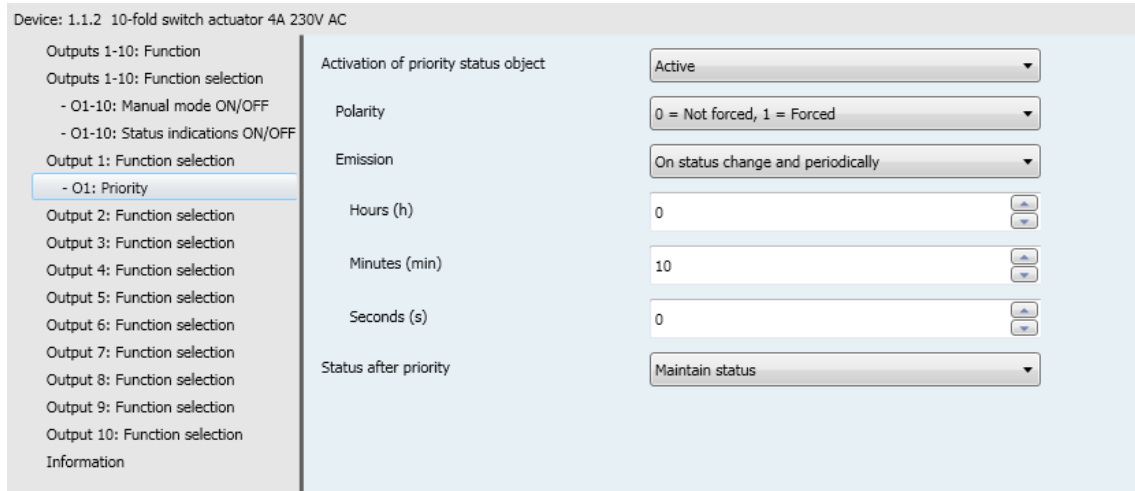

The Priority is used to force the output into a predefined state.
 Priority: Manual operation > **Priority** > Lock-up > Basic functions.
 No other command is taken into account when the Priority is active.
 Only by ending the Priority are other commands again permitted.

Parameter	Description	Value
Activation of priority status object	The " Status indication priority " communication object and related parameters are hidden	Not active*
	The " Status indication priority " communication object and related parameters are displayed.	Active

Communication objects:

- 15 - Output 1 – Status indication priority (1 Bit – 1.011 DPT_State)
- 35 - Output 2 – Status indication priority (1 Bit – 1.011 DPT_State)
- 55 - Output 3 – Status indication priority (1 Bit – 1.011 DPT_State)
- 75 - Output 4 – Status indication priority (1 Bit – 1.011 DPT_State)
- 95 - Output 5 – Status indication priority (1 Bit – 1.011 DPT_State)
- 115 - Output 6 – Status indication priority (1 Bit – 1.011 DPT_State)
- 135 - Output 7 – Status indication priority (1 Bit – 1.011 DPT_State)
- 155 - Output 8 – Status indication priority (1 Bit – 1.011 DPT_State)
- 175 - Output 9 – Status indication priority (1 Bit – 1.011 DPT_State)
- 195 - Output 10 – Status indication priority (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	The Status indication priority communication object sends: "1" on activation of the Priority "0" on deactivation of the Priority "1" on deactivation of the Priority "0" on activation of the Priority	0 = Not forced, 1 = Forced* 0 = Forced, 1 = Not forced

* Default value

Note: This parameter is only visible if the **Activation of priority status object** parameter has the following value: **Active**

Parameter	Description	Value
Emission	The Status indication priority communication object is sent: on activation and deactivation of the Priority periodically after a configurable time on activation and deactivation of the Priority and periodically after a configurable time	On status change* Periodically On status change and periodically

Note: This parameter is only visible if the **Activation of priority status object** parameter has the following value: **Active**

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Activation of priority status object.	0 hours: 0 to 23 h 10 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically**

Parameter	Description	Value
Status after priority	At the end of the priority, the output is: not changed switched to the opposite status selectively switched on selectively switched off switched back to the status before priority was activated switched to the status which would be active according to other communication objects if the priority had not taken place	Maintain status* Inversion ON OFF Status before priority Theoretical status without priority

Note: The application of this parameter depends on the priority of the other active functions. If a function with higher priority is active, this parameter will not be enacted. In the case where two functions with the same priority are active, the parameter of the most recently switched off function is enacted.

* Default value

3.8.8 Hours counter

The hours counter function is used to count the overall operating time of an output in the ON or OFF state.

The operating hours counter setpoint can be programmed and altered via an object.

Device: 1.1.2 10-fold switch actuator 4A 230V AC


Outputs 1-10: Function selection	Relay status for operating hours counter	Closed
Outputs 1-10: Function selection - O1-10: Manual mode ON/OFF - O1-10: Status indications ON/OFF	Hours counter direction	Increment
Output 1: Function selection - O1: Hours counter	Operating h. counter setpoint	10000
Output 2: Function selection	Counter setpoint value modifiable through object	Not active
Output 3: Function selection	Emission hours counter value	On status change and periodically
Output 4: Function selection	Value interval (h)	100
Output 5: Function selection	Periodical emission delay (h)	1
Output 6: Function selection	Periodical emission delay (min)	0
Output 7: Function selection	Periodical emission delay (s)	0
Output 8: Function selection	Object emission counter setpoint reached	Periodically
Output 9: Function selection	Periodical emission delay (h)	1
Output 10: Function selection	Periodical emission delay (min)	0
Information	Periodical emission delay (s)	0

Parameter	Description	Value
Relay status for operating hours counter	The hours counter runs if the output is closed the output is open	Closed Open*

Parameter	Description	Value
Hours counter direction	The hours counter counts up down	Increment* Countdown


* Default value

Increment:

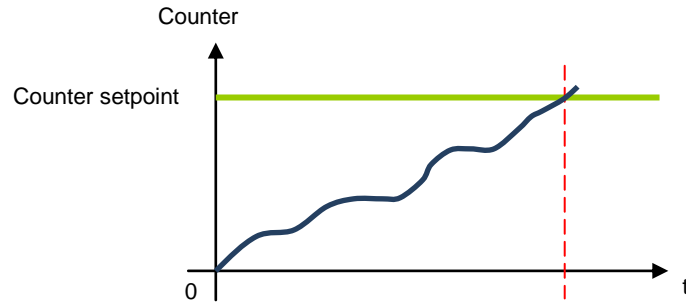

The counter starts to count up from the value 0. As soon as the counter setpoint is reached (**Operating h. counter setpoint** object), the **Operating h. counter setpoint** object is set to "1" and sent to the bus.

Countdown:

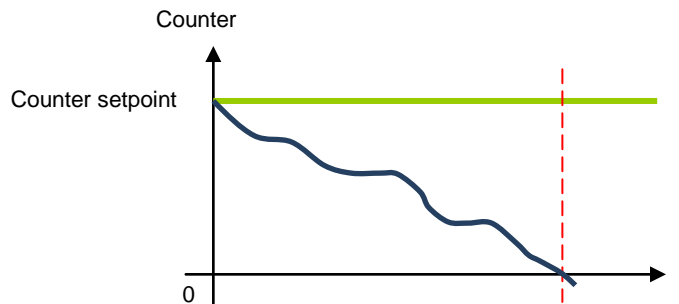

The counter starts to count down from the operating hours counter setpoint (**Operating h. counter setpoint** object). As soon as the counter reaches zero, the **Operating h. counter setpoint reached** object is set to "1" and sent to the bus.

Parameter	Description	Value
Operating h. counter setpoint	This parameter determines the value of the hours counter	1 ... 10000 *... 65535 (hours)

An incrementing counter starts at 0 and counts up until it reaches the setpoint value.

A countdown counter starts to count at the setpoint value and counts down until it has arrived at 0.

Parameter	Description	Value
Counter setpoint value modifiable through object	The " Operating h. counter setpoint " communication object is hidden	Not active*
	The " Operating h. counter setpoint " communication object is displayed The value displayed can be changed via the KNX bus	Active

* Default value

Communication objects:

- 19 - Output 1 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)
- 39 - Output 2 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)
- 59 - Output 3 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)
- 79 - Output 4 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)
- 99 - Output 5 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)
- 119 - Output 6 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)
- 139 - Output 7 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)
- 159 - Output 8 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)
- 179 - Output 9 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)
- 199 - Output 10 – Operating h. counter setpoint (2 Byte – 7.001 DPT_16_Bit_Counter)

Parameter	Description	Value
Emission hours counter value	The Hours counter value communication object is sent: On each change Periodically after a configurable time On each change and periodically after a configurable time	On status change* Periodically On status change and periodically

Parameter	Description	Value
Value interval (h)	This parameter specifies the value interval (in hours) for the sending frequency of the Operating h. counter setpoint object.	1 ... 100* ...65535 (hours)

*Note: If the value interval is 200 hours, then the **Operating h. counter setpoint** object is sent each time the Operating h. counter value is increased by 200 hours.*

*Note: This parameter is only visible if the **Emission hours counter value** parameter has the following value: **On status change** or **On status change and periodically***

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Operating h. counter setpoint object.	1 hour: 0 to 23 h 0 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Emission hours counter value** parameter has the following value: **Periodically** or **On status change and periodically***

* Default value

Parameter	Description	Value
Object emission counter setpoint reached	<p>The Hours counter setpoint reached communication object is sent:</p> <p>On reaching the counter setpoint</p> <p>Periodically after a configurable time</p> <p>On reaching the counter setpoint and periodically after a configurable time.</p>	<p>On status change</p> <p>Periodically*</p> <p>On status change and periodically</p>

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the counter setpoint reached object.	<p>1 hour: 0 to 23 h</p> <p>0 minutes: 0 to 59 min.</p> <p>0 seconds: 0 to 59 s</p>

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Object emission counter setpoint reached** parameter has the following value: **Periodically** or **On status change and periodically***

* Default value

3.9 Functions for each shutter/blind output

3.9.1 Shutter/blind basic function


Slat position for horizontal slats

The blind drive actuators have 2 limit position switches and can be run to a Sun protection position using a position setting in percent. The value of "0%" is used to control the upper position (i.e. Sun protection fully open) or is reported as a status.



If the lower position is to be approached, then this will be sent to the blinds as Sun protection position "100%" or on reaching the lower position (i.e. Sun protection completely closed) the position will be reported using this value. If a blind is run from the upper position, the slats initially tilt into an almost vertical position and then the sun protection runs with closed slats to the lower position.

When the blind is located at the lower position and the slats are fully closed, then this slat position is described as "vertical" and equal to "100 %". Normally, however, fully closed slats have no exactly vertical position ($\alpha = 180^\circ$) but rather form a small angle with the vertical. This angle must be determined in the slat tracking and entered via the associated parameters.

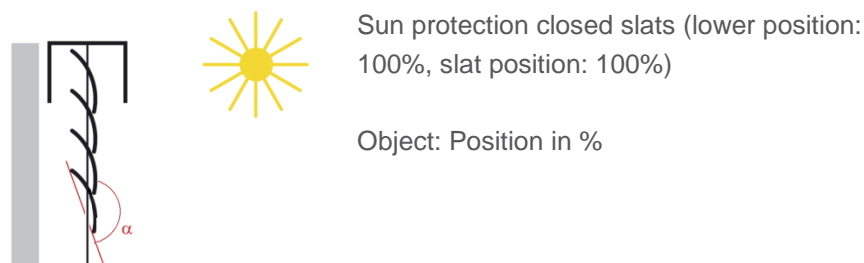

From their "vertical" position (completely closed, 100 %) the slats can be adjusted to their horizontal position (fully open, 0% and $\alpha = 90^\circ$). The blind drive used thus determines whether this adjustment can be carried out using many small steps or whether it is only possible via a few large steps (as with most standard drives).



* Default value

For standard blinds, the slats can be adjusted continuously to the horizontal position or until the slat adjustment ends and the raising of the blind begins. The slats then form an angle of between 0° and 90° with the vertical.




Slat position at the start of moving the blind UP

Object: Slat position in %

Slat position for vertical slats


If an interior shade or privacy shield with vertical slats is controlled via a blind actuator, then the position in which the slats are fully open is controlled or reported as the 0% slat position. The slats then form an angle of 90° with the direction of travel from "Shade fully open" to "Shade fully closed".

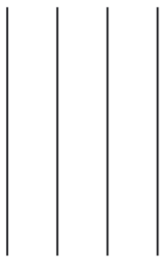

Fully opened vertical slats (Slat position 0%)

Object: Slat position in %


If the slats are fully closed, this position will be controlled and reported as slat position 100%. This is the position to which the shade is run from its side limit position in front of the window. The angle that the slats then form with the direction of movement is therefore a little > 0°.

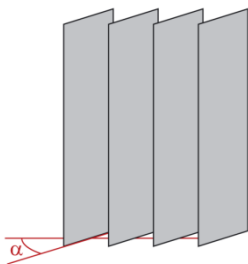

Fully closed vertical slats
(Slat position 100%)

Object: Slat position in %

If the shade is then driven back (i.e. opened), then the vertical slats are turned to a position that is somewhat smaller than 180°.

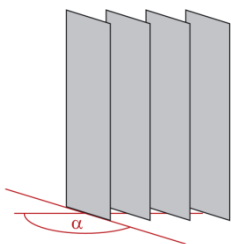

Vertical slats at the start of moving UP

* Default value

3.9.2 Function selection

These parameters are available individually for each output (pair).

Parameter	Description	Value
Closing type for channel x	This parameter defines the operating mode used for the affected outputs. An operating mode of the shutter and blind type gives access to additional parameters to control the slat pitch.	Shutter* Shutter and blind

Note: These objects are only visible if the function selection of the outputs is set to shutter and blind.

- Communication objects:
- 0 - Outputs 1-2 – Up/Down (long key-press)** (1 Bit – 1.008 DPT_UpDown)
 - 40 - Outputs 3-4 – Up/Down (long key-press)** (1 Bit – 1.008 DPT_UpDown)
 - 80 - Outputs 5-6 – Up/Down (long key-press)** (1 Bit – 1.008 DPT_UpDown)
 - 120 - Outputs 7-8 – Up/Down (long key-press)** (1 Bit – 1.008 DPT_UpDown)
 - 160 - Outputs 9-10 – Up/Down (long key-press)** (1 Bit – 1.008 DPT_UpDown)
-
- 1 - Outputs 1-2 – Step/Stop (short press)** (1 Bit – 1.007 DPT_Step)
 - 41 - Outputs 3-4 – Step/Stop (short press)** (1 Bit – 1.007 DPT_Step)
 - 81 - Outputs 5-6 – Step/Stop (short press)** (1 Bit – 1.007 DPT_Step)
 - 121 - Outputs 7-8 – Step/Stop (short press)** (1 Bit – 1.007 DPT_Step)
 - 161 - Outputs 9-10 – Step/Stop (short press)** (1 Bit – 1.007 DPT_Step)
-
- 2 - Outputs 1-2 – Position in %** (1 Byte – 5.001 DPT_Scaling)
 - 42 - Outputs 3-4 – Position in %** (1 Byte – 5.001 DPT_Scaling)
 - 82 - Outputs 5-6 – Position in %** (1 Byte – 5.001 DPT_Scaling)
 - 122 - Outputs 7-8 – Position in %** (1 Byte – 5.001 DPT_Scaling)
 - 162 - Outputs 9-10 – Position in %** (1 Byte – 5.001 DPT_Scaling)

*Note: These objects are only visible if the **Closing type for channel x** parameter has the following value: **Shutter and blind**.*

- Communication objects:
- 3 - Outputs 1-2 – Slat angle in %** (1 Byte – 5.001 DPT_Scaling)
 - 43 - Outputs 3-4 – Slat angle in %** (1 Byte – 5.001 DPT_Scaling)
 - 83 - Outputs 5-6 – Slat angle in %** (1 Byte – 5.001 DPT_Scaling)
 - 123 - Outputs 7-8 – Slat angle in %** (1 Byte – 5.001 DPT_Scaling)
 - 163 - Outputs 9-10 – Slat angle in %** (1 Byte – 5.001 DPT_Scaling)

Parameter	Description	Value
Complete up movement duration	This parameter defines the time taken, during which the contact must be closed, to reach the upper position.	2 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

* Default value

Parameter	Description	Value
Complete down movement duration	This parameter defines the time taken, during which the contact must be closed, to reach the lower position.	2 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

Parameter	Description	Value
Time delay for direction inversion (ms)	This parameter defines how long the shutter or blind must be stopped before the direction of motion can be reversed. During this time, both output contacts are open.	300 ... 600* ...10000 ms

Parameter	Description	Value
Relay closing time for slat positioning (ms)	This parameter defines how long the contacts must be closed in order to perform an elementary angle step for the slats.	50 ... 150* ...10000 ms

*Note: This parameter is only visible if the **Closing type for channel x** parameter has the following value: **Shutter and blind***

Parameter	Description	Value
Total number of slat angles	This parameter defines the total number of elementary slat steps available for adjusting the slats from the inclined downwards position to be inclined upwards position.	1 ... 12* ... 60

*Note: Before setting the **Total number of slat angles** parameter, it is essential to first set the closed contact duration for an elementary slat step.*

*Note: This parameter is only visible if the **Closing type for channel x** parameter has the following value: **Shutter and blind***

Parameter	Description	Value
Secured down in manual mode (run as long as pressed)	In manual mode, the down contact remains closed only as long as the manual button is being pressed.	Not active* Active

Note: This function is also used in order to give the command to close a swimming pool cover, which for safety reasons also requires a continuous button press.

Parameter	Description	Value
Manual mode allowed	With this parameter, manual mode can be authorized for the output.	Yes* No

* Default value

Parameter	Description	Value
Status indication	This parameter allows the display of different status indication objects of the outputs concerned.	Yes* No

Parameter	Description	Value
Status indication position in %	This parameter authorizes the Position in % indication object.	Not active* Active

Communication objects:

- 4 - Outputs 1-2 – Position in % indication** (1 Byte – 5.001 DPT_Scaling)
- 44 - Outputs 3-4 – Position in % indication** (1 Byte – 5.001 DPT_Scaling)
- 84 - Outputs 5-6 – Position in % indication** (1 Byte – 5.001 DPT_Scaling)
- 124 - Outputs 7-8 – Position in % indication** (1 Byte – 5.001 DPT_Scaling)
- 164 - Outputs 9-10 – Position in % indication** (1 Byte – 5.001 DPT_Scaling)

Parameter	Description	Value
Status indication slat angle in %	This parameter authorizes the Slat angle indication in % object.	Not active* Active

*Note: This parameter is only visible if the **Closing type for channel x** parameter has the following value: **Shutter and blind***

Communication objects:

- 5 - Outputs 1-2 – Slat angle indication in %** (1 Byte – 5.001 DPT_Scaling)
- 45 - Outputs 3-4 – Slat angle indication in %** (1 Byte – 5.001 DPT_Scaling)
- 85 - Outputs 5-6 – Slat angle indication in %** (1 Byte – 5.001 DPT_Scaling)
- 125 - Outputs 7-8 – Slat angle indication in %** (1 Byte – 5.001 DPT_Scaling)
- 165 - Outputs 9-10 – Slat angle indication in %** (1 Byte – 5.001 DPT_Scaling)

Parameter	Description	Value
Status indication upper position reached	This parameter authorizes the Upper position reached object.	Not active* Active

Communication objects:

- 6 - Outputs 1-2 – Upper position reached** (1 Bit – 1.002 DPT_Bool)
- 46 - Outputs 3-4 – Upper position reached** (1 Bit – 1.002 DPT_Bool)
- 86 - Outputs 5-6 – Upper position reached** (1 Bit – 1.002 DPT_Bool)
- 126 - Outputs 7-8 – Upper position reached** (1 Bit – 1.002 DPT_Bool)
- 166 - Outputs 9-10 – Upper position reached** (1 Bit – 1.002 DPT_Bool)

Parameter	Description	Value
Status indication lower position reached	This parameter authorizes the Lower position reached object.	Not active* Active

* Default value

Communication objects:

- 7 - Outputs 1-2 – Lower position reached** (1 Bit – 1.002 DPT_Bool)
- 47 - Outputs 3-4 – Lower position reached** (1 Bit – 1.002 DPT_Bool)
- 87 - Outputs 5-6 – Lower position reached** (1 Bit – 1.002 DPT_Bool)
- 127 - Outputs 7-8 – Lower position reached** (1 Bit – 1.002 DPT_Bool)
- 167 - Outputs 9-10 – Lower position reached** (1 Bit – 1.002 DPT_Bool)

Parameter	Description	Value
Scene	The Scenes tab and the associated parameters and objects are	
	hidden	Not active*
	displayed	Active

Communication objects:

- 8 - Outputs 1-2 – Scene** (1 Byte – 17.001 DPT_ScèneNumber)
- 48 - Outputs 3-4 – Scene** (1 Byte – 17.001 DPT_ScèneNumber)
- 88 - Outputs 5-6 – Scene** (1 Byte – 17.001 DPT_ScèneNumber)
- 128 - Outputs 7-8 – Scene** (1 Byte – 17.001 DPT_ScèneNumber)
- 168 - Outputs 9-10 – Scene** (1 Byte – 17.001 DPT_ScèneNumber)

For configuration see section: [Scene Shutter](#)

Parameter	Description	Value
Lock-up	The Lock-up tab and the associated parameters and objects are	
	hidden	Not active*
	displayed for 1 lock-up object	1 lock-up object
	displayed for 2 lock-up objects	2 lock-up objects

Lock-up 1 communication objects

- 13 - Outputs 1-2 – Lock-up 1** (1 Bit – 1.003 DPT_Enable)
- 53 - Outputs 3-4 – Lock-up 1** (1 Bit – 1.003 DPT_Enable)
- 93 - Outputs 5-6 – Lock-up 1** (1 Bit – 1.003 DPT_Enable)
- 133 - Outputs 7-8 – Lock-up 1** (1 Bit – 1.003 DPT_Enable)
- 173 - Outputs 9-10 – Lock-up 1** (1 Bit – 1.003 DPT_Enable)

Lock-up 2 communication objects:

- 14 - Outputs 1-2 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 54 - Outputs 3-4 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 94 - Outputs 5-6 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 134 - Outputs 7-8 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)
- 174 - Outputs 9-10 – Lock-up 2** (1 Bit – 1.003 DPT_Enable)

For configuration see section: [Lock-up Shutter](#)

* Default value

Parameter	Description	Value
Preset	The Preset tab and the associated parameters and objects are hidden displayed for 1 Preset object displayed for 2 Preset objects	Not active* 1 preset object 2 preset objects

Note: When the value of this parameter changes, the associated parameters and group addresses are deleted

Preset 1 communication objects:

- 9 - Outputs 1-2 – Preset 1** (1 Bit – 1.022 DPT_Scène_AB)
- 49 - Outputs 3-4 – Preset 1** (1 Bit – 1.022 DPT_Scène_AB)
- 89 - Outputs 5-6 – Preset 1** (1 Bit – 1.022 DPT_Scène_AB)
- 129 - Outputs 7-8 – Preset 1** (1 Bit – 1.022 DPT_Scène_AB)
- 169 - Outputs 9-10 – Preset 1** (1 Bit – 1.022 DPT_Scène_AB)

Preset 2 communication objects:

- 10 - Outputs 1-2 – Preset 2** (1 Bit – 1.022 DPT_Scène_AB)
- 50 - Outputs 3-4 – Preset 2** (1 Bit – 1.022 DPT_Scène_AB)
- 90 - Outputs 5-6 – Preset 2** (1 Bit – 1.022 DPT_Scène_AB)
- 130 - Outputs 7-8 – Preset 2** (1 Bit – 1.022 DPT_Scène_AB)
- 170 - Outputs 9-10 – Preset 2** (1 Bit – 1.022 DPT_Scène_AB)

For configuration see section: [Preset Shutter](#)

Parameter	Description	Value
Priority	The Priority tab and the associated parameters and objects are hidden displayed	Not active* Active

The device responds to telegrams received via the **Priority** object, as given in the following table:

Telegram received by the priority operation object		Status of the outputs
Bit 1	Bit 2	
0	0	End of the priority
0	1	End of the priority
1	0	Priority OFF
1	1	Priority ON

* Default value

Communication objects: **16 - Outputs 1-2 – Priority** (2 Bit – 2.002 DPT_Bool_Control)
56 - Outputs 3-4 – Priority (2 Bit – 2.002 DPT_Bool_Control)
96 - Outputs 5-6 – Priority (2 Bit – 2.002 DPT_Bool_Control)
136 - Outputs 7-8 – Priority (2 Bit – 2.002 DPT_Bool_Control)
176 - Outputs 9-10 – Priority (2 Bit – 2.002 DPT_Bool_Control)

For configuration see section: [Priority Shutter](#)

Parameter	Description	Value
Alarm	The Alarm tab and the associated parameters and objects are hidden displayed for 1 alarm object displayed for 2 alarm objects displayed for 3 alarm objects	Not active* 1 alarm object 2 alarm objects 3 alarm objects
Communication objects Alarm 1:	18 - Outputs 1-2 – Alarm 1 (1 Bit – 1.005 DPT_Alarm) 58 - Outputs 3-4 – Alarm 1 (1 Bit – 1.005 DPT_Alarm) 98 - Outputs 5-6 – Alarm 1 (1 Bit – 1.005 DPT_Alarm) 138 - Outputs 7-8 – Alarm 1 (1 Bit – 1.005 DPT_Alarm) 178 - Outputs 9-10 – Alarm 1 (1 Bit – 1.005 DPT_Alarm)	
Communication objects Alarm 2:	19 - Outputs 1-2 – Alarm 2 (1 Bit – 1.005 DPT_Alarm) 59 - Outputs 3-4 – Alarm 2 (1 Bit – 1.005 DPT_Alarm) 99 - Outputs 5-6 – Alarm 2 (1 Bit – 1.005 DPT_Alarm) 139 - Outputs 7-8 – Alarm 2 (1 Bit – 1.005 DPT_Alarm) 179 - Outputs 9-10 – Alarm 2 (1 Bit – 1.005 DPT_Alarm)	
Communication objects Alarm 3:	20 - Outputs 1-2 – Alarm 3 (1 Bit – 1.005 DPT_Alarm) 60 - Outputs 3-4 – Alarm 3 (1 Bit – 1.005 DPT_Alarm) 100 - Outputs 5-6 – Alarm 3 (1 Bit – 1.005 DPT_Alarm) 140 - Outputs 7-8 – Alarm 3 (1 Bit – 1.005 DPT_Alarm) 180 - Outputs 9-10 – Alarm 3 (1 Bit – 1.0053 DPT_Alarm)	

For configuration see section: [Alarm](#)

Parameter	Description	Value
Reactivate sun protection	The Sun protection tab and the associated parameters and objects are hidden displayed	Not active* Active

* Default value


Communication objects: **22 - Outputs 1-2 – Sun protection position in %** (1 Byte – 5.001 DPT_Scaling)
 62 - Outputs 3-4 – Sun protection position in % (1 Byte – 5.001 DPT_Scaling)
 102 - Outputs 5-6 – Sun protection position in % (1 Byte – 5.001 DPT_Scaling)
 142 - Outputs 7-8 – Sun protection position in % (1 Byte – 5.001 DPT_Scaling)
 182 - Outputs 9-10 – Sun protection position in % (1 Byte – 5.001 DPT_Scaling)

Communication objects: **23 - Outputs 1-2 – Slat angle (0-100%)** (1 Byte – 5.001 DPT_Scaling)
 63 - Outputs 3-4 – Slat angle (0-100%) (1 Byte – 5.001 DPT_Scaling)
 103 - Outputs 5-6 – Slat angle (0-100%) (1 Byte – 5.001 DPT_Scaling)
 143 - Outputs 7-8 – Slat angle (0-100%) (1 Byte – 5.001 DPT_Scaling)
 183 - Outputs 9-10 – Slat angle (0-100%) (1 Byte – 5.001 DPT_Scaling)

For configuration see section: [Sun protection](#)

* Default value

3.9.3 Scene

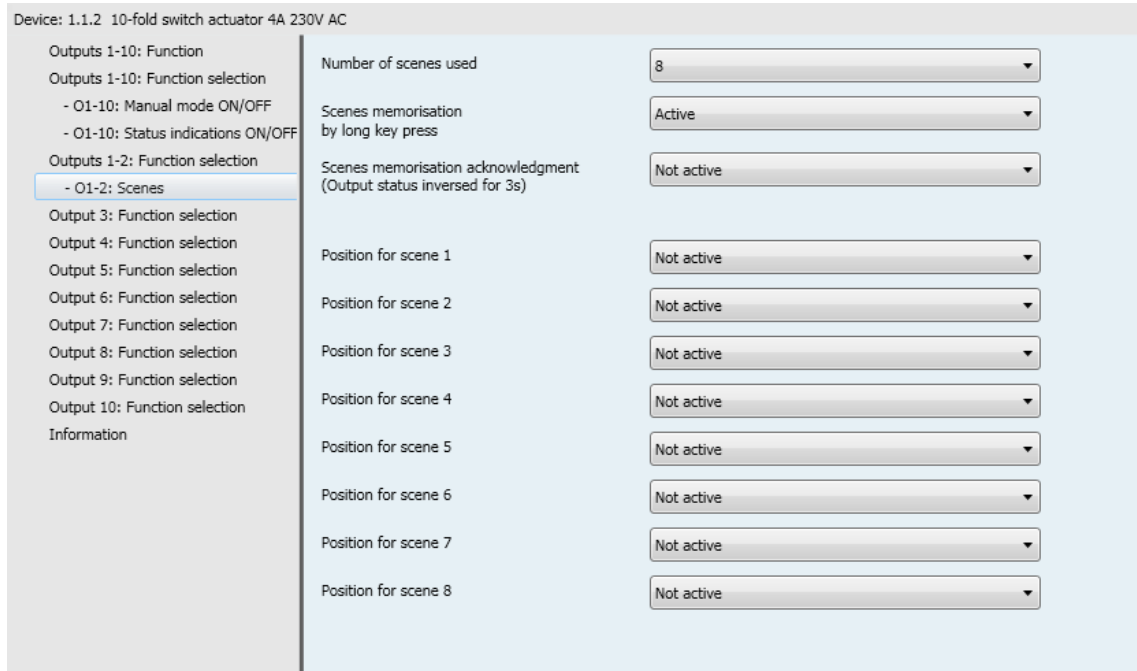

Parameter	Description	Value
Number of scenes used	This parameter determines the number of scenes used.	8 * - 16 – 24 – 32 – 48 - 64

Note: If the Scene number received on the Scene object is greater than the maximum number of scenes, the status of the output remains unchanged.

Parameter	Description	Value
Scenes memorisation by long key press	This parameter allows learning and storing of a scene by, for example, a long press (> 5 seconds) of the corresponding push button.	Not active Active*

Learning and storing scenes

This process is used to change and store a scene. For example, by locally pressing the key in the room or by emission of the values from a visualization.


To access and store scenes, the following values must be sent.

Scene number	Access scene (object value 1-byte)	Store scene (object value 1-byte)
1-64	= Scene number -1	= Scene number +128
Examples		
1	0	128
2	1	129
3	2	130
...	...	
64	63	191

* Default value

Here is the scene memorisation for local switches, for example.

- Activate scene by briefly pressing the transmitter that starts it,
- The outputs (lights, shutters, etc.) are set in the desired state using the usual local control devices (buttons, remote control, etc.),
- Memorise the status of the outputs with a press greater than 5 seconds long on the transmitter that starts the scene. The memorisation can be displayed by short-term activation of the outputs.

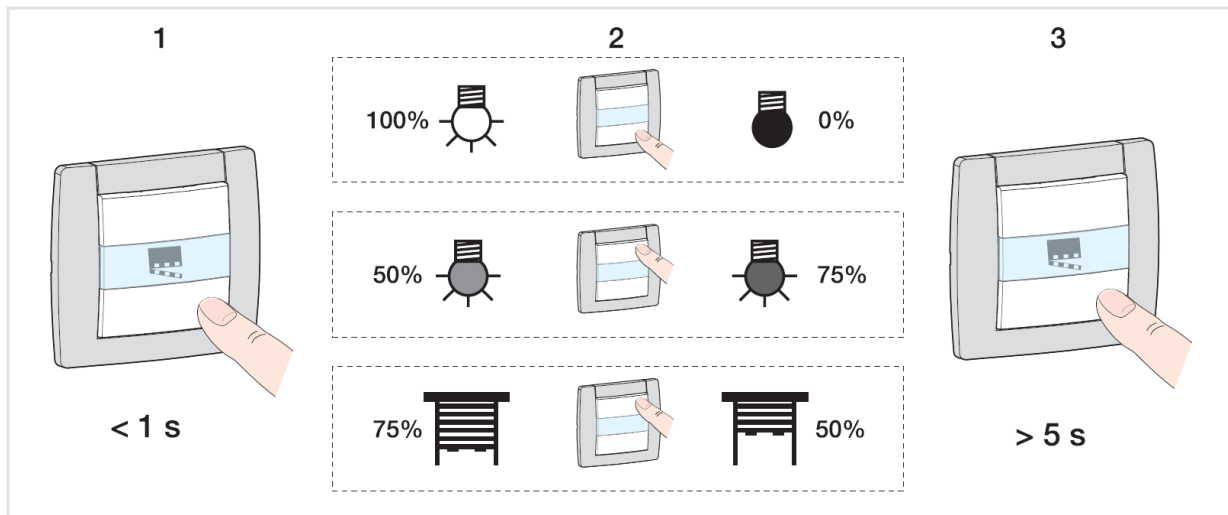

Parameter	Description	Value
Scenes memorisation acknowledgment	Memorisation of a scene is not acknowledged acknowledged by a 3-second long running of the drive.	Not active* Active

Parameter	Description	Value
Position for scene X	The activation of scene X will not change the output run Up run Down run to a specific position reactivate the sun protection function lock-up the sun protection function	Not active* Up Down Specific position Reactivate sun protection Deactivate sun protection

X = 1 to 64

*Note: Each output has up to 64 scenes available, in accordance with the **Number of scenes used** parameter*

* Default value

Note: The Sun protection function of the selected output must be configured. If this is not the case, the status remains unchanged.

Note: Local storage of the scene is not recorded if the **Position for scene x** parameter is not active.

Parameter	Description	Value
Position (0-100%)	This parameter defines the position to run the shutter or blind to for scene X.	0...5*...100

Note: This parameter is only visible if the **Position for scene X** parameter has the following value: **Specific position**

Parameter	Description	Value
Slat angle (0-100%)	This parameter defines the slat position of the blind to be used for scene X.	0...5*...100

Note: This parameter is only visible if the **Position for scene X** parameter has the value **Specific position** and if the **Closing type** for channel parameter has the value **blind**.

3.9.4 Lock-up

Device: 1.1.2 10-fold switch actuator 4A 230V AC

<ul style="list-style-type: none"> Outputs 1-10: Function Outputs 1-10: Function selection <ul style="list-style-type: none"> - O1-10: Manual mode ON/OFF - O1-10: Status indications ON/OFF Outputs 1-2: Function selection <ul style="list-style-type: none"> - O1-2: Lock-up Output 3: Function selection Output 4: Function selection Output 5: Function selection Output 6: Function selection Output 7: Function selection Output 8: Function selection Output 9: Function selection Output 10: Function selection Information 	<table border="0" style="width: 100%;"> <tr> <td style="width: 30%;">Lock-up type</td> <td style="width: 40%;">Output lock-up</td> <td style="width: 30%; text-align: right;">▼</td> </tr> <tr> <td>Lock-up duration</td> <td>Permanently</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Polarity of lock-up object 1</td> <td>0 = Lock-up deactivated, 1 = Lock-up activated</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Polarity of lock-up object 2</td> <td>0 = Lock-up deactivated, 1 = Lock-up activated</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Priority between lock-up 1 and lock-up 2</td> <td>Lock-up 1 > Lock-up 2</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Position during lock-up 1</td> <td>Maintain status</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Position during lock-up 2</td> <td>Maintain status</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Position after lock-up function 1</td> <td>Maintain status</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Position after lock-up function 2</td> <td>Maintain status</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Activation of lock-up status object</td> <td>Active</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Polarity</td> <td>0 = Lock-up deactivated, 1 = Lock-up activated</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Emission</td> <td>On status change and periodically</td> <td style="text-align: right;">▼</td> </tr> <tr> <td>Hours (h)</td> <td>0</td> <td style="text-align: right;">▲▼</td> </tr> <tr> <td>Minutes (min)</td> <td>10</td> <td style="text-align: right;">▲▼</td> </tr> <tr> <td>Seconds (s)</td> <td>0</td> <td style="text-align: right;">▲▼</td> </tr> </table>	Lock-up type	Output lock-up	▼	Lock-up duration	Permanently	▼	Polarity of lock-up object 1	0 = Lock-up deactivated, 1 = Lock-up activated	▼	Polarity of lock-up object 2	0 = Lock-up deactivated, 1 = Lock-up activated	▼	Priority between lock-up 1 and lock-up 2	Lock-up 1 > Lock-up 2	▼	Position during lock-up 1	Maintain status	▼	Position during lock-up 2	Maintain status	▼	Position after lock-up function 1	Maintain status	▼	Position after lock-up function 2	Maintain status	▼	Activation of lock-up status object	Active	▼	Polarity	0 = Lock-up deactivated, 1 = Lock-up activated	▼	Emission	On status change and periodically	▼	Hours (h)	0	▲▼	Minutes (min)	10	▲▼	Seconds (s)	0	▲▼
Lock-up type	Output lock-up	▼																																												
Lock-up duration	Permanently	▼																																												
Polarity of lock-up object 1	0 = Lock-up deactivated, 1 = Lock-up activated	▼																																												
Polarity of lock-up object 2	0 = Lock-up deactivated, 1 = Lock-up activated	▼																																												
Priority between lock-up 1 and lock-up 2	Lock-up 1 > Lock-up 2	▼																																												
Position during lock-up 1	Maintain status	▼																																												
Position during lock-up 2	Maintain status	▼																																												
Position after lock-up function 1	Maintain status	▼																																												
Position after lock-up function 2	Maintain status	▼																																												
Activation of lock-up status object	Active	▼																																												
Polarity	0 = Lock-up deactivated, 1 = Lock-up activated	▼																																												
Emission	On status change and periodically	▼																																												
Hours (h)	0	▲▼																																												
Minutes (min)	10	▲▼																																												
Seconds (s)	0	▲▼																																												

The lock-up function is used to lock the output in a predefined state.

Priority: Manual mode > Priority > **Lock-up** > basic functions.

The lock-up prevents any actuation until an unlock command has been received.

The Lock-up duration can be set.

* Default value

Parameter	Description	Value
Lock-up type	<p>The Lock-up acts:</p> <p>directly on the switch actuator. As long as the Lock-up is active, the output can only be controlled by higher priority commands. The output status at the end of the lock-up can be set</p> <p>on selected communication objects. As long as the lock-up is active, the output can only be controlled via specific selectable objects</p>	<p>Output lock-up*</p> <p>Objects lock-up</p>

Parameter	Description	Value
Lock-up duration	<p>The duration of the lock-up is</p> <p>not time limited, the lock-up is only authorized by means of a telegram on Lock-up 1 object.</p> <p>The lock-up is active for a limited time. After expiry of this time, control of the output is authorized.</p>	<p>Permanently*</p> <p>Time limited</p>

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the activation time of the lock-up.	<p>0 hours: 0 to 23 h</p> <p>15 minutes: 0 to 59 min.</p> <p>0 seconds: 0 to 59 s</p>

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Lock-up duration** parameter has the following value: **Time limited***

Parameter	Description	Value
Polarity of lock-up object 1	<p>On receipt of a value on the Lock-up 1 object, the lock-up</p> <p>is activated on object value "1" deactivated on object value "0"</p> <p>activated on object value "0" deactivated on object value "1"</p>	<p>0 = Lock-up deactivated, 1 = Lock-up activated*</p> <p>0 = Lock-up activated, 1 = Lock-up deactivated</p>

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adjusted.

* Default value

Parameter	Description	Value
Priority between lock-up 1 and lock-up 2	The priority between lock-up 1 and lock-up 2 is set as follows:	
	Lock-up 1 has priority over lock-up 2	Lock-up 1 > Lock-up 2*
	Lock-up 2 has priority over lock-up 1	Lock-up 1 < Lock-up 2
	Lock-up 1 and lock-up 2 have the same priority	Lock-up 1 = Lock-up 2

*Note: This parameter is only visible if the **Lock-up** parameter has the following value: **Active with 2 lock-up objects***

Note: The priority of the lock-up always functions in the same way, independently of the lock-up type (Output lock-up or object lock-up),

Operating principle of the priorities:

If Lock-up 1 > Lock-up 2

Active lock-up	Activation order of Lock-up 1	Activation order of Lock-up 2
None	Lock-up 1 is activated	Lock-up 2 is activated
Lock-up 1	Lock-up 1 remains active	Despite the activation order of Lock-up 2, Lock-up 1 remains activated
Lock-up 2	Lock-up 1 is activated	Lock-up 2 remains active

If Lock-up 1 = Lock-up 2

Active lock-up	Activation order of Lock-up 1	Activation order of Lock-up 2
None	Lock-up 1 is activated	Lock-up 2 is activated
Lock-up 1	Lock-up 1 remains active	Lock-up 2 is activated
Lock-up 2	Lock-up 1 is activated	Lock-up 2 remains active

If Lock-up 1 < Lock-up 2

Active lock-up	Activation order of Lock-up 1	Activation order of Lock-up 2
None	Lock-up 1 is activated	Lock-up 2 is activated
Lock-up 1	Lock-up 1 remains active	Lock-up 2 is activated
Lock-up 2	Despite the activation order of Lock-up 1, Lock-up 2 remains activated	Lock-up 2 remains active

* Default value

Parameter	Description	Value
Position during lock-up 1	During Lock-up 1, the shutter/blind output; is not changed closes the Up contact closes the Down contact opens both contacts runs to a specific position	Maintain status* Up Down Stop Specific position

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adapted.

Parameter	Description	Value
Position (0-100%)	This parameter defines the position to run the shutter or blind to.	0... 5 *...100

Note: This parameter is only visible if the **Position during lock-up 1** parameter has the following value: **Specific position**

Parameter	Description	Value
Slat position (0-100%)	This parameter defines the slat position to use for the blind.	0... 5 *...100

Note: This parameter is only visible if the **Position during lock-up 1** parameter has the value **Specific position** and if the **Closing type for channel** parameter has the value **Blind**.

Control is possible via the following objects despite Lock-up 1:

The following parameters allow the selection of the objects. The output can be controlled via the nevertheless active Lock-up

Note: These parameters are only visible if the **Lock-up type** parameter has the following value: **Objects lock-up**

* Default value

Parameter	Objects concerned	Value
Up/Down	Up/Down (long key-press)	Yes No*
Slat angle/stop	Step/Stop (short press)	Yes No*
Scene	Scene	Yes No*
Position in %	Position in %	Yes No*
Slat angle in %	Slat angle in %	Yes No*
Sun protection position in %	Sun protection position in %	Yes No*
Sun protection slat angle in %	Slat angle (0-100%)	Yes No*
Preset 1	Preset 1	Yes No*
Preset 2	Preset 2	Yes No*

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adapted.

Parameter	Description	Value
Position after lock-up function 1	<p>After lock-up 1, the shutter/blind output; is not altered</p> <p>closes the Up contact</p> <p>closes the Down contact</p> <p>runs to a specific position</p> <p>returns to the position before lock-up 1.</p> <p>runs to the position which would be active according to other communication objects if lock-up 1 had not taken place</p>	<p>Maintain status*</p> <p>Up</p> <p>Down</p> <p>Specific position</p> <p>Status before lock-up 1</p> <p>Theoretical status without lock-up function 1</p>

Note: On "Theoretical status without lock-up function", the Up/Down and slat step commands are not saved.

Note: The parameters and objects are identical for Lock-up 2, only the terms will be adapted.

* Default value

Parameter	Description	Value
Position (0-100%)	This parameter defines the position to run the shutter or blind to.	0...5*...100

Note: This parameter is only visible if the **Position after lock-up function 1** parameter has the following value: **Specific position**

Parameter	Description	Value
Slat angle (0-100%)	This parameter defines the slat position to use for the blind.	0...5*...100

Note: This parameter is only visible if the **Position after lock-up function 1** parameter has the value **Specific position** and if the **Closing type for channel** parameter has the value **Blind**.

Parameter	Description	Value
Activation of lock-up status object	The " Status indication lock-up " communication object is hidden	Not active*
	The " Status indication lock-up " communication object is displayed	Active

Communication objects: **15 - Outputs 1-2 – Status indication lock-up** (1 Bit – 1.011 DPT_State)
55 - Outputs 3-4 – Status indication lock-up (1 Bit – 1.011 DPT_State)
95 - Outputs 5-6 – Status indication lock-up (1 Bit – 1.011 DPT_State)
135 - Outputs 7-8 – Status indication lock-up (1 Bit – 1.011 DPT_State)
175 - Outputs 9-10 – Status indication lock-up (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	The Status indication Lock-up communication object sends: "0" on deactivation of the lock-up "1" on activation of the lock-up "1" on deactivation of the lock-up "0" on activation of the lock-up	0 = Lock-up deactivated, 1 = Lock-up activated* 0 = Lock-up activated, 1 = Lock-up deactivated

Parameter	Description	Value
Emission	The Status indication lock-up communication object is sent: on activation and deactivation of the lock-up periodically after a configurable time on activation and deactivation of the lock-up and periodically after a configurable time	On status change* Periodically On status change and periodically

* Default value

*Note: This parameter is only visible if the **Activation of lock-up status object** parameter has the following value: **Active***

Parameter	Description	Value
Hours (h)	This parameter determines the time between the individual transmissions of the Activation of lock-up status object.	0 hours: 0 to 23 h
Minutes (min)		10 minutes: 0 to 59 min.
Seconds (s)		0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

* Default value

3.9.5 Preset

Device: 1.1.2 10-fold switch actuator 4A 230V AC

<p>Outputs 1-10: Function</p> <p>Outputs 1-10: Function selection</p> <ul style="list-style-type: none"> - O1-10: Manual mode ON/OFF - O1-10: Status indications ON/OFF <p>Outputs 1-2: Function selection</p> <ul style="list-style-type: none"> - O1-2: Preset <p>Output 3: Function selection</p> <p>Output 4: Function selection</p> <p>Output 5: Function selection</p> <p>Output 6: Function selection</p> <p>Output 7: Function selection</p> <p>Output 8: Function selection</p> <p>Output 9: Function selection</p> <p>Output 10: Function selection</p> <p>Information</p>	<p>Preset authorization objects: Active</p> <p>Value of authorization preset 1 at initialization: Value before initialization</p> <p>Value of authorization preset 2 at initialization: Value before initialization</p> <p>Polarity of Preset 1 authorization object: 0 = Locked-up , 1 = Authorized</p> <p>Polarity of Preset 2 authorization object: 0 = Locked-up , 1 = Authorized</p> <p>Position in % if preset 1 = 0: Scene number</p> <p>Scene for preset 1 = 0: 1</p> <p>Position in % if preset 1 = 1: Specific position</p> <p>Position (0-100%): 100</p> <p>Slat angle (0-100%): 100</p> <p>Position in % if preset 2 = 0: Maintain status</p> <p>Position in % if preset 2 = 1: Maintain status</p>
---	---


The Preset function is used to switch an output into various predefined states. The preset function is activated via 1-bit format objects.

Principle of Preset authorization:

The parameters are set as follows:

- Polarity of Preset 1 authorization object: 0 = Locked-up, 1 = Authorized
- Polarity of Preset 2 authorization object: 0 = Locked-up, 1 = Authorized
- Position in % if preset 1 = 0: Shutter DOWN
- Position in % if preset 1 = 1: Shutter UP
- Position in % if preset 2 = 0: Scene1
- Position in % if preset 2 = 1: Scene 2

* Default value

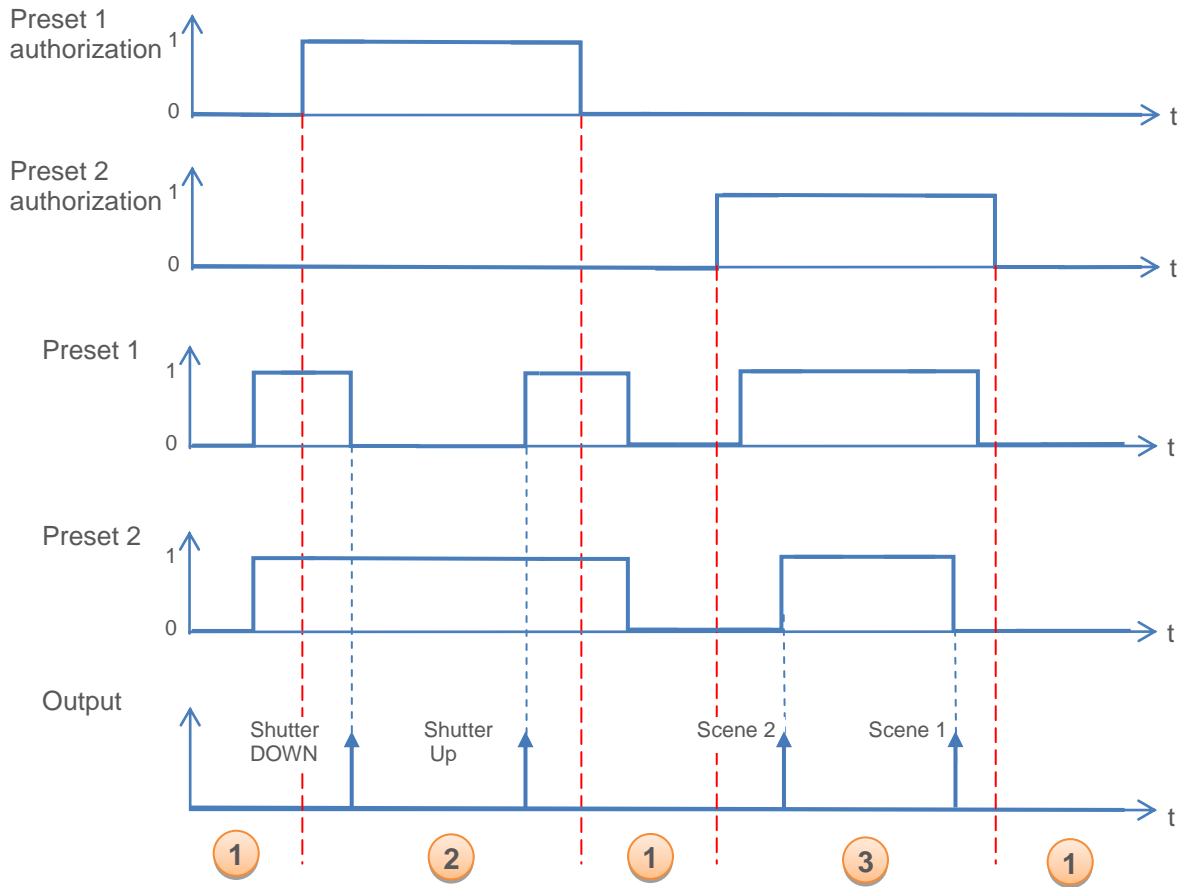

- 1 The preset inputs have no influence on the output
- 2 The commands from Preset 1 are executed
- 3 The commands from Preset 2 are executed

Note: The commands from the Preset will not be executed immediately after authorization, but only when the value of the Preset changes.

Parameter	Description	Value
Preset authorization objects	The " Preset 1 authorization " communication object and the related parameters are hidden displayed This object allows the authorization or lock-up of the Preset 1 function via a KNX telegram.	Not active* Active

Note: The number of available Preset objects is dependent on the **Preset** parameter. A maximum of two of these objects can be available.

* Default value

Communication objects: **11 - Outputs 1-2 – Preset 1 authorization** (1 Bit – 1.003 DPT_Enable)
51 - Outputs 3-4 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
91 - Outputs 5-6 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
131 - Outputs 7-8 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)
171 - Outputs 9-10 – Preset 1 authorization (1 Bit – 1.003 DPT_Enable)

Communication objects: **12 - Outputs 1-2 – Preset 2 authorization** (1 Bit – 1.003 DPT_Enable)
52 - Outputs 3-4 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
92 - Outputs 5-6 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
132 - Outputs 7-8 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)
172 - Outputs 9-10 – Preset 2 authorization (1 Bit – 1.003 DPT_Enable)

Note: The parameters and objects are identical for Preset 2, only the terms are adjusted.

Parameter	Description	Value
Value of authorization preset 1 at initialization	On initialization of the device after a download or after return of the bus power, the value of the Preset 1 authorization object is: set to "0" set to "1" according to the value that the object had before initialization	0 1 Value before initialization*

*Note: This parameter is only visible if the **Preset authorization objects** parameter has the following value: **Active***

Parameter	Description	Value
Polarity of Preset 1 authorization object	On receipt of a value on the Preset 1 authorization object, Preset 1 locked-up on object value "1" locked-up on object value "0"	0 = Authorized, 1 = Locked-up 0 = Locked-up, 1 = Authorized*

*Note: This parameter is only visible if the **Preset authorization objects** parameter has the following value: **Active***

* Default value

Parameter	Description	Value
Position in % if preset 1 = 0	During Preset 1 = 0, the shutter/blind output;	Maintain status* Up Down Stop Specific position Scene number Activate sun protection Deactivate sun protection Status before preset 1 = 1
	is not changed	
	closes the Up contact	
	closes the down contact	
	opens both contacts	
	runs to a specific position	
	runs to a position set in a scene	
	reactivates the sun protection function	
	locks-up the sun protection function	
runs back to the position for Preset 1 = 1		

Parameter	Description	Value
Position (0-100%)	This parameter defines the position to run the shutter or blind to.	0*...100

*Note: This parameter is only visible if the **Position in % if preset 1 = 0** parameter has the following value: **Specific position***

Parameter	Description	Value
Slat angle (0-100%)	This parameter defines the slat position to set for the blind.	0*...100

*Note: This parameter is only visible if the **Position in % if preset 1 = 0** parameter has the value **Specific position** and if the **Closing type for channel** parameter has the value **Blind**.*

Parameter	Description	Value
Scene number for preset 1 = 0	This parameter determines the value of the scene, if: <ul style="list-style-type: none"> - The Preset 1 object has value "1". - The Status on preset 1 object = 0 object has the scene value 	Scenes 1... 64 Default value: Scene 1

* Default value

Parameter	Description	Value
Position in % if preset 1 = 1	On Preset 1 = 1, the shutter/blind output; is not changed closes the Up contact closes the Down contact opens both contacts runs to a specific position runs to a position set in a scene reactivates the sun protection function locks-up the sun protection function runs back to the position for Preset 1 = 0	Maintain status* Up Down Stop Specific position Scene number Activate sun protection Deactivate sun protection Status before preset 1 = 0

Parameter	Description	Value
Position (0-100%)	This parameter defines the position to run the shutter or blind to.	0 *...100

*Note: This parameter is only visible if the **Position in % if preset 1 = 1** parameter has the following value: **Specific position***


Parameter	Description	Value
Slat angle (0-100%)	This parameter defines the slat position to use for the blind.	0 *...100

*Note: This parameter is only visible if the **Position in % if preset 1 = 1** parameter has the value **Specific position** and if the **Closing type for channel** parameter has the value **Blind**.*

Parameter	Description	Value
Scene number for preset 1 = 1	This parameter determines the value of the scene, if: <ul style="list-style-type: none"> - The Preset 1 object has value "1". - The Status on preset 1 object = 1 object has the scene value 	Scenes 1... 64 Default value: Scene 2

* Default value

3.9.6 Priority

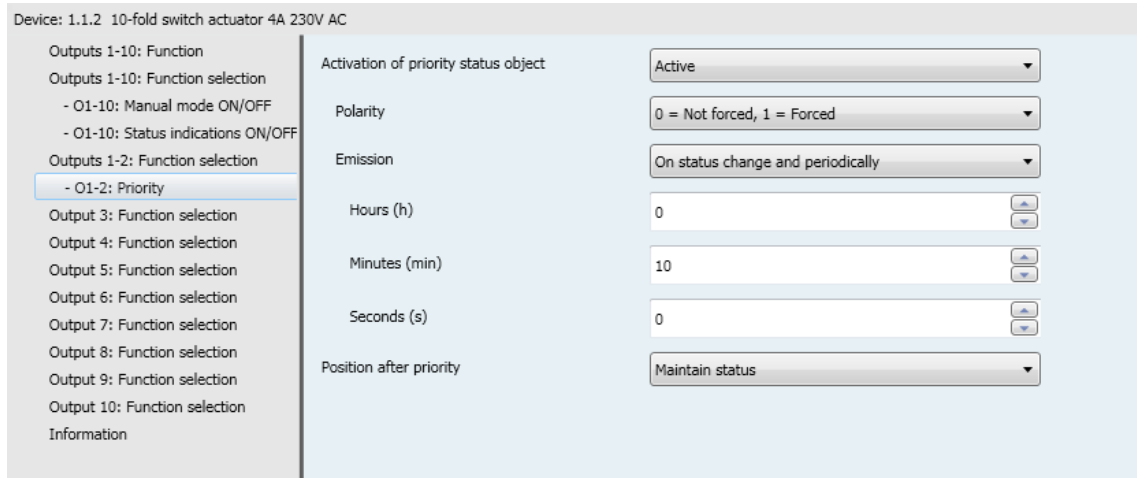

The Priority is used to force the output into a predefined state.
 Priority: Manual operation > **Priority** > Lock-up > Basic functions.
 No other command is taken into account when the Priority is active.
 Only by ending the Priority are other commands again permitted.

Parameter	Description	Value
Activation of priority status object	The " Status indication priority " communication object and related parameters are hidden	Not active*
	The " Status indication priority " communication object and related parameters are displayed.	Active

- Communication objects:
- 17 - Outputs 1-2 – Status indication priority** (1 Bit – 1.011 DPT_State)
 - 57 - Outputs 3-4 – Status indication priority** (1 Bit – 1.011 DPT_State)
 - 97 - Outputs 5-6 – Status indication priority** (1 Bit – 1.011 DPT_State)
 - 137 - Outputs 7-8 – Status indication priority** (1 Bit – 1.011 DPT_State)
 - 177 - Outputs 9-10 – Status indication priority** (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	The Status indication priority communication object sends:	
	"1" on activation of the Priority	0 = Not forced, 1 = Forced*
	"0" on deactivation of the Priority	
	"1" on deactivation of the Priority	0 = Forced, 1 = Not forced*
"0" on activation of the Priority		

*Note: This parameter is only visible if the **Activation of priority status object** parameter has the following value: **Active***

* Default value

Parameter	Description	Value
Emission	The Status indication priority communication object is sent: on activation and deactivation of the Priority periodically after a configurable time on activation and deactivation of the Priority and periodically after a configurable time	On status change* Periodically On status change and periodically

*Note: This parameter is only visible if the **Activation of priority status object** parameter has the following value: **Active***

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Activation of priority status object.	0 hours: 0 to 23 h 10 minutes: 0 to 59 min. 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

Parameter	Description	Value
Position after priority	After Priority, the shutter/blind output; is not altered closes the Up contact closes the Down contact runs to a specific position returns to the Position before super alarm. runs to the position which would be active according to another communication object if the super alarm had not taken place.	Maintain status* Up Down Specific position Status before priority Theoretical status without priority

* Default value

3.9.7 Alarm

Device: 1.1.2 10-fold switch actuator 4A 230V AC

Outputs 1-10: Function selection

Outputs 1-10: Function selection

- O1-10: Manual mode ON/OFF
- O1-10: Status indications ON/OFF

Outputs 1-2: Function selection

- O1-2: Alarm

Output 3: Function selection

Output 4: Function selection

Output 5: Function selection

Output 6: Function selection

Output 7: Function selection

Output 8: Function selection

Output 9: Function selection

Output 10: Function selection

Information

Alarm 1 Permanently ▼

Position on alarm 1 Maintain status ▼

Position after alarm 1 Maintain status ▼

Alarm 2 Permanently ▼

Position on alarm 2 Maintain status ▼

Position after alarm 2 Maintain status ▼

Alarm 3 Permanently ▼

Position on alarm 3 Maintain status ▼

Position after alarm 3 Maintain status ▼

Priority between alarm 1, 2 and 3 Alarm 1 > Alarm 2 > Alarm 3 ▼

Alarm status object Active ▼

Polarity 0 = Alarm deactivated, 1 = Alarm activated ▼

Emission On status change ▼

Alarm monitoring period Active ▼

Hours (h) 0 ▲▼

Minutes (min) 30 ▲▼

Seconds (s) 0 ▲▼

3.9.7.1 Alarm 1 to 3

Parameter	Description	Value
Alarm X	This parameter defines whether the alarm function is active permanently or time-limited.	Permanently* Time limited

X = 1 to 3

Permanently: The function is active until receipt of an alarm cancellation.

Time limited: The function is activated for a given period. At the end of this delay, the alarm is no longer active. To switch the alarm function on again for a given period, a new activation of the function is required.

Parameter	Description	Value
Duration of alarm X	This parameter determines the activation time of the alarm function.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min 0 seconds: 0 to 59 s

* Default value

X = 1 to 3

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Alarm X** parameter has the following value: **Time limited***

Parameter	Description	Value
Position on alarm X	On Alarm X, the shutter/blind output; is not changed closes the Up contact closes the Down contact opens both contacts runs to a specific position runs to a position set in a scene	Maintain status* Up Down Stop Specific position Scene number

X = 1 to 3

Parameter	Description	Value
Position (0-100%)	This parameter defines the position to run the shutter or blind to on triggering of the relevant alarms.	0... 5* ...100

- **0...100**: Position of the shutter or blind.

*Note: This parameter is only visible if the **Position on alarm X** parameter has the following value: **Specific position***

Parameter	Description	Value
Slat angle (0-100%)	This parameter defines the slat position to apply to the blind on triggering of the relevant alarm.	0... 5* ...100

*Note: This parameter is only visible if the **Position on alarm X** parameter has the value **Specific position** and if the **Closing type** for channel parameter has the value **blind**.*

Parameter	Description	Value
Scene number on alarm X	This parameter defines the scene number to be activated on triggering of the relevant alarm.	Scenes 1... 64 Default value: Scene 1

X = 1 to 3

The outputs respond according to the scene numbers and associated parameters.

*Note: This parameter is only visible if the **Position on alarm X** parameter has the following value: **Scene**.*

* Default value

If several alarms triggered at the same time, the commands associated with the highest priority alarm are executed. The following parameters allow definition of this priority according to the alarm number.

Parameter	Description	Value
Priority between alarm 1 and 2	This parameter defines the priority between 2 alarm functions.	Alarm 1 > Alarm 2* Alarm 2 > Alarm 1

*Note: This parameter is only visible if the **Alarm** parameter has the following value: **2 alarm objects**.*

Parameter	Description	Value
Priority between alarm 1, 2 and 3	This parameter defines the priority between 3 alarm functions.	Alarm 1 > Alarm 2 > Alarm 3* Alarm 1 > Alarm 3 > Alarm 2 Alarm 2 > Alarm 1 > Alarm 3 Alarm 2 > Alarm 3 > Alarm 1 Alarm 3 > Alarm 1 > Alarm 2 Alarm 3 > Alarm 2 > Alarm 1

*Note: This parameter is only visible if the **Alarm** parameter has the following value: **3 alarm objects**.*

3.9.7.2 Status indication Alarm

Parameter	Description	Value
Alarm status object	This parameter is used to authorize the Alarm status object. This object allows the status of the alarm to be sent from the device over the KNX bus.	Not active* Active

- Communication objects:
- 21 - Outputs 1-2 – Alarm status object** (1 Bit – 1.011 DPT_State)
 - 61 - Outputs 3-4 – Alarm status object** (1 Bit – 1.011 DPT_State)
 - 101 - Outputs 5-6 – Alarm status object** (1 Bit – 1.011 DPT_State)
 - 141 - Outputs 7-8 – Alarm status object** (1 Bit – 1.011 DPT_State)
 - 181 - Outputs 9-10 – Alarm status object** (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	The Alarm status object sends "0" if no alarm is active "1" if one of the three alarms is active "1" if no alarm is active "0" if one of the three alarms is active	0 = Alarm deactivated, 1 = Alarm activated* 0 = Alarm activated, 1 = Alarm deactivated

* Default value

Parameter	Description	Value
Emission	The Alarm status indication communication object is sent: on activation and deactivation of the alarm periodically after a configurable time on activation and deactivation of the alarm and periodically after a configurable time	On status change* Periodically On status change and periodically

*Note: This parameter is only visible if the **Alarm status object** parameter has the following value: **Active***

Parameter	Description	Value
Periodical emission delay	This parameter determines the time between the individual transmissions of the Alarm status objects.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

3.9.7.3 Alarm monitoring period

Parameter	Description	Value
Alarm monitoring period	The Alarm 1-3 objects; expect no periodic signal expect a periodic "0" signal. If this signal is absent, the alarm function is automatically activated and the shutters/blinds are taken by this parameter to the position defined by alarm X .	Not active* Active

Parameter	Description	Value
Alarm monitoring period duration	This parameter defines the maximum time between two "0" signals on the Alarm X communication object	0 hours: 0 to 23 h 15 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Alarm monitoring period** parameter has the following value: **Active***

* Default value

3.9.8 Sun protection

Device: 1.1.2 10-fold switch actuator 4A 230V AC


<ul style="list-style-type: none"> Outputs 1-10: Function Outputs 1-10: Function selection <ul style="list-style-type: none"> - O1-10: Manual mode ON/OFF - O1-10: Status indications ON/OFF Outputs 1-2: Function selection <ul style="list-style-type: none"> - O1-2: Sun protection Output 3: Function selection Output 4: Function selection Output 5: Function selection Output 6: Function selection Output 7: Function selection Output 8: Function selection Output 9: Function selection Output 10: Function selection Information 	<p>Sun protection type: <input type="text" value="Objects position and slat angle"/></p> <p>Sun protection lock-up by local control: <input type="text" value="Active"/></p> <p>Lock-up on: <input type="text" value="Up/down and step/stop control"/></p> <p>Sun protection lock-up: <input type="text" value="Permanently"/></p> <p>Sun protection authorization object: <input type="text" value="Active"/></p> <p>Polarity: <input type="text" value="0 = Locked-up , 1 = Authorized"/></p> <p>Value at initialization: <input type="text" value="0"/></p> <p>Position after sun protection: <input type="text" value="Maintain status"/></p> <p>Sun protection status object: <input type="text" value="Active"/></p> <p>Polarity: <input type="text" value="0 = Locked-up , 1 = Authorized"/></p> <p>Emission: <input type="text" value="On status change"/></p>
--	--

General description of the sun protection control: shade trim and slat adjustment

Using the shade trim control the Sun protection is not run all the way down but rather just so far down that only a configurable strip of sunshine (e.g. 50 cm) enters the room. In this way, users at the bottom of the window can see out and plants on the windowsill will receive sunshine.

Note: The shade trim adjustment is only usable with sun protection that runs from the top to the bottom (such as shutters, textile sun protection or blinds with horizontal slats). This function is not usable for a sun protection that is pulled from one side to the other or pulled in front of a window from both sides.


During slat adjustment, the horizontal slats of the blinds are not fully closed; rather they are matched to the sun condition and set automatically in such a way that the sun cannot shine directly into the room. However diffuse daylight can enter the room between the slats and so provide glare-free room lighting. Slat adjustment of an external blind prevents the entry of heat from sunshine into the room and, at the same time, reduces the cost of electricity for room lighting.

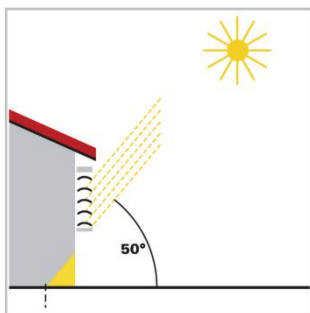

Sun protection at high sun elevations

The sun protection is only partially closed and automatically driven so far down that the sun can only shine into the room as far as the maximum permitted penetration depth. The slats can be made almost horizontal without the sun shining directly into the room.


* Default value

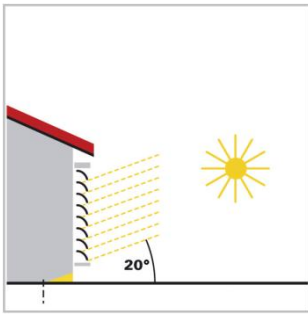

Sun protection at medium sun elevations

The sun protection will automatically be lowered so that the maximum penetration depth of sunshine into the room is not exceeded.

The slats are automatically closed so far that the sun cannot shine directly into the room. Diffuse daylight, however, can still continue to enter and so provide lighting for the room (daylight use).

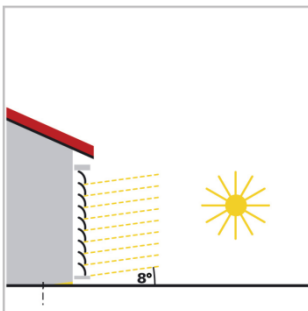

Sun protection at low sun elevations

The sun protection is automatically lowered almost completely, so that the sun cannot shine too far into the room.

The slats are automatically closed to an extent where the sun cannot shine directly into the room.

Parameter	Description	Value
Sun protection type	An external sun protection control sends the following commands for the positioning of the curtains:	
	Positioning and slat adjustments	Position and slat angle objects*
	Positioning only	Position objects only
	Slat adjustment only	Slat angle object only

*Note: These objects are only visible if the **Sun protection type** parameter has the following value: **Position and Slat angle object** or **Position objects only**.*

- Communication objects:
- 22 - Outputs 1-2 – Sun protection position in %** (1 Byte – 5.001 DPT_Scaling)
 - 62 - Outputs 3-4 – Sun protection position in %** (1 Byte – 5.001 DPT_Scaling)
 - 102 - Outputs 5-6 – Sun protection position in %** (1 Byte – 5.001 DPT_Scaling)
 - 142 - Outputs 7-8 – Sun protection position in %** (1 Byte – 5.001 DPT_Scaling)
 - 182 - Outputs 9-10 – Sun protection position in %** (1 Byte – 5.001 DPT_Scaling)

*Note: These objects are only visible if the **Sun protection type** parameter has the following value: **Position and Slat angle object** or **Slat angle objects only**.*

- Communication objects:
- 23 - Outputs 1-2 – Sun protection slat angle in %** (1 Byte – 5.001 DPT_Scaling)
 - 63 - Outputs 3-4 – Sun protection slat angle in %** (1 Byte – 5.001 DPT_Scaling)
 - 103 - Outputs 5-6 – Sun protection slat angle in %** (1 Byte – 5.001 DPT_Scaling)
 - 143 - Outputs 7-8 – Sun protection slat angle in %** (1 Byte – 5.001 DPT_Scaling)
 - 183 - Outputs 9-10 – Sun protection slat angle in %** (1 Byte – 5.001 DPT_Scaling)

* Default value

Parameter	Description	Value
Sun protection lock-up by local control	<p>This parameter allows lock-up of the Sun protection position in % object and the sun protection slat position in % after operation of the shutter/blind with local KNX controls.</p> <p>When this function is activated, the Sun protection reactivation object is also displayed. This allows a reactivation of both sun protection objects.</p>	<p>Not active*</p> <p>Active</p>

Communication objects:

- 25 - Outputs 1-2 – Sun protection reactivation** (1 Bit – 1.003 DPT_Enable)
- 65 - Outputs 3-4 – Sun protection reactivation** (1 Bit – 1.003 DPT_Enable)
- 105 - Outputs 5-6 – Sun protection reactivation** (1 Bit – 1.003 DPT_Enable)
- 145 - Outputs 7-8 – Sun protection reactivation** (1 Bit – 1.003 DPT_Enable)
- 185 - Outputs 9-10 – Sun protection reactivation** (1 Bit – 1.003 DPT_Enable)

Parameter	Description	Value
Lock-up on	<p>This parameter specifies on which local control commands the sun protection will lock up:</p> <p>Only after Up/Down (long key-press) commands</p> <p>Only after slat step (short key-press) commands</p> <p>After Up/Down and slat step commands</p> <p>After all basic commands</p>	<p>Up/down control</p> <p>Step/stop control</p> <p>Up/down and step/stop control*</p> <p>All basic commands</p>

*Note: This parameter is only visible if the **Deactivate sun protection by local control** parameter has the following value: **Active***

Note: "All basic commands" means the commands with the lowest priority (scenes, timers, etc.)

Parameter	Description	Value
Sun protection lock-up	<p>This parameter defines whether the Sun protection function is permanently activated or time-limited.</p> <p>The lock-up is active until it receives a "0" or "1" signal on the Sun protection reactivation object.</p> <p>The lock-up is active for a configurable time, after expiry of which the sun protection objects are again processed.</p>	<p>Permanently*</p> <p>Time limited</p>

* Default value


Parameter	Description	Value
Sun protection authorization object	With this parameter, the device's Sun protection authorization object can be activated or deactivated.	Not active* Active

- Communication objects:
- 24 - Outputs 1-2 – Sun protection authorization** (1 Bit – 1.003 DPT_Enable)
 - 64 - Outputs 3-4 – Sun protection authorization** (1 Bit – 1.003 DPT_Enable)
 - 104 - Outputs 5-6 – Sun protection authorization** (1 Bit – 1.003 DPT_Enable)
 - 144 - Outputs 7-8 – Sun protection authorization** (1 Bit – 1.003 DPT_Enable)
 - 184 - Outputs 9-10 – Sun protection authorization** (1 Bit – 1.003 DPT_Enable)

Principle of the Sun protection authorization function:

The parameters are set as follows:

- Sun protection authorization: 0 = Locked-up, 1 = Authorized

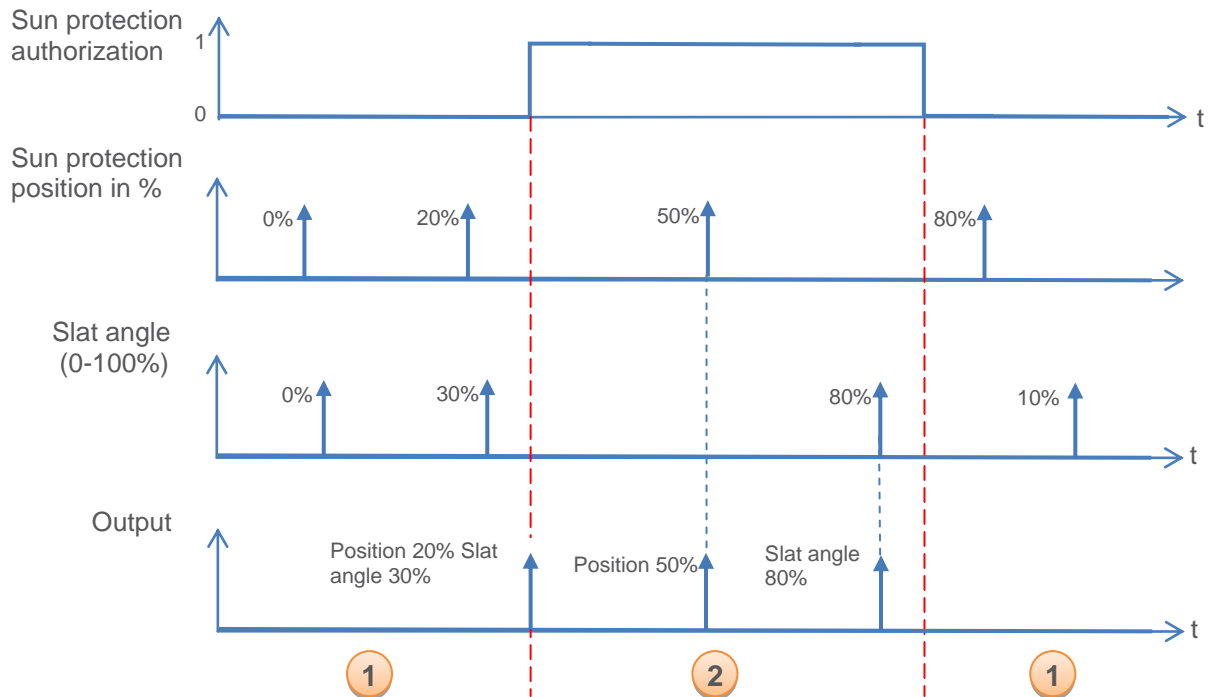

- ① The sun protection function has no effect on the output
- ② The commands from the sun protection functions are executed

Note: The sun protection function commands will be executed immediately on authorization.

* Default value

Parameter	Description	Value
Polarity	<p>This parameter defines how the device will react on receipt of a telegram to the Sun protection authorization object</p> <p>. "0" = Sun protection locked-up (switched off) "1" = Sun protection authorized (switched on)</p> <p>"0" = Sun protection authorized (switched on) "1" = Sun protection locked-up (switched off)</p>	<p>0 = Locked-up, 1 = Authorized*</p> <p>0 = Authorized, 1 = Locked-up</p>

*Note: This parameter is only visible if the **Sun protection authorization** object parameter has the following value: **Active***

Parameter	Description	Value
Value at initialization	<p>On initialization of the device after a download or after return of the bus power, the value of the Sun protection authorization object is:</p> <p>set to "0"</p> <p>set to "1"</p> <p>set according to the value that the object had before initialization</p>	<p>0*</p> <p>1</p> <p>Value before initialization</p>

Parameter	Description	Value
Position after sun protection	<p>After lock-up of the sun protection due to a "0" on the Sun protection authorization object, the output is</p> <p>not changed</p> <p>run Up</p> <p>run Down</p> <p>run to a specific position</p> <p>run to a position set in a scene</p> <p>run to the position before the priority</p>	<p>Maintain status*</p> <p>Up</p> <p>Down</p> <p>Specific position</p> <p>Scene number</p> <p>Position before sun protection</p>

Parameter	Description	Value
Position (0-100%)	<p>This parameter defines the position to run the shutter or blind to.</p>	<p>0*...100</p>

*Note: This parameter is only visible if the **Position after sun protection** has the value **Specific position** and if the **Sun protection type** parameter has the value **Position and Slat position object** or **Position object** only.*

* Default value

Parameter	Description	Value
Slat position (0-100%)	This parameter defines the slat position to use for the blind.	0*...100

*Note: This parameter is only visible if the **Position after sun protection** has the value **Specific position** and if the **Sun protection type** parameter has the value **Position and Slat position object** or **Position only object**.*

Parameter	Description	Value
Scene number after sun protection	This parameter defines the scene number that is to be activated after the sun protection.	Scenes 1... 64 Default value: Scene 1

The outputs respond according to the scene numbers and associated parameters

*Note: This parameter is only visible if the **Position after sun protection** parameter has the following value: **Scene***

Parameter	Description	Value
Sun protection status object	This parameter is used to authorize the Sun protection status object. This object allows the status of the sun protection to be sent from the device to the KNX bus.	Not active* Active

Communication objects:

- 26 - Outputs 1-2 – Sun protection status** (1 Bit – 1.011 DPT_State)
- 66 - Outputs 3-4 – Sun protection status** (1 Bit – 1.011 DPT_State)
- 106 - Outputs 5-6 – Sun protection status** (1 Bit – 1.011 DPT_State)
- 146 - Outputs 7-8 – Sun protection status** (1 Bit – 1.011 DPT_State)
- 186 - Outputs 9-10 – Sun protection status** (1 Bit – 1.011 DPT_State)

Parameter	Description	Value
Polarity	This parameter defines the polarity of the Sun protection status indication : "0" = Sun protection locked up "1" = Sun protection authorized "0" = Sun protection authorized "1" = Sun protection locked-up	0 = Locked-up, 1 = Authorized* 0 = Authorized, 1 = Locked-up

*Note: This parameter is only visible if the **Sun protection status object** parameter has the following value: **Active***

* Default value

Parameter	Description	Value
Emission	The Sun protection status communication object is sent: on activation and deactivation of the lock-up periodically after a configurable time on activation and deactivation of the lock-up and periodically after a configurable time	On status change* Periodically On status change and periodically

*Note: This parameter is only visible if the **Sun protection status object** parameter has the following value: **Active***

Parameter	Description	Value
Hours (h) Minutes (min) Seconds (s)	This parameter determines the time between the individual transmissions of the Sun protection status objects.	0 hours: 0 to 23 h 30 minutes: 0 to 59 min 0 seconds: 0 to 59 s

Note: The smallest executable time is 1 second.

*Note: This parameter is only visible if the **Emission** parameter has the following value: **Periodically** or **On status change and periodically***

* Default value

4 Communication objects Overview

4.1 Communication objects *General*

	Number	Name	Object function	Length	C	R	W	T
	200	Outputs 1-10: ON/OFF	Deactivation of manual mode	1 Bit	C	R	W	-
	201	Outputs 1-10: ON/OFF	Status indication manual mode	1 Bit	C	R	-	T
	202	Logic block 1	Authorization	1 Bit	C	R	W	-
	203	Logic block 1	Input 1	1 Bit	C	R	W	-
	204	Logic block 1	Input 2	1 Bit	C	R	W	-
	205	Logic block 1	Input 3	1 Bit	C	R	W	-
	206	Logic block 1	Input 4	1 Bit	C	R	W	-
	207	Logic block 1	Logic result	1 Bit	C	R	-	T
	208	Logic block 2	Authorization	1 Bit	C	R	W	-
	209	Logic block 2	Input 1	1 Bit	C	R	W	-
	210	Logic block 2	Input 2	1 Bit	C	R	W	-
	211	Logic block 2	Input 3	1 Bit	C	R	W	-
	212	Logic block 2	Input 4	1 Bit	C	R	W	-
	213	Logic block 2	Logic result	1 Bit	C	R	-	T
	214	Outputs 1-10: Shutter	Super alarm	1 Bit	C	R	W	-
	215	Outputs 1-10: Shutter	Super alarm status	1 Bit	C	R	-	T
	216	Outputs 1-10: Shutter	Deactivation of manual mode	1 Bit	C	R	W	-
	217	Outputs 1-10: Shutter	Status indication manual mode	1 Bit	C	R	-	T
	218	Logic block 1	Authorization	1 Bit	C	R	W	-
	219	Logic block 1	Input 1	1 Bit	C	R	W	-
	220	Logic block 1	Input 2	1 Bit	C	R	W	-
	221	Logic block 1	Input 3	1 Bit	C	R	W	-
	222	Logic block 1	Input 4	1 Bit	C	R	W	-
	223	Logic block 1	Logic result	1 Bit	C	R	-	T
	224	Logic block 2	Authorization	1 Bit	C	R	W	-
	225	Logic block 2	Input 1	1 Bit	C	R	W	-
	226	Logic block 2	Input 2	1 Bit	C	R	W	-
	227	Logic block 2	Input 3	1 Bit	C	R	W	-
	228	Logic block 2	Input 4	1 Bit	C	R	W	-
	229	Logic block 2	Logic result	1 Bit	C	R	-	T
	230	Outputs 1-10: ON/OFF	Restore ETS-params settings	1 Bit	C	R	W	-
	231	Outputs 1-10: ON/OFF	Device LED switch off	1 Bit	C	R	W	-
	232	Outputs 1-10	Device diagnosis	6 Byte	C	R	-	T

4.1.1 Manual mode

No.	Description	Function of the object	Data type	Flags
200	Outputs 1-10: ON/OFF	Deactivation of manual mode	1 Bit – 1.001 DPT_Switch	C, R, W
<p>This object is activated if the Manual mode parameter and the Deactivation of manual mode object are active.</p> <p>This object is used to control the manual mode via the KNX bus.</p> <p>Object value: depends on the Polarity parameter.</p> <p>0 = Manual mode locked-up, 1 = Manual mode authorized</p> <ul style="list-style-type: none"> - If the object receives the value "1", manual mode is activated. - If the object receives the value "0", manual mode is deactivated. <p>0 = Manual mode authorized, 1 = Manual mode locked-up:</p> <ul style="list-style-type: none"> - If the object receives the value "1", manual mode is deactivated. - If the object receives the value "0", manual mode is activated. <p>For further information, see: Manual mode ON/OFF</p>				

No.	Description	Function of the object	Data type	Flags
216	Outputs 1-10: Shutter	Deactivation of manual mode	1 Bit – 1.001 DPT_Switch	C, R, W
<p>See object No. 200</p> <p>For further information, see: Manual mode Shutter</p>				

No.	Description	Function of the object	Data type	Flags
201	Outputs 1-10: ON/OFF	Status indication manual mode	1 Bit – 1.011 DPT_Switch	C, R, T
<p>This object is activated if the Manual mode parameter and the Object status indication manual mode are active.</p> <p>This object is used to send the manual mode status of the device via the KNX bus.</p> <p>Object value: depends on the Polarity parameter.</p> <p>0 = Manual mode active, 1 = Manual mode not active:</p> <ul style="list-style-type: none"> - If manual mode is deactivated, a telegram is sent with logic value "1". - If manual mode is activated, a telegram is sent with logic value "0". <p>0 = Manual mode not active, 1 = Manual mode active:</p> <ul style="list-style-type: none"> - If manual mode is activated, a telegram is sent with logic value "1". - If manual mode is deactivated, a telegram is sent with logic value "0". <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Manual mode ON/OFF</p>				

No.	Description	Function of the object	Data type	Flags
217	Outputs 1-10: Shutter	Status indication manual mode	1 Bit – 1.011 DPT_Switch	C, R, T
<p>See object No. 201</p> <p>For further information, see: Manual mode Shutter</p>				

4.1.2 Logic block

No.	Description	Function of the object	Data type	Flags
202	Logic block 1	Authorization	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Logic block 1 parameter and the Lock-up logic block object are active.</p> <p>This object makes it possible to activate or deactivate the logic blocks of the device via the KNX bus.</p> <p>Object value: depends on the Polarity parameter.</p> <p>0 = Locked-up, 1 = Authorized:</p> <ul style="list-style-type: none"> - If the object receives the value "1", logic block 0 is deactivated. - If the object receives the value "1", logic block 1 is activated. <p>0 = Authorized, 1 = Locked-up:</p> <ul style="list-style-type: none"> - If the object receives the value "1", logic block 0 is activated. - If the object receives the value "1", logic block 1 is deactivated. <p>The value of this object can be initialized at start-up of the device.</p> <p>For further information, see: Logic block ON/OFF</p>				

No.	Description	Function of the object	Data type	Flags
218	Logic block	Authorization	1 Bit – 1.003 DPT_Enable	C, R, W
<p>See object No. 202</p> <p>For further information, see: Logic block Shutter</p>				

No.	Description	Function of the object	Data type	Flags
203	Logic block 1	Input 1	1 Bit – 1.002 DPT_Bool	C, R, W
204	Logic block 1	Input 2	1 Bit – 1.002 DPT_Bool	C, R, W
205	Logic block 1	Input 3	1 Bit – 1.002 DPT_Bool	C, R, W
206	Logic block 1	Input 4	1 Bit – 1.002 DPT_Bool	C, R, W
<p>These objects are activated in accordance with the value of the Number of logic inputs parameter.</p> <p>There may be up to a maximum of 4 of these objects.</p> <p>These objects are used to produce the status of a logic input for processing of the logic operation.</p> <p>The value of these objects can be initialized at start-up of the device.</p> <p>For further information, see: Logic block ON/OFF</p>				

No.	Description	Function of the object	Data type	Flags
219	Logic block 1	Input 1	1 Bit – 1.002 DPT_Bool	C, R, W
220	Logic block 1	Input 2	1 Bit – 1.002 DPT_Bool	C, R, W
221	Logic block 1	Input 3	1 Bit – 1.002 DPT_Bool	C, R, W
222	Logic block 1	Input 4	1 Bit – 1.002 DPT_Bool	C, R, W

See object No. 203

For further information, see: [Logic block Shutter](#)

No.	Description	Function of the object	Data type	Flags
207	Logic block 1	Logic result	1 Bit – 1.002 DPT_Bool	C, R, T

This object is activated when the **Logic block 1** parameter is active.

This object enables output of the results of the logic operation via the bus.

The value of the object is the result of a logic AND or OR operation, according to the status of the logic inputs. There may be up to a maximum of 4 of these objects. This result can also be directly assigned to the status of the output contact.

For further information, see: [Logic block ON/OFF](#)

No.	Description	Function of the object	Data type	Flags
223	Logic block 1	Logic result	1 Bit – 1.002 DPT_Bool	C, R, T

See object No. 207

For further information, see: [Logic block Shutter](#)

No.	Description	Function of the object	Data type	Flags
208	Logic block 2	Authorization	1 Bit – 1.003 DPT_Enable	C, R, W

See object No. 202

No.	Description	Function of the object	Data type	Flags
224	Logic block 2	Authorization	1 Bit – 1.003 DPT_Enable	C, R, W

See object No. 218

No.	Description	Function of the object	Data type	Flags
209	Logic block 2	Input 1	1 Bit – 1.002 DPT_Bool	C, R, W
210	Logic block 2	Input 2	1 Bit – 1.002 DPT_Bool	C, R, W
211	Logic block 2	Input 3	1 Bit – 1.002 DPT_Bool	C, R, W
212	Logic block 2	Input 4	1 Bit – 1.002 DPT_Bool	C, R, W

See object No. 203

No.	Description	Function of the object	Data type	Flags
225	Logic block 2	Input 1	1 Bit – 1.002 DPT_Bool	C, R, W
226	Logic block 2	Input 2	1 Bit – 1.002 DPT_Bool	C, R, W
227	Logic block 2	Input 3	1 Bit – 1.002 DPT_Bool	C, R, W
228	Logic block 2	Input 4	1 Bit – 1.002 DPT_Bool	C, R, W
See object No. 219				

No.	Description	Function of the object	Data type	Flags
213	Logic block 2	Logic result	1 Bit – 1.002 DPT_Bool	C, R, T
See object No. 207				

No.	Description	Function of the object	Data type	Flags
229	Logic block 2	Logic result	1 Bit – 1.002 DPT_Bool	C, R, T
See object No. 223				

4.1.3 Super alarm

No.	Description	Function of the object	Data type	Flags
214	Outputs 1-10: Shutter	Super alarm	1 Bit – 1.005 DPT_Alarm	C, R, W
<p>This object is activated when the Super alarm parameter is active.</p> <p>This object is used to determine the status of all the outputs of the device with the highest bus priority.</p> <p>If the object receives the value "1", all the outputs of the device are switched to a predefined status. All other modes including manual mode will not be considered.</p> <p>The function can only be ended by receipt of a telegram with the value "0".</p> <p>For further information, see: Super alarm</p>				

No.	Description	Function of the object	Data type	Flags
215	Outputs 1-10: Shutter	Super alarm status	1 Bit – 1.005 DPT_Alarm	C, R, T
<p>This object is activated when the Status indication super alarm parameter is active.</p> <p>This object allows the status of the super alarm to be sent over the KNX bus.</p> <p>Object value: This depends on the Polarity parameter.</p> <p>0 = activated, 1 = deactivated</p> <ul style="list-style-type: none"> - If the super alarm is deactivated, a telegram with logic value "1" is sent on the KNX bus. - If the super alarm is activated, a telegram with logic value "0" is sent on the KNX bus. <p>0 = deactivated, 1 = activated</p> <ul style="list-style-type: none"> - If the super alarm is activated, a telegram with logic value "1" is sent on the KNX bus. - If the super alarm is deactivated, a telegram with logic value "0" is sent on the KNX bus. <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Super alarm</p>				

4.1.4 Behaviour of the device

No.	Description	Function of the object	Data type	Flags
230	Outputs 1-10	Restore ETS-params settings	1 Bit – 1.015 DPT_Reset	C, R, W
<p>This object is activated if the Activ. of restore ETS-parameters object (scenes) parameter is active.</p> <p>This object enables the current parameter value to be replaced at any time with the ETS parameter value.</p> <p>If the object receives value "1", then the output status values for the scenes, the timer duration specifications and all the counter setpoints are reset to the values sent by the last download.</p> <p>For further information, see: Special management of certain ETS parameters</p>				

No.	Description	Function of the object	Data type	Flags
231	Outputs 1-10: ON/OFF	Device LED switch off	1 Bit – 1.001 DPT_Switch	C, R, W
<p>This object is activated if the Device LEDS lock-up object parameter is active.</p> <p>This function is used to reduce the overall power consumption of the device. It allows the LEDs on the front of the device to be switched off.</p> <p>Object value: depends on the Polarity parameter</p> <p>0 = Status indication, 1 = Always OFF:</p> <ul style="list-style-type: none"> - If the object receives value "0", the LED display is activated. - If the object receives value "1", the LED display is deactivated. <p>0 = Always OFF, 1 = Status indication:</p> <ul style="list-style-type: none"> - If the object receives value "0", the LED display is deactivated. - If the object receives value "1", the LED display is activated. <p>For further information, see: LED display</p>				

4.1.5 Device diagnosis

No.	Description	Function of the object	Data type	Flags
232	Outputs 1-10	Device diagnosis	6 Byte - Specific	C, R, T

This object is activated when the **Device diagnosis object** parameter is active.

The object enables reporting of current faults according to the device and the application used. It also allows sending of the position of the switch on the front of the device and the number of the output that is affected by the fault(s).

Byte count	6 (MSB)	5		4	3	2	1 (LSB)
Use	Switch position	Application type	Output number	Error codes			

This object is sent periodically and/or on status change.

For further information, see: [Device diagnosis](#)

4.2 Communication objects for each switch actuator

	Number	Name	Object function	Length	C	R	W	T
	0	Output 1	ON/OFF	1 Bit	C	R	W	-
	1	Output 1	Timer/toggle switch changeover	1 Bit	C	R	W	-
	2	Output 1	Time limited toggle switch	1 Bit	C	R	W	-
	3	Output 1	Status indication ON/OFF	1 Bit	C	R	-	T
	4	Output 1	Timer	1 Bit	C	R	W	-
	5	Output 1	Timer duration	3 Byte	C	R	W	-
	6	Output 1	Scene	1 Byte	C	R	W	-
	7	Output 1	Preset 1	1 Bit	C	R	W	-
	8	Output 1	Preset 2	1 Bit	C	R	W	-
	9	Output 1	Preset 1 authorization	1 Bit	C	R	W	-
	10	Output 1	Preset 2 authorization	1 Bit	C	R	W	-
	11	Output 1	Lock-up 1	1 Bit	C	R	W	-
	12	Output 1	Lock-up 2	1 Bit	C	R	W	-
	13	Output 1	Status indication lock-up	1 Bit	C	R	-	T
	14	Output 1	Priority	2 Bit	C	R	W	-
	15	Output 1	Status indication priority	1 Bit	C	R	-	T
	16	Output 1	Hours counter value	2 Byte	C	R	-	T
	17	Output 1	Reset Hours counter	1 Bit	C	R	W	-
	18	Output 1	Hours counter setpoint reached	1 Bit	C	R	-	T
	19	Output 1	Operating h. counter setpoint	2 Byte	C	R	W	-
	20	Output 2	ON/OFF	1 Bit	C	R	W	-
	21	Output 2	Timer/toggle switch changeover	1 Bit	C	R	W	-
	22	Output 2	Time limited toggle switch	1 Bit	C	R	W	-
	23	Output 2	Status indication ON/OFF	1 Bit	C	R	-	T
	24	Output 2	Timer	1 Bit	C	R	W	-
	25	Output 2	Timer duration	3 Byte	C	R	W	-
	26	Output 2	Scene	1 Byte	C	R	W	-
	27	Output 2	Preset 1	1 Bit	C	R	W	-
	28	Output 2	Preset 2	1 Bit	C	R	W	-
	29	Output 2	Preset 1 authorization	1 Bit	C	R	W	-
	30	Output 2	Preset 2 authorization	1 Bit	C	R	W	-
	31	Output 2	Lock-up 1	1 Bit	C	R	W	-
	32	Output 2	Lock-up 2	1 Bit	C	R	W	-
	33	Output 2	Status indication lock-up	1 Bit	C	R	-	T
	34	Output 2	Priority	2 Bit	C	R	W	-
	35	Output 2	Status indication priority	1 Bit	C	R	-	T
	36	Output 2	Hours counter value	2 Byte	C	R	-	T
	37	Output 2	Reset Hours counter	1 Bit	C	R	W	-
	38	Output 2	Hours counter setpoint reached	1 Bit	C	R	-	T
	39	Output 2	Operating h. counter setpoint	2 Byte	C	R	W	-

	Number	Description	Function of the object	Length	C	R	W	T
☐↕	40	Output 3	ON/OFF	1 Bit	C	R	W	-
☐↕	41	Output 3	Timer/toggle switch changeover	1 Bit	C	R	W	-
☐↕	42	Output 3	Time limited toggle switch	1 Bit	C	R	W	-
☐↕	43	Output 3	Status indication ON/OFF	1 Bit	C	R	-	T
☐↕	44	Output 3	Timer	1 Bit	C	R	W	-
☐↕	45	Output 3	Timer duration	3 Byte	C	R	W	-
☐↕	46	Output 3	Scene	1 Byte	C	R	W	-
☐↕	47	Output 3	Preset 1	1 Bit	C	R	W	-
☐↕	48	Output 3	Preset 2	1 Bit	C	R	W	-
☐↕	49	Output 3	Preset 1 authorization	1 Bit	C	R	W	-
☐↕	50	Output 3	Preset 2 authorization	1 Bit	C	R	W	-
☐↕	51	Output 3	Lock-up 1	1 Bit	C	R	W	-
☐↕	52	Output 3	Lock-up 2	1 Bit	C	R	W	-
☐↕	53	Output 3	Status indication lock-up	1 Bit	C	R	-	T
☐↕	54	Output 3	Priority	2 Bit	C	R	W	-
☐↕	55	Output 3	Status indication priority	1 Bit	C	R	-	T
☐↕	56	Output 3	Hours counter value	2 Byte	C	R	-	T
☐↕	57	Output 3	Reset Hours counter	1 Bit	C	R	W	-
☐↕	58	Output 3	Hours counter setpoint reached	1 Bit	C	R	-	T
☐↕	59	Output 3	Operating h. counter setpoint	2 Byte	C	R	W	-
☐↕	60	Output 4	ON/OFF	1 Bit	C	R	W	-
☐↕	61	Output 4	Timer/toggle switch changeover	1 Bit	C	R	W	-
☐↕	62	Output 4	Time limited toggle switch	1 Bit	C	R	W	-
☐↕	63	Output 4	Status indication ON/OFF	1 Bit	C	R	-	T
☐↕	64	Output 4	Timer	1 Bit	C	R	W	-
☐↕	65	Output 4	Timer duration	3 Byte	C	R	W	-
☐↕	66	Output 4	Scene	1 Byte	C	R	W	-
☐↕	67	Output 4	Preset 1	1 Bit	C	R	W	-
☐↕	68	Output 4	Preset 2	1 Bit	C	R	W	-
☐↕	69	Output 4	Preset 1 authorization	1 Bit	C	R	W	-
☐↕	70	Output 4	Preset 2 authorization	1 Bit	C	R	W	-
☐↕	71	Output 4	Lock-up 1	1 Bit	C	R	W	-
☐↕	72	Output 4	Lock-up 2	1 Bit	C	R	W	-
☐↕	73	Output 4	Status indication lock-up	1 Bit	C	R	-	T
☐↕	74	Output 4	Priority	2 Bit	C	R	W	-
☐↕	75	Output 4	Status indication priority	1 Bit	C	R	-	T
☐↕	76	Output 4	Hours counter value	2 Byte	C	R	-	T
☐↕	77	Output 4	Reset Hours counter	1 Bit	C	R	W	-
☐↕	78	Output 4	Hours counter setpoint reached	1 Bit	C	R	-	T
☐↕	79	Output 4	Operating h. counter setpoint	2 Byte	C	R	W	-

Number	Description	Function of the object	Length	C	R	W	T	A
80	Output 5	ON/OFF	1 Bit	C	R	W	-	-
81	Output 5	Timer/toggle switch changeover	1 Bit	C	R	W	-	-
82	Output 5	Time limited toggle switch	1 Bit	C	R	W	-	-
83	Output 5	Status indication ON/OFF	1 Bit	C	R	-	T	-
84	Output 5	Timer	1 Bit	C	R	W	-	-
85	Output 5	Timer duration	3 Byte	C	R	W	-	-
86	Output 5	Scene	1 Byte	C	R	W	-	-
87	Output 5	Preset 1	1 Bit	C	R	W	-	-
88	Output 5	Preset 2	1 Bit	C	R	W	-	-
89	Output 5	Preset 1 authorization	1 Bit	C	R	W	-	-
90	Output 5	Preset 2 authorization	1 Bit	C	R	W	-	-
91	Output 5	Lock-up 1	1 Bit	C	R	W	-	-
92	Output 5	Lock-up 2	1 Bit	C	R	W	-	-
93	Output 5	Status indication lock-up	1 Bit	C	R	-	T	-
94	Output 5	Priority	2 Bit	C	R	W	-	-
95	Output 5	Status indication priority	1 Bit	C	R	-	T	-
96	Output 5	Hours counter value	2 Byte	C	R	-	T	-
97	Output 5	Reset Hours counter	1 Bit	C	R	W	-	-
98	Output 5	Hours counter setpoint reached	1 Bit	C	R	-	T	-
99	Output 5	Operating h. counter setpoint	2 Byte	C	R	W	-	-
100	Output 6	ON/OFF	1 Bit	C	R	W	-	-
101	Output 6	Timer/toggle switch changeover	1 Bit	C	R	W	-	-
102	Output 6	Time limited toggle switch	1 Bit	C	R	W	-	-
103	Output 6	Status indication ON/OFF	1 Bit	C	R	-	T	-
104	Output 6	Timer	1 Bit	C	R	W	-	-
105	Output 6	Timer duration	3 Byte	C	R	W	-	-
106	Output 6	Scene	1 Byte	C	R	W	-	-
107	Output 6	Preset 1	1 Bit	C	R	W	-	-
108	Output 6	Preset 2	1 Bit	C	R	W	-	-
109	Output 6	Preset 1 authorization	1 Bit	C	R	W	-	-
110	Output 6	Preset 2 authorization	1 Bit	C	R	W	-	-
111	Output 6	Lock-up 1	1 Bit	C	R	W	-	-
112	Output 6	Lock-up 2	1 Bit	C	R	W	-	-
113	Output 6	Status indication lock-up	1 Bit	C	R	-	T	-
114	Output 6	Priority	2 Bit	C	R	W	-	-
115	Output 6	Status indication priority	1 Bit	C	R	-	T	-
116	Output 6	Hours counter value	2 Byte	C	R	-	T	-
117	Output 6	Reset Hours counter	1 Bit	C	R	W	-	-
118	Output 6	Hours counter setpoint reached	1 Bit	C	R	-	T	-
119	Output 6	Operating h. counter setpoint	2 Byte	C	R	W	-	-

Number	Description	Function of the object	Length	C	R	W	T	A
120	Output 7	ON/OFF	1 Bit	C	R	W	-	-
121	Output 7	Timer/toggle switch changeover	1 Bit	C	R	W	-	-
122	Output 7	Time limited toggle switch	1 Bit	C	R	W	-	-
123	Output 7	Status indication ON/OFF	1 Bit	C	R	-	T	-
124	Output 7	Timer	1 Bit	C	R	W	-	-
125	Output 7	Timer duration	3 Byte	C	R	W	-	-
126	Output 7	Scene	1 Byte	C	R	W	-	-
127	Output 7	Preset 1	1 Bit	C	R	W	-	-
128	Output 7	Preset 2	1 Bit	C	R	W	-	-
129	Output 7	Preset 1 authorization	1 Bit	C	R	W	-	-
130	Output 7	Preset 2 authorization	1 Bit	C	R	W	-	-
131	Output 7	Lock-up 1	1 Bit	C	R	W	-	-
132	Output 7	Lock-up 2	1 Bit	C	R	W	-	-
133	Output 7	Status indication lock-up	1 Bit	C	R	-	T	-
134	Output 7	Priority	2 Bit	C	R	W	-	-
135	Output 7	Status indication priority	1 Bit	C	R	-	T	-
136	Output 7	Hours counter value	2 Byte	C	R	-	T	-
137	Output 7	Reset Hours counter	1 Bit	C	R	W	-	-
138	Output 7	Hours counter setpoint reached	1 Bit	C	R	-	T	-
139	Output 7	Operating h. counter setpoint	2 Byte	C	R	W	-	-
140	Output 8	ON/OFF	1 Bit	C	R	W	-	-
141	Output 8	Timer/toggle switch changeover	1 Bit	C	R	W	-	-
142	Output 8	Time limited toggle switch	1 Bit	C	R	W	-	-
143	Output 8	Status indication ON/OFF	1 Bit	C	R	-	T	-
144	Output 8	Timer	1 Bit	C	R	W	-	-
145	Output 8	Timer duration	3 Byte	C	R	W	-	-
146	Output 8	Scene	1 Byte	C	R	W	-	-
147	Output 8	Preset 1	1 Bit	C	R	W	-	-
148	Output 8	Preset 2	1 Bit	C	R	W	-	-
149	Output 8	Preset 1 authorization	1 Bit	C	R	W	-	-
150	Output 8	Preset 2 authorization	1 Bit	C	R	W	-	-
151	Output 8	Lock-up 1	1 Bit	C	R	W	-	-
152	Output 8	Lock-up 2	1 Bit	C	R	W	-	-
153	Output 8	Status indication lock-up	1 Bit	C	R	-	T	-
154	Output 8	Priority	2 Bit	C	R	W	-	-
155	Output 8	Status indication priority	1 Bit	C	R	-	T	-
156	Output 8	Hours counter value	2 Byte	C	R	-	T	-
157	Output 8	Reset Hours counter	1 Bit	C	R	W	-	-
158	Output 8	Hours counter setpoint reached	1 Bit	C	R	-	T	-
159	Output 8	Operating h. counter setpoint	2 Byte	C	R	W	-	-

Number	Description	Function of the object	Length	C	R	W	T	A
160	Output 9	ON/OFF	1 Bit	C	R	W	-	-
161	Output 9	Timer/toggle switch changeover	1 Bit	C	R	W	-	-
162	Output 9	Time limited toggle switch	1 Bit	C	R	W	-	-
163	Output 9	Status indication ON/OFF	1 Bit	C	R	-	T	-
164	Output 9	Timer	1 Bit	C	R	W	-	-
165	Output 9	Timer duration	3 Byte	C	R	W	-	-
166	Output 9	Scene	1 Byte	C	R	W	-	-
167	Output 9	Preset 1	1 Bit	C	R	W	-	-
168	Output 9	Preset 2	1 Bit	C	R	W	-	-
169	Output 9	Preset 1 authorization	1 Bit	C	R	W	-	-
170	Output 9	Preset 2 authorization	1 Bit	C	R	W	-	-
171	Output 9	Lock-up 1	1 Bit	C	R	W	-	-
172	Output 9	Lock-up 2	1 Bit	C	R	W	-	-
173	Output 9	Status indication lock-up	1 Bit	C	R	-	T	-
174	Output 9	Priority	2 Bit	C	R	W	-	-
175	Output 9	Status indication priority	1 Bit	C	R	-	T	-
176	Output 9	Hours counter value	2 Byte	C	R	-	T	-
177	Output 9	Reset Hours counter	1 Bit	C	R	W	-	-
178	Output 9	Hours counter setpoint reached	1 Bit	C	R	-	T	-
179	Output 9	Operating h. counter setpoint	2 Byte	C	R	W	-	-
180	Output 10	ON/OFF	1 Bit	C	R	W	-	-
181	Output 10	Timer/toggle switch changeover	1 Bit	C	R	W	-	-
182	Output 10	Time limited toggle switch	1 Bit	C	R	W	-	-
183	Output 10	Status indication ON/OFF	1 Bit	C	R	-	T	-
184	Output 10	Timer	1 Bit	C	R	W	-	-
185	Output 10	Timer duration	3 Byte	C	R	W	-	-
186	Output 10	Scene	1 Byte	C	R	W	-	-
187	Output 10	Preset 1	1 Bit	C	R	W	-	-
188	Output 10	Preset 2	1 Bit	C	R	W	-	-
189	Output 10	Preset 1 authorization	1 Bit	C	R	W	-	-
190	Output 10	Preset 2 authorization	1 Bit	C	R	W	-	-
191	Output 10	Lock-up 1	1 Bit	C	R	W	-	-
192	Output 10	Lock-up 2	1 Bit	C	R	W	-	-
193	Output 10	Status indication lock-up	1 Bit	C	R	-	T	-
194	Output 10	Priority	2 Bit	C	R	W	-	-
195	Output 10	Status indication priority	1 Bit	C	R	-	T	-
196	Output 10	Hours counter value	2 Byte	C	R	-	T	-
197	Output 10	Reset Hours counter	1 Bit	C	R	W	-	-
198	Output 10	Hours counter setpoint reached	1 Bit	C	R	-	T	-
199	Output 10	Operating h. counter setpoint	2 Byte	C	R	W	-	-

4.2.1 ON/OFF

No.	Description	Function of the object	Data type	Flags
0, 20, 40, 60, 80, 100, 120, 140, 160, 180	Output x	ON/OFF	1 Bit – 1.001 DPT_Switch	C, R, W

These objects are always activated. They enable switching of the output contact in accordance with the value that is sent via the KNX bus

Object value: depends on the **Output contact** parameter.

Normally open:

- On input of an OFF command, the output relay contact opens.
- On input of an ON command, the output relay contact closes.

Normally closed:

- On input of an OFF command, the output relay contact closes.
- On input of an ON command, the output relay contact opens.

For further information, see: [Definition](#)

4.2.2 ON/OFF timings function

No.	Description	Function of the object	Data type	Flags
1, 21, 41, 61, 81, 101, 121, 141, 161, 181	Output x	Timer/toggle switch changeover	1 Bit – 1.001 DPT_Switch	C, R, W

This object is activated if the **Timer/toggle switch changeover for switching object** parameter is active.

This object is used to switch between a toggle switch and timer switch operation on the same pushbutton

- If the **Timer/toggle switch changeover** object receives the value "1", the toggle-switch mode function is activated.
The ON/OFF switching of the output is performed as usual via the **ON/OFF object**.
- If the **Timer/toggle switch changeover** object receives the value "0", the timer mode function is activated.
 - o If the **ON/OFF object** receives the value "1", the output is switched ON.
After expiry of a configurable time, the output is automatically switched OFF.
 - o If the **ON/OFF object** receives the value "0", the output is switched OFF.

Example: Switching function daytime and time-limited OFF function at night.
During the day, the button is used as a switch. In the evenings, the button is used as a time-limited OFF switch, so that the light will turn off automatically.

For further information, see: [ON/OFF timings function](#)

No.	Description	Function of the object	Data type	Flags
2, 22, 42, 62, 82, 102, 122, 142, 162, 182	Output x	Time limited toggle switch	1 Bit – 1.001 DPT_Switch	C, R, W
<p>This object is activated when the Additional time limited toggle switch function parameter is active.</p> <p>This object combines a timer function with a tripping delay function.</p> <ul style="list-style-type: none"> - If the object receives the value "1", the output switches to ON for a configurable time period. After that period expires, the output switches to OFF. - If the object receives the value "0", the output switches to OFF. <p><i>Note: The time-limited OFF function is generally used for lighting in cellars, attics and sheds.</i></p> <p>For further information, see: ON/OFF timings function</p>				

4.2.3 Status indication

No.	Description	Function of the object	Data type	Flags
3, 23, 43, 63, 83, 103, 123, 143, 163, 183	Output x	Status indication ON/OFF	1 Bit – 1.001 DPT_Switch	C, R, T
<p>This object is activated when the Status indication ON/OFF parameter is active.</p> <p>This object allows the status of the output contact to be sent from the device over the KNX bus.</p> <p>Object value: depends on the Polarity parameter.</p> <p>0 = ON, 1 = OFF</p> <ul style="list-style-type: none"> - If the output relay is open, a telegram with logic value "1" is sent on the KNX bus. - If the output relay is closed, a telegram with logic value "0" is sent on the KNX bus. <p>0 = Off; 1 = On</p> <ul style="list-style-type: none"> - If the output relay is open, a telegram with logic value "0" is sent on the KNX bus. - If the output relay is closed, a telegram with logic value "1" is sent on the KNX bus. <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Statusindication ON/OFF</p>				

4.2.4 Timer

No.	Description	Function of the object	Data type	Flags
4, 24, 44, 64, 84, 104, 124, 144, 164, 184	Output x	Timer	1 Bit – 1.001 DPT_Switch	C, R, W

This object is activated when the **Timer** parameter is active.
 This object is used to activate the timer function of the device via the KNX bus.
 Object value:

- If a rising edge (0 to 1) arrives at this object, the output switches for a configurable period.
- If a falling edge (1 to 0) arrives at this object, the output remains in its current state.

Note: Depending on the configuration, the timer switching can be interrupted on the timer by a long press of the control button.
Note: Depending on the configuration, the timer duration may be reset by input of a start command during timer operation.

For further information, see: [Timer](#)

No.	Description	Function of the object	Data type	Flags
5, 25, 45, 65, 85, 105, 125, 145, 165, 185	Output x	Timer duration	3 Byte – 10.001 DPT_TimeOfDay	C, R, W

This object is activated if the **Timer duration modifiable through object** object parameter is active.
 This object can be used to configure the timer duration. The timer duration can thus be configured in accordance with a time of day.

Byte 3 (MSB)					Byte 2					Byte 1 (LSB)													
Hours					Minutes					Seconds													
0	0	0	H	H	H	H	H	0	0	M	M	M	M	M	M	0	0	S	S	S	S	S	S

Fields	Code	Value	Units
Hours	binary	0 to 23 (4 Bit)	Hours
Minutes	binary	0 to 59 (6 Bit)	Minutes
Seconds	binary	0 to 59 (6 Bit)	Seconds

For further information, see: [Timer](#)

4.2.5 Scene

No.	Description	Function of the object	Data type	Flags																
6, 26, 46, 66, 86, 106, 126, 146, 166, 186	Output x	Scene	1 Byte – 17.001 DPT_SceneNumber	C, R, W																
<p>This object is activated when the Scene parameter is active. This object is used to recall or save a scene. Details on the format of the object are given below.</p> <table border="1"> <thead> <tr> <th>7</th> <th>6</th> <th>5</th> <th>4</th> <th>3</th> <th>2</th> <th>1</th> <th>0</th> </tr> </thead> <tbody> <tr> <td>Learning</td> <td>Not active</td> <td colspan="6">Scene number</td> </tr> </tbody> </table> <p>Bit 7: 0: The scene is called/1: The scene is saved. Bit 6: Not active Bit 5 to Bit 0: Scene numbers from 0 (Scene 1) to 63 (Scene 64).</p> <p>For further information, see: Scene ON/OFF</p>					7	6	5	4	3	2	1	0	Learning	Not active	Scene number					
7	6	5	4	3	2	1	0													
Learning	Not active	Scene number																		

4.2.6 Preset

No.	Description	Function of the object	Data type	Flags
7, 27, 47, 67, 87, 107, 127, 147, 167, 187	Output x	Preset 1	1 Bit – 1.022 DPT_Scene_AB	C, R, W
<p>This object is activated if the Preset has value Active with preset 1-level object or Active with preset 2-level objects. With this object, several outputs can be set to a configurable predefined status. Object value:</p> <ul style="list-style-type: none"> - If the object receives value "0", the values of the parameters for Preset 1 = "0" are used. - If the object receives value "1", the values of the parameters for Preset 1 = "1" are used. <p>For further information, see: Preset ON/OFF</p>				

No.	Description	Function of the object	Data type	Flags
8, 28, 48, 68, 88, 108, 128, 148, 168, 188	Output x	Preset 2	1 Bit – 1.022 DPT_Scene_AB	C, R, W
<p>This object is activated if the Preset parameter has value Active with preset 2-level objects. See object No. 7</p>				

No.	Description	Function of the object	Data type	Flags
9, 29, 49, 69, 89, 109, 129, 149, 169, 189	Output x	Preset 1 authorization	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Preset authorization objects parameter is active</p> <p>This object is used to activate or deactivate the Preset 1 function of the device via the KNX bus.</p> <p>Object value: this is dependent on the Polarity of Preset 1 authorization object parameter.</p> <p>0 = Locked-up, 1 = Authorized:</p> <ul style="list-style-type: none"> - If the object receives the value "0", Preset 0 is deactivated. - If the object receives the value "1", Preset 1 is activated. <p>0 = Authorized, 1 = Locked-up:</p> <ul style="list-style-type: none"> - If the object receives the value "0", Preset 0 is activated. - If the object receives the value "1", Preset 1 is deactivated. <p>For further information, see: Preset ON/OFF</p>				

No.	Description	Function of the object	Data type	Flags
10, 30, 50, 70, 90, 110, 130, 150, 170, 190	Output x	Preset 2 authorization	1 Bit – 1.003 DPT_Enable	C, R, W
See object No. 9				

4.2.7 Lock-up

No.	Description	Function of the object	Data type	Flags
11, 31, 51, 71, 91, 111, 131, 151, 171, 191	Output x	Lock-up 1	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Lock-up has value Active with 1 lock-up object or Active with 2 lock-up objects.</p> <p>This object is used to control the activation of the lock-up via the KNX bus.</p> <p>Object value: this is dependent on the Polarity of lock-up object 1 parameter.</p> <ul style="list-style-type: none"> - 0 = Lock-up activated, 1 = Lock-up deactivated: If the object receives value "0", the lock-up is activated. - If the object receives value "1", the lock-up is deactivated. <p>0 = Lock-up deactivated, 1 = Lock-up activated:</p> <ul style="list-style-type: none"> - If the object receives value "0", the lock-up is deactivated. - If the object receives value "1", the lock-up is activated. <p>For further information, see: Lock-up ON/OFF</p>				

No.	Description	Function of the object	Data type	Flags
12, 32, 52, 72, 92, 112, 132, 152, 172, 192	Output x	Lock-up 2	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Lock-up parameter has value Active with 2 lock-up objects.</p> <p>See object No. 11</p>				

No.	Description	Function of the object	Data type	Flags
13, 33, 53, 73, 93, 113, 133, 153, 173, 193	Output x	Status indication lock-up	1 Bit – 1.011 DPT_Switch	C, R, T
<p>This object is activated when the Activation of lock-up status object parameter is active This object allows the status of the lock-up to be sent from the device over the KNX bus. Object value: depends on the Polarity parameter.</p> <ul style="list-style-type: none"> - 0 = Lock-up deactivated, 1 = Lock-up activated: If the lock-up is deactivated, a telegram with logic value "0" will be sent on the KNX bus. - If the lock-up is activated, a telegram with logic value "1" is sent on the KNX bus. <p>0 = Lock-up activated, 1 = Lock-up deactivated:</p> <ul style="list-style-type: none"> - If the lock-up is activated, a telegram with logic value "0" is sent on the KNX bus. - If the lock-up is deactivated, a telegram with logic value "1" is sent on the KNX bus. <p>This object is sent periodically and/or on status change. For further information, see: Lock-up ON/OFF</p>				

4.2.8 Priority

No.	Description	Function of the object	Data type	Flags																	
14, 34, 54, 74, 94, 114, 134, 154, 174, 194	Output x	Priority	2 Bit – 2.002 DPT_Bool_Control	C, R, W																	
<p>This object is activated if the Priority parameter is active. The status of the output contact is determined directly by this object. Details on the format of the object are given below.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2">Telegram received by the priority operation object</th> <th rowspan="2">Status of the outputs</th> </tr> <tr> <th>Bit 1</th> <th>Bit 2</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>End of the priority</td> </tr> <tr> <td>0</td> <td>1</td> <td>End of the priority</td> </tr> <tr> <td>1</td> <td>0</td> <td>Priority OFF</td> </tr> <tr> <td>1</td> <td>1</td> <td>Priority ON</td> </tr> </tbody> </table> <p>The first bit of this object (Bit 0) determines the status of the output contact, which should be priority controlled. The second bit activates or deactivates the Priority. For further information, see: Priority ON/OFF</p>					Telegram received by the priority operation object		Status of the outputs	Bit 1	Bit 2	0	0	End of the priority	0	1	End of the priority	1	0	Priority OFF	1	1	Priority ON
Telegram received by the priority operation object		Status of the outputs																			
Bit 1	Bit 2																				
0	0	End of the priority																			
0	1	End of the priority																			
1	0	Priority OFF																			
1	1	Priority ON																			

No.	Description	Function of the object	Data type	Flags
15, 35, 55, 75, 95, 115, 135, 155, 175, 195	Output x	Status indication priority	1 Bit – 1.011 DPT_Switch	C, R, T
<p>This object is activated if the Activation of priority status object parameter is active This object allows the status of the Priority to be sent from the device on the KNX bus. Object value: depends on the Polarity parameter.</p> <p>0 = Not forced, 1 = Forced:</p> <ul style="list-style-type: none"> - If Priority is deactivated, a telegram is sent with logic value "0". - If Priority is activated, a telegram is sent with logic value "1". <p>0 = Forced, 1 = Not forced:</p> <ul style="list-style-type: none"> - If Priority is activated, a telegram is sent with logic value "0". - If Priority is deactivated, a telegram is sent with logic value "1". <p>This object is sent periodically and/or on status change. For further information, see: Priority ON/OFF</p>				

4.2.9 Hours counter

No.	Description	Function of the object	Data type	Flags
16, 36, 56, 76, 96, 116, 136, 156, 176, 196	Output x	Hours counter value	2 Byte – 7.001 DPT_16_Bit_Counter	C, R, T
<p>This object is activated when the Hours counter parameter is active. This object allows the value of the operating hours to be sent from the device on the KNX bus. The count value is saved during a power cut on the KNX bus. It is submitted after return of power to the bus or after an ETS download. Object value: 0 to 65535 hours This object is sent periodically and/or on status change. For further information, see: Hours counter</p>				

No.	Description	Function of the object	Data type	Flags
17, 37, 57, 77, 97, 117, 137, 157, 177, 197	Output x	Reset Hours counter	1 Bit – 1.015 DPT_Reset	C, R, W
<p>This object is activated when the Hours counter parameter is active. This object enables the hours counter value to be reset. Object value:</p> <ul style="list-style-type: none"> - If the object receives the value "0", the counter is not reset. - If the object receives the value "1", the counter is reset. <p>For further information, see: Hours counter</p>				

No.	Description	Function of the object	Data type	Flags
18, 38, 58, 78, 98, 118, 138, 158, 178, 198	Output x	Hours counter setpoint reached	1 Bit – 1.002 DPT_Bool	C, R, T
<p>This object is activated when the Hours counter parameter is active.</p> <p>This object reports that the hours counter has reached its setpoint.</p> <ul style="list-style-type: none"> - incrementing counter: Counter = counter setpoint - countdown counter: Counter = 0 <p>Object value: If the setpoint is reached, a telegram with logic value "1" is sent on the KNX bus.</p> <p>The count value is saved during a power cut on the KNX bus. It is submitted after return of power to the bus or after an ETS download.</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Hours counter</p>				

No.	Description	Function of the object	Data type	Flags
19, 39, 59, 79, 99, 119, 139, 159, 179, 199	Output x	Operating h. counter setpoint	2 Byte – 7.001 DPT_16_Bit_Counter	C, R, W
<p>This object is activated if the Counter setpoint value modifiable through object object parameter is active.</p> <p>This object is used to initialize the counter setpoint of the hours counter via the KNX bus.</p> <p>Object value: 0 to 65535 hours</p> <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Hours counter</p>				

4.3 Communication objects for each shutter/blind output

	Number	Name	Object function	Length	C	R	W	T
■	0	Outputs 1-2	Up/Down (long key-press)	1 Bit	C	R	W	-
■	1	Outputs 1-2	Step/Stop (short press)	1 Bit	C	R	W	-
■	2	Outputs 1-2	Position in %	1 Byte	C	R	W	-
■	3	Outputs 1-2	Slat angle in %	1 Byte	C	R	W	-
■	4	Outputs 1-2	Position in % indication	1 Byte	C	R	-	T
■	5	Outputs 1-2	Slat angle indication in %	1 Byte	C	R	-	T
■	6	Outputs 1-2	Upper position reached	1 Bit	C	R	-	T
■	7	Outputs 1-2	Lower position reached	1 Bit	C	R	-	T
■	8	Outputs 1-2	Scene	1 Byte	C	R	W	-
■	9	Outputs 1-2	Preset 1	1 Bit	C	R	W	-
■	10	Outputs 1-2	Preset 2	1 Bit	C	R	W	-
■	11	Outputs 1-2	Preset 1 authorization	1 Bit	C	R	W	-
■	12	Outputs 1-2	Preset 2 authorization	1 Bit	C	R	W	-
■	13	Outputs 1-2	Lock-up 1	1 Bit	C	R	W	-
■	14	Outputs 1-2	Lock-up 2	1 Bit	C	R	W	-
■	15	Outputs 1-2	Status indication lock-up	1 Bit	C	R	-	T
■	16	Outputs 1-2	Priority	2 Bit	C	R	W	-
■	17	Outputs 1-2	Status indication priority	1 Bit	C	R	-	T
■	18	Outputs 1-2	Alarm 1	1 Bit	C	R	W	-
■	19	Outputs 1-2	Alarm 2	1 Bit	C	R	W	-
■	20	Outputs 1-2	Alarm 3	1 Bit	C	R	W	-
■	21	Outputs 1-2	Alarm status object	1 Bit	C	R	-	T
■	22	Outputs 1-2	Sun protection position in %	1 Byte	C	R	W	-
■	23	Outputs 1-2	Sun protection slat angle in %	1 Byte	C	R	W	-
■	24	Outputs 1-2	Sun protection authorization	1 Bit	C	R	W	-
■	25	Outputs 1-2	Reactivate sun protection	1 Bit	C	R	W	-
■	26	Outputs 1-2	Sun protection status	1 Bit	C	R	-	T

	Number	Name	Object function	Length	C	R	W	T
■↕	40	Outputs 3-4	Up/Down (long key-press)	1 Bit	C	R	W	-
■↕	41	Outputs 3-4	Step/Stop (short press)	1 Bit	C	R	W	-
■↕	42	Outputs 3-4	Position in %	1 Byte	C	R	W	-
■↕	43	Outputs 3-4	Slat angle in %	1 Byte	C	R	W	-
■↕	44	Outputs 3-4	Position in % indication	1 Byte	C	R	-	T
■↕	45	Outputs 3-4	Slat angle indication in %	1 Byte	C	R	-	T
■↕	46	Outputs 3-4	Upper position reached	1 Bit	C	R	-	T
■↕	47	Outputs 3-4	Lower position reached	1 Bit	C	R	-	T
■↕	48	Outputs 3-4	Scene	1 Byte	C	R	W	-
■↕	49	Outputs 3-4	Preset 1	1 Bit	C	R	W	-
■↕	50	Outputs 3-4	Preset 2	1 Bit	C	R	W	-
■↕	51	Outputs 3-4	Preset 1 authorization	1 Bit	C	R	W	-
■↕	52	Outputs 3-4	Preset 2 authorization	1 Bit	C	R	W	-
■↕	53	Outputs 3-4	Lock-up 1	1 Bit	C	R	W	-
■↕	54	Outputs 3-4	Lock-up 2	1 Bit	C	R	W	-
■↕	55	Outputs 3-4	Status indication lock-up	1 Bit	C	R	-	T
■↕	56	Outputs 3-4	Priority	2 Bit	C	R	W	-
■↕	57	Outputs 3-4	Status indication priority	1 Bit	C	R	-	T
■↕	58	Outputs 3-4	Alarm 1	1 Bit	C	R	W	-
■↕	59	Outputs 3-4	Alarm 2	1 Bit	C	R	W	-
■↕	60	Outputs 3-4	Alarm 3	1 Bit	C	R	W	-
■↕	61	Outputs 3-4	Alarm status object	1 Bit	C	R	-	T
■↕	62	Outputs 3-4	Sun protection position in %	1 Byte	C	R	W	-
■↕	63	Outputs 3-4	Sun protection slat angle in %	1 Byte	C	R	W	-
■↕	64	Outputs 3-4	Sun protection authorization	1 Bit	C	R	W	-
■↕	65	Outputs 3-4	Reactivate sun protection	1 Bit	C	R	W	-
■↕	66	Outputs 3-4	Sun protection status	1 Bit	C	R	-	T

	Number	Name	Object function	Length	C	R	W	T
■↕	80	Outputs 5-6	Up/Down (long key-press)	1 Bit	C	R	W	-
■↕	81	Outputs 5-6	Step/Stop (short press)	1 Bit	C	R	W	-
■↕	82	Outputs 5-6	Position in %	1 Byte	C	R	W	-
■↕	83	Outputs 5-6	Slat angle in %	1 Byte	C	R	W	-
■↕	84	Outputs 5-6	Position in % indication	1 Byte	C	R	-	T
■↕	85	Outputs 5-6	Slat angle indication in %	1 Byte	C	R	-	T
■↕	86	Outputs 5-6	Upper position reached	1 Bit	C	R	-	T
■↕	87	Outputs 5-6	Lower position reached	1 Bit	C	R	-	T
■↕	88	Outputs 5-6	Scene	1 Byte	C	R	W	-
■↕	89	Outputs 5-6	Preset 1	1 Bit	C	R	W	-
■↕	90	Outputs 5-6	Preset 2	1 Bit	C	R	W	-
■↕	91	Outputs 5-6	Preset 1 authorization	1 Bit	C	R	W	-
■↕	92	Outputs 5-6	Preset 2 authorization	1 Bit	C	R	W	-
■↕	93	Outputs 5-6	Lock-up 1	1 Bit	C	R	W	-
■↕	94	Outputs 5-6	Lock-up 2	1 Bit	C	R	W	-
■↕	95	Outputs 5-6	Status indication lock-up	1 Bit	C	R	-	T
■↕	96	Outputs 5-6	Priority	2 Bit	C	R	W	-
■↕	97	Outputs 5-6	Status indication priority	1 Bit	C	R	-	T
■↕	98	Outputs 5-6	Alarm 1	1 Bit	C	R	W	-
■↕	99	Outputs 5-6	Alarm 2	1 Bit	C	R	W	-
■↕	100	Outputs 5-6	Alarm 3	1 Bit	C	R	W	-
■↕	101	Outputs 5-6	Alarm status object	1 Bit	C	R	-	T
■↕	102	Outputs 5-6	Sun protection position in %	1 Byte	C	R	W	-
■↕	103	Outputs 5-6	Sun protection slat angle in %	1 Byte	C	R	W	-
■↕	104	Outputs 5-6	Sun protection authorization	1 Bit	C	R	W	-
■↕	105	Outputs 5-6	Reactivate sun protection	1 Bit	C	R	W	-
■↕	106	Outputs 5-6	Sun protection status	1 Bit	C	R	-	T

	Number	Name	Object function	Length	C	R	W	T
■ ↕	120	Outputs 7-8	Up/Down (long key-press)	1 Bit	C	R	W	-
■ ↕	121	Outputs 7-8	Step/Stop (short press)	1 Bit	C	R	W	-
■ ↕	122	Outputs 7-8	Position in %	1 Byte	C	R	W	-
■ ↕	123	Outputs 7-8	Slat angle in %	1 Byte	C	R	W	-
■ ↕	124	Outputs 7-8	Position in % indication	1 Byte	C	R	-	T
■ ↕	125	Outputs 7-8	Slat angle indication in %	1 Byte	C	R	-	T
■ ↕	126	Outputs 7-8	Upper position reached	1 Bit	C	R	-	T
■ ↕	127	Outputs 7-8	Lower position reached	1 Bit	C	R	-	T
■ ↕	128	Outputs 7-8	Scene	1 Byte	C	R	W	-
■ ↕	129	Outputs 7-8	Preset 1	1 Bit	C	R	W	-
■ ↕	130	Outputs 7-8	Preset 2	1 Bit	C	R	W	-
■ ↕	131	Outputs 7-8	Preset 1 authorization	1 Bit	C	R	W	-
■ ↕	132	Outputs 7-8	Preset 2 authorization	1 Bit	C	R	W	-
■ ↕	133	Outputs 7-8	Lock-up 1	1 Bit	C	R	W	-
■ ↕	134	Outputs 7-8	Lock-up 2	1 Bit	C	R	W	-
■ ↕	135	Outputs 7-8	Status indication lock-up	1 Bit	C	R	-	T
■ ↕	136	Outputs 7-8	Priority	2 Bit	C	R	W	-
■ ↕	137	Outputs 7-8	Status indication priority	1 Bit	C	R	-	T
■ ↕	138	Outputs 7-8	Alarm 1	1 Bit	C	R	W	-
■ ↕	139	Outputs 7-8	Alarm 2	1 Bit	C	R	W	-
■ ↕	140	Outputs 7-8	Alarm 3	1 Bit	C	R	W	-
■ ↕	141	Outputs 7-8	Alarm status object	1 Bit	C	R	-	T
■ ↕	142	Outputs 7-8	Sun protection position in %	1 Byte	C	R	W	-
■ ↕	143	Outputs 7-8	Sun protection slat angle in %	1 Byte	C	R	W	-
■ ↕	144	Outputs 7-8	Sun protection authorization	1 Bit	C	R	W	-
■ ↕	145	Outputs 7-8	Reactivate sun protection	1 Bit	C	R	W	-
■ ↕	146	Outputs 7-8	Sun protection status	1 Bit	C	R	-	T

	Number	Name	Object function	Length	C	R	W	T
■↕	160	Outputs 9-10	Up/Down (long key-press)	1 Bit	C	R	W	-
■↕	161	Outputs 9-10	Step/Stop (short press)	1 Bit	C	R	W	-
■↕	162	Outputs 9-10	Position in %	1 Byte	C	R	W	-
■↕	163	Outputs 9-10	Slat angle in %	1 Byte	C	R	W	-
■↕	164	Outputs 9-10	Position in % indication	1 Byte	C	R	-	T
■↕	165	Outputs 9-10	Slat angle indication in %	1 Byte	C	R	-	T
■↕	166	Outputs 9-10	Upper position reached	1 Bit	C	R	-	T
■↕	167	Outputs 9-10	Lower position reached	1 Bit	C	R	-	T
■↕	168	Outputs 9-10	Scene	1 Byte	C	R	W	-
■↕	169	Outputs 9-10	Preset 1	1 Bit	C	R	W	-
■↕	170	Outputs 9-10	Preset 2	1 Bit	C	R	W	-
■↕	171	Outputs 9-10	Preset 1 authorization	1 Bit	C	R	W	-
■↕	172	Outputs 9-10	Preset 2 authorization	1 Bit	C	R	W	-
■↕	173	Outputs 9-10	Lock-up 1	1 Bit	C	R	W	-
■↕	174	Outputs 9-10	Lock-up 2	1 Bit	C	R	W	-
■↕	175	Outputs 9-10	Status indication lock-up	1 Bit	C	R	-	T
■↕	176	Outputs 9-10	Priority	2 Bit	C	R	W	-
■↕	177	Outputs 9-10	Status indication priority	1 Bit	C	R	-	T
■↕	178	Outputs 9-10	Alarm 1	1 Bit	C	R	W	-
■↕	179	Outputs 9-10	Alarm 2	1 Bit	C	R	W	-
■↕	180	Outputs 9-10	Alarm 3	1 Bit	C	R	W	-
■↕	181	Outputs 9-10	Alarm status object	1 Bit	C	R	-	T
■↕	182	Outputs 9-10	Sun protection position in %	1 Byte	C	R	W	-
■↕	183	Outputs 9-10	Sun protection slat angle in %	1 Byte	C	R	W	-
■↕	184	Outputs 9-10	Sun protection authorization	1 Bit	C	R	W	-
■↕	185	Outputs 9-10	Reactivate sun protection	1 Bit	C	R	W	-
■↕	186	Outputs 9-10	Sun protection status	1 Bit	C	R	-	T

4.3.1 Command

No.	Description	Function of the object	Data type	Flags
0, 40, 80, 120, 160	Output x-y	Up/Down (long key-press)	1 Bit – 1.008 DPT_UpDown	C, R, W
<p>This object is always activated. It is used to control the shutter or blind in connection with the value that is sent on the KNX bus.</p> <p>Object value:</p> <ul style="list-style-type: none">- If the object receives value "0", the shutter or blind moves to the upper position.- If the object receives value "1", the shutter or blind moves to the lower position. <p>For further information, see: Definition</p>				

No.	Description	Function of the object	Data type	Flags
1, 41, 81, 121, 161	Output x-y	Step/Stop (short press)	1 Bit – 1.007 DPT_Step	C, R, W
<p>This object is always activated. It is used to stop the movement of the shutter or blind or the tilting of the slats according to the value that is sent on the KNX bus.</p> <p>Object value:</p> <ul style="list-style-type: none">- Regardless of which value (0 or 1) is sent to this object, the movement of the shutter or blind will be stopped.- If the object receives the value "0", the slats will be opened by one slat step.- If the object receives the value "1", the slats will be closed by one slat step. <p>For further information, see: Definition</p>				

No.	Description	Function of the object	Data type	Flags
2, 42, 82, 122, 162	Output x	Position in %	1 Byte – 5.001 DPT_Scaling	C, R, W
<p>This object is always activated. It is used for positioning the shutter or blind at the desired height, in response to the value sent on the KNX bus.</p> <p>On the blind, the slats have the same tilt after reaching the same position as they had before the movement.</p> <p>If a telegram is received during the movement of the shutter or blind, the shutter will be positioned at the desired height after the originally requested position has been reached.</p> <p>Object value: 0 to 255</p> <ul style="list-style-type: none">- 0 (0%): Upper position- 255 (100%): Lower position <p>For further information, see: Definition</p>				

No.	Description	Function of the object	Data type	Flags
3, 43, 83, 123, 163	Output x-y	Slat angle in %	1 Byte – 5.001 DPT_Scaling	C, R, W
<p>This object is always activated. It is used to position the shutter or blind in response to the value that is sent on the KNX bus.</p> <p>Object value: 0 to 255</p> <ul style="list-style-type: none"> - 0 (0%): Slats open - 255 (100%): Slats closed <p>For further information, see: Definition</p>				

4.3.2 Status indication

No.	Description	Function of the object	Data type	Flags
4, 44, 84, 124, 164	Output x-y	Position in % indication	1 Byte – 5.001 DPT_Scaling	C, R, T
<p>Object value: 0 to 255</p> <ul style="list-style-type: none"> - 0 = (0 %): Upper position - 255 = (100 %): Lower position <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Status indication Shutter</p>				

No.	Description	Function of the object	Data type	Flags
5, 45, 85, 125, 165	Output x-y	Slat angle indication in %	1 Byte – 5.001 DPT_Scaling	C, R, T
<p>This object is activated when the Status indication slat angle in % parameter is active.</p> <p>This object allows the status of the slat angle to be sent over the KNX bus. It is sent after the tilting of the blind has been achieved.</p> <p>Object value: 0 to 255</p> <ul style="list-style-type: none"> - 0 (0%): Slats open - 255 (100%): Slats closed <p>This object is sent periodically and/or on status change.</p> <p>For further information, see: Status indication Shutter</p>				

No.	Description	Function of the object	Data type	Flags
6, 46, 86, 126, 166	Output x-y	Upper position reached	1 Bit – 1.002 DPT_Bool	C, R, T
<p>This object is activated when the Upper position reached objects parameter is active. This object is used to send the status of the upper position of the shutter or blind over the KNX bus. Object value: This depends on the Polarity parameter.</p> <p>0 = Position not reached, 1 = Position reached</p> <ul style="list-style-type: none"> - If the upper position of the shutter or blind is not reached, a telegram is sent with a logic value of "0" on the KNX bus. - If the upper position of the shutter or blind is reached, a telegram is sent with a logic value of "1" on the KNX bus. <p>0 = Position reached, 1 = Position not reached</p> <ul style="list-style-type: none"> - If the upper position of the shutter or blind is reached, a telegram is sent with a logic value of "0" on the KNX bus. - If the upper position of the shutter or blind is not reached, a telegram is sent with a logic value of "1" on the KNX bus. <p>This object is sent periodically and/or on status change. For further information, see: Status indication Shutter</p>				

No.	Description	Function of the object	Data type	Flags
7, 47, 87, 127, 167	Output x-y	Lower position reached	1 Bit – 1.002 DPT_Bool	C, R, T
<p>This object is activated if the Lower position reached objects parameter is active. This object is used to send the status of the lower position of the shutter or blind over the KNX bus. Object value: This depends on the Polarity parameter.</p> <p>0 = Position not reached, 1 = Position reached</p> <ul style="list-style-type: none"> - If the lower position of the shutter or blind is not reached, a telegram is sent with a logic value of "0" on the KNX bus. - If the lower position of the shutter or blind is reached, a telegram is sent with a logic value of "1" on the KNX bus. <p>0 = Position reached, 1 = Position not reached</p> <ul style="list-style-type: none"> - If the lower position of the shutter or blind is reached, a telegram is sent with a logic value of "0" on the KNX bus. - If the lower position of the shutter or blind is not reached, a telegram is sent with a logic value of "1" on the KNX bus. <p>This object is sent periodically and/or on status change. For further information, see: Status indication Shutter</p>				

4.3.3 Scene

No.	Description	Function of the object	Data type	Flags																
8, 48, 88, 128, 168	Output x-y	Scene	1 Byte – 17.001 DPT_SceneNumber	C, R, W																
<p>This object is activated when the Scene parameter is active. This object is used to recall or save a scene. Details on the format of the object are given below.</p> <table border="1"> <thead> <tr> <th>7</th> <th>6</th> <th>5</th> <th>4</th> <th>3</th> <th>2</th> <th>1</th> <th>0</th> </tr> </thead> <tbody> <tr> <td>Learning</td> <td>Not active</td> <td colspan="6">Scene number</td> </tr> </tbody> </table> <p>Bit 7: 0: The scene is called/1: The scene is saved. Bit 6: Not active Bit 5 to Bit 0: Scene numbers from 0 (Scene 1) to 63 (Scene 64).</p> <p>For further information, see: Scene Shutter</p>					7	6	5	4	3	2	1	0	Learning	Not active	Scene number					
7	6	5	4	3	2	1	0													
Learning	Not active	Scene number																		

4.3.4 Preset

No.	Description	Function of the object	Data type	Flags
9, 49, 89, 129, 169	Output x-y	Preset 1	1 Bit – 1.022 DPT_Scene_AB	C, R, W
<p>This object is activated if the Preset has value Active with preset 1-level object or Active with preset 2-level objects. With this object, several outputs can be set to a configurable predefined status. Object value:</p> <ul style="list-style-type: none"> - If the object receives value "0", the values of the parameters for Preset 1 = "0" are used. - If the object receives value "1", the values of the parameters for Preset 1 = "1" are used. <p>For further information, see: Preset Shutter</p>				

No.	Description	Function of the object	Data type	Flags
10, 50, 90, 130, 170	Output x-y	Preset 2	1 Bit – 1.022 DPT_Scene_AB	C, R, W
<p>This object is activated if the Preset parameter has value Active with preset 2-level objects. See object No. 9</p>				

No.	Description	Function of the object	Data type	Flags
11, 51, 91, 131, 171	Output x-y	Preset 1 authorization	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Preset authorization objects parameter is active</p> <p>This object makes it possible to activate or deactivate the Preset 1 function of the device via the KNX bus.</p> <p>Object value: this is dependent on the Polarity of Preset 1 authorization object parameter.</p> <p>0 = Locked-up, 1 = Authorized:</p> <ul style="list-style-type: none"> - If the object receives the value "0", Preset 1 is deactivated. - If the object receives the value "1", Preset 1 is activated. <p>0 = Authorized, 1 = Locked-up:</p> <ul style="list-style-type: none"> - If the object receives the value "0", Preset 1 is activated. - If the object receives the value "1", Preset 1 is deactivated. <p>For further information, see: Preset Shutter</p>				

No.	Description	Function of the object	Data type	Flags
12, 52, 92, 132, 172	Output x-y	Preset 2 authorization	1 Bit – 1.003 DPT_Enable	C, R, W
See object No. 11				

4.3.5 Lock-up

No.	Description	Function of the object	Data type	Flags
13, 53, 93, 133, 173	Output x-y	Lock-up 1	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Lock-up has value Active with 1 lock-up object or Active with 2 lock-up objects.</p> <p>This object is used to control the activation of the lock-up via the KNX bus.</p> <p>Object value: this is dependent on the Polarity of lock-up object 1 parameter.</p> <p>0 = Lock-up activated, 1 = Lock-up deactivated:</p> <ul style="list-style-type: none"> - If the object receives value "0", the lock-up is activated. - If the object receives value "1", the lock-up is deactivated. <p>0 = Lock-up deactivated, 1 = Lock-up activated:</p> <ul style="list-style-type: none"> - If the object receives value "0", the lock-up is deactivated. - If the object receives value "1", the lock-up is activated. <p>For further information, see: Lock-up Shutter</p>				

No.	Description	Function of the object	Data type	Flags
14, 54, 94, 134, 174	Output x-y	Lock-up 2	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Lock-up parameter has value Active with 2 lock-up objects.</p> <p>See object No. 13</p>				

No.	Description	Function of the object	Data type	Flags
15, 55, 95, 135, 175	Output x-y	Status indication lock-up	1 Bit – 1.011 DPT_Switch	C, R, T
<p>This object is activated when the Activation of lock-up status object parameter is active This object allows the status of the lock-up to be sent from the device over the KNX bus. Object value: depends on the Polarity parameter.</p> <ul style="list-style-type: none"> - 0 = Lock-up deactivated, 1 = Lock-up activated: If the lock-up is deactivated, a telegram with logic value "0" will be sent on the KNX bus. - If the lock-up is activated, a telegram with logic value "1" is sent on the KNX bus. - 0 = Lock-up activated, 1 = Lock-up deactivated: If the lock-up is activated, a telegram with logic value "0" is sent on the KNX bus. - If the lock-up is deactivated, a telegram with logic value "1" is sent on the KNX bus. <p>This object is sent periodically and/or on status change. For further information, see: Lock-up Shutter</p>				

4.3.6 Priority

No.	Description	Function of the object	Data type	Flags																	
16, 56, 96, 136, 176	Output x-y	Priority	2 Bit – 2.002 DPT_Bool_Control	C, R, W																	
<p>This object is activated if the Priority parameter is active. The status of the output contact is determined directly by this object. Details on the format of the object are given below.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2">Telegram received by the priority operation object</th> <th rowspan="2">Status of the outputs</th> </tr> <tr> <th>Bit 1</th> <th>Bit 2</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>End of the priority</td> </tr> <tr> <td>0</td> <td>1</td> <td>End of the priority</td> </tr> <tr> <td>1</td> <td>0</td> <td>Priority OFF</td> </tr> <tr> <td>1</td> <td>1</td> <td>Priority ON</td> </tr> </tbody> </table> <p>The first bit of this object (Bit 0) determines the status of the output contact, which should be priority controlled. The second bit activates or deactivates the Priority. For further information, see: Priority Shutter</p>					Telegram received by the priority operation object		Status of the outputs	Bit 1	Bit 2	0	0	End of the priority	0	1	End of the priority	1	0	Priority OFF	1	1	Priority ON
Telegram received by the priority operation object		Status of the outputs																			
Bit 1	Bit 2																				
0	0	End of the priority																			
0	1	End of the priority																			
1	0	Priority OFF																			
1	1	Priority ON																			

No.	Description	Function of the object	Data type	Flags
17, 57, 97, 137, 177	Output x-y	Status indication priority	1 Bit – 1.011 DPT_Switch	C, R, T
<p>This object is activated if the Activation of priority status object parameter is active This object allows the status of the Priority to be sent from the device on the KNX bus. Object value: depends on the Polarity parameter.</p> <p>0 = Not forced, 1 = Forced:</p> <ul style="list-style-type: none"> - If Priority is deactivated, a telegram is sent with logic value "0". - If Priority is activated, a telegram is sent with logic value "1". <p>0 = Forced, 1 = Not forced:</p> <ul style="list-style-type: none"> - If Priority is activated, a telegram is sent with logic value "0". - If Priority is deactivated, a telegram is sent with logic value "1". <p>This object is sent periodically and/or on status change. For further information, see: Priority Shutter</p>				

4.3.7 Alarm

No.	Description	Function of the object	Data type	Flags
18, 58, 98, 138, 178	Output x-y	Alarm 1	1 Bit – 1.005 DPT_Alarm	C, R, W
<p>This object is only visible if the Alarm parameter has the following value: 1 alarm object or 2 alarm objects or 3 alarm objects.</p> <p>This object is used to switch the output back to the predefined settings.</p> <p>Object value:</p> <ul style="list-style-type: none"> - If the object receives the value "0", the alarm is not activated. - If the object receives the value "1", the alarm is activated. <p>For further information, see: Alarm</p>				

No.	Description	Function of the object	Data type	Flags
19, 59, 99, 139, 179	Output x-y	Alarm 2	1 Bit – 1.005 DPT_Alarm	C, R, W
See object No. 18				

No.	Description	Function of the object	Data type	Flags
20, 60, 100, 140, 180	Output x-y	Alarm 3	1 Bit – 1.005 DPT_Alarm	C, R, W
See object No. 18				

No.	Description	Function of the object	Data type	Flags
21, 61, 101, 141, 181	Output x-y	Status indication Alarm	1 Bit – 1.011 DPT_State	C, R, T
<p>This object is activated when the Alarm status object parameter is active. This object allows the status of the alarm angle to be sent over the KNX bus. Object value: This depends on the Polarity parameter.</p> <p>0 = Alarm deactivated, 1 = Alarm activated</p> <ul style="list-style-type: none"> - If all the alarms are deactivated, a telegram with logic value "0" is sent on the KNX bus. - If one of the three alarms is activated, a telegram with logic value "1" is sent on the KNX bus <p>0 = Alarm activated, 1 = Alarm deactivated</p> <ul style="list-style-type: none"> - If one of the three alarms is activated, a telegram with logic value "0" is sent on the KNX bus - If all the alarms are deactivated, a telegram with logic value "1" is sent on the KNX bus. <p>This object is sent periodically and/or on status change. For further information, see: Alarm</p>				

4.3.8 Sun protection

No.	Description	Function of the object	Data type	Flags
22, 62, 102, 142, 182	Output x-y	Sun protection position in %	1 Byte – 5.001 DPT_Scaling	C, R, W
<p>This object is only visible if the Sun protection type parameter has the following value: Position and Slat angle object or Position object only.</p> <p>This object is used for positioning the shutter or blind at the desired height, in response to the value sent on the KNX bus. As a general rule, this object is connected with an external device, which sends a position value to the shutter or blind in response to the elevation of the sun. Object value: 0 to 255</p> <ul style="list-style-type: none"> - 0 (0%): Upper position - 255 (100%): Lower position <p>For further information, see: Sun protection</p>				

No.	Description	Function of the object	Data type	Flags
23, 63, 103, 143, 183	Output x-y	Slat angle (0-100 %)	1 Byte – 5.001 DPT_Scaling	C, R, W
<p>This object is only visible if the Sun protection type parameter has the following value: Position and Slat angle object or Slat angle objects only.</p> <p>This object is used to position the shutter or blind in response to the value that is sent on the KNX bus.</p> <p>As a general rule, this object is connected with an external device, which sends a slat angle value to the blind in response to the elevation of the sun.</p> <p>Object value: 0 to 255</p> <ul style="list-style-type: none"> - 0 (0 %): Slats open - 255 (100 %): Slats closed <p>For further information, see: Sun protection</p>				

No.	Description	Function of the object	Data type	Flags
24, 64, 104, 144, 184	Output x-y	Sun protection authorization	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Sun protection authorization object parameter is active</p> <p>This object allows the sun protection status of the alarm function of the device to be activated or deactivated over the KNX bus.</p> <p>Object value: This depends on the Polarity parameter.</p> <p>0 = Locked-up, 1 = Authorized:</p> <ul style="list-style-type: none"> - If the object receives the value "0", the sun protection is deactivated. - If the object receives the value "1", the sun protection is activated. <p>0 = Authorized, 1 = Locked-up:</p> <ul style="list-style-type: none"> - If the object receives the value "0", the sun protection is activated. - If the object receives the value "1", the sun protection is deactivated. <p>For further information, see: Sun protection</p>				


No.	Description	Function of the object	Data type	Flags
25, 65, 105, 145, 185	Output x-y	Sun protection reactivation	1 Bit – 1.003 DPT_Enable	C, R, W
<p>This object is activated if the Deactivate sun protection by local control parameter is active.</p> <p>This object is used to reactivate the sun protection of the device after a lock-up or at the end of a time-limited function, over the KNX Bus.</p> <p>Object value:</p> <ul style="list-style-type: none"> - If the object receives the value "1", the sun protection is reactivated. <p>For further information, see: Sun protection</p>				

No.	Description	Function of the object	Data type	Flags
26, 66, 106, 146, 186	Output x-y	Sun protection status	1 Bit – 1.011 DPT_State	C, R, T
<p>This object is activated when the Sun protection status object parameter is active. This object allows the status of the sun protection to be sent over the KNX bus. Object value: This depends on the Polarity parameter.</p> <p>0 = Authorized, 1 = Locked-up - If the sun protection is deactivated, a telegram with logic value "1" is sent on the KNX bus. - If the sun protection is activated, a telegram with logic value "0" is sent on the KNX bus.</p> <p>0 = Locked-up, 1 = Authorized - If the sun protection is activated, a telegram with logic value "1" is sent on the KNX bus. - If the sun protection is deactivated, a telegram with logic value "0" is sent on the KNX bus.</p> <p>This object is sent periodically and/or on status change. For further information, see: Sun protection</p>				


5 Appendix

5.1 Specifications


7531 41 13 / 14 / 15 / 16

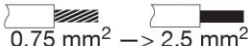Supply voltage	30 V DC SELV
Power dissipation	1 W (4x4A), 3 W (4x10A), 8 W (4x16A)
Typical consumption on the KNX bus	4 mA
Standby consumption on the KNX bus	3,3 mA
Dimensions	4 x 17,5 mm
Operating temperature	-5 °C → + 45 °C
Storage temperature	-20 °C → + 70 °C
Electrical connection	 0,75 mm ² → 2,5 mm ²
Breaking capacity	μ230V~ 4A AC1 (TYA604A) μ230V~ 10A AC1 (TYA604B) μ230V~ 16A AC1 (TYA604C/D)
Maximum permissible current per device (sum C1...C4)	max. 16 A (TYA604A), max. 30 A (TYA604B), max. 45 A (TYA604C/D)
Maximum switching rate at full load	6 switching cycles/minute
Installation mode	DIN rail
Operating altitude	< 2000 m
Pollution level	2
Surge voltage	4 kV
Protection rating	IP 20 (housing) / IP30 (housing under faceplate)
IK	04
Overvoltage category	III
Standard	EN50491-3 ; EN60669-2-1


7531 61 02 / 03 / 04 / 05

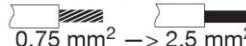



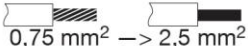

Supply voltage	30 V DC SELV
Power dissipation	1 W (6x4A), 5 W (6x10A), 12 W (6x16A)
Typical consumption on the KNX bus	4,3 mA
Standby consumption on the KNX bus	3,3 mA
Dimensions	4 x 17,5 mm
Operating temperature	-5 °C → + 45 °C
Storage temperature	- 20 °C → + 70 °C
Electrical connection	 0,75 mm ² → 2,5 mm ²
Breaking capacity	μ230V~ 4A AC1 (TYA606A) μ230V~ 10A AC1 (TYA606B) μ230V~ 16A AC1 (TYA606C/D)
Maximum permissible current per device (sum C1...C6)	max.24 A (TYA606A), max. 45 A (TYA606B), max. 60 A (TYA606C/D)
Maximum switching rate at full load	6 switching cycles/minute
Installation mode	DIN rail
Operating altitude	< 2000 m
Pollution level	2
Surge voltage	4 kV
Protection rating	IP 20 (housing) / IP30 (housing under faceplate)
IK	04
Overvoltage category	III
Standard	EN50491-3 ; EN60669-2-1

7531 81 02 / 03 / 04 / 05

Supply voltage	30 V DC SELV
Power dissipation	2 W (8x4A), 6 W (8x10A), 12 W (6x16A)
Typical consumption on the KNX bus	15,2 mA
Standby consumption on the KNX bus	8,6 mA
Typical consumption KNX bus with the mains	2 mA
Standby consumption KNX bus with the mains	2 mA
Dimensions	6 x 17,5 mm
Operating temperature	-5 °C → + 45 °C
Storage temperature	- 20 °C → + 70 °C
Electrical connection	 0,75 mm ² → 2,5 mm ²
Breaking capacity	μ230V~ 4A AC1 (TYA608A) μ230V~ 10A AC1 (TYA608B) μ230V~ 16A AC1 (TYA608C/D)
Maximum permissible current per device (sum C1...C8)	max. 32A (TYA608A), max. 60A (TYA608B), max. 80A (TYA608C/D)
Maximum switching rate at full load	6 switching cycles/minute
Installation mode	DIN rail
Operating altitude	< 2000 m
Pollution level	2
Surge voltage	4 kV
Protection rating	IP 20 (housing) / IP30 (housing under faceplate)
IK	04
Overvoltage category	III
Standard	EN50491-3 ; EN60669-2-1

7531 90 00 / 01 / 02 / 03

Supply voltage	30 V DC SELV
Power dissipation	3 W (10x4A), 7 W (6x10A), 15 W (6x16A)
Typical consumption on the KNX bus	15,9 mA
Standby consumption on the KNX bus	7,5 mA
Dimensions	4 x 17,5 mm
Operating temperature	-5 °C → + 45 °C
Storage temperature	- 20 °C → + 70 °C
Electrical connection	 0,75 mm ² → 2,5 mm ²
Breaking capacity	μ230V~ 4A AC1 (TYA610A) μ230V~ 10A AC1 (TYA610B) μ230V~ 16A AC1 (TYA610C/D)
Maximum permissible current per device (sum C1...C10)	max. 16 A (TYA610A), max. 30 A (TYA610B), max. 45 A (TYA610C/D)
Maximum switching rate at full load	6 switching cycles/minute
Installation mode	DIN-rail
Operating altitude	< 2000 m
Pollution level	2
Surge voltage	4 kV
Protection rating	IP 20 (housing) / IP30 (housing under faceplate)
IK	04
Overvoltage category	III
Standard	EN50491-3 ; EN60669-2-1

Load type			7531 41 13	7531 41 14	7531 41 15	7531 41 16
			7531 61 02	7531 61 03	7531 61 04	7531 61 05
			7531 81 02	7531 81 03	7531 81 04	7531 81 05
			7531 90 00	7531 90 01	7531 90 02	7531 90 03
	230 V~	Incandescent lamps	800 W	1200 W	2300 W	2300 W
	230 V~	Halogen lamps	800 W	1200 W	2300 W	2300 W
	12V ~ 24V DC	Conventional transformer	800 W	1200 W	1600 W	1600 W
	12V DC 24V DC	Electronic transformer	800 W	1000 W	1200 W	1200 W
	230 V~	Fluorescent tubes non compensated	800 W	1000 W	1200 W	1200 W
		Fluorescent tubes for electronic ballast (mono or duo)	12 x 36 W	15 x 36 W	20 x 36 W	20 x 36 W
		Parallel compensated fluorescent tubes				1500 W 200 µF
	230 V~	Compact fluorescent	6 x 23 W	12 x 23 W	18 x 23 W	18 x 23 W

5.2 Table of logical operations

Input 4	Input 3	Input 2	Input 1	OR	AND
-	-	0	0	0	0
-	-	0	1	1	0
-	-	1	0	1	0
-	-	1	1	1	1
-	0	0	0	0	0
-	0	0	1	1	0
-	0	1	0	1	0
-	0	1	1	1	0
-	1	0	0	1	0
-	1	0	1	1	0
-	1	1	0	1	0
-	1	1	1	1	1
0	0	0	0	0	0
0	0	0	1	1	0
0	0	1	0	1	0
0	0	1	1	1	0
0	1	0	0	1	0
0	1	0	1	1	0
0	1	1	0	1	0
0	1	1	1	1	0
1	0	0	0	1	0
1	0	0	1	1	0
1	0	1	0	1	0
1	0	1	1	1	0
1	1	0	0	1	0
1	1	0	1	1	0
1	1	1	0	1	0
1	1	1	1	1	1

5.3 Characteristics

Product	7531 41 13 / 14 / 15 / 16	7531 61 02 / 03 / 04 / 05	7531 81 02 / 03 / 04 / 05	7531 90 00 / 01 / 02 / 03
Max. number of group addresses	254	254	254	254
Max. number of allocations	255	255	255	255
Objects	113	153	193	233

Berker GmbH & Co. KG
Klagebach 38
58579 Schalksmühle/Germany
Telefon + 49 (0) 2355/905-0
Telefax + 49 (0) 2355/905-111
www.berker.de